


TECHNICAL MANUAL

---

**OPERATOR'S, ORGANIZATIONAL,  
DIRECT SUPPORT AND GENERAL SUPPORT  
INSTRUCTIONS  
MAINTENANCE MANUAL  
(INCLUDING REPAIR PARTS INFORMATION AND  
SUPPLEMENTAL MAINTENANCE AND REPAIR PARTS  
INSTRUCTIONS)**

**OPERATING  
INSTRUCTIONS**

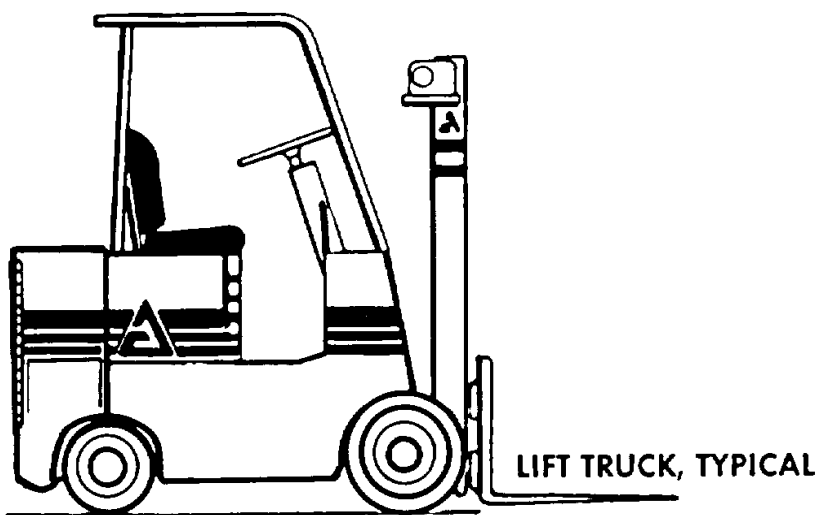

**MAINTENANCE  
INSTRUCTIONS**

**REPAIR  
INSTRUCTIONS**

**TRUCK, FORK LIFT  
GASOLINE ENGINE DRIVEN, 4,000 LB.CAPACITY,**

**SUPPLEMENTAL OPERATING  
MAINTENANCE AND REPAIR  
PARTS INSTRUCTIONS**

**ALLIS-CHALMERS  
MODEL ACP-40-PS     MHE 234  
NSN 3930-01-040-4594  
(144" LIFT HEIGHT & PNEUMATIC TIRES)  
MODEL ACC-40-PS     MHE 232  
NSN 3930-01-039-8291  
(144" LIFT HEIGHT & SOLID RUBBER TIRES)  
NSN 3930-01-039-8292  
(180" LIFT HEIGHT & SOLID RUBBER TIRES)**

**PARTS LIST**

**OPERATOR, ORGANIZATIONAL,  
DIRECT SUPPORT AND GENERAL SUPPORT  
MAINTENANCE MANUAL**  
**(Including Repair Parts Information and  
Supplemental Maintenance and Repair Parts  
Instructions)**

TRUCK, FORK LIFT, 4,000 LB.CAPACITY  
GASOLINE ENGINE DRIVEN (Allis Chalmers)  
MODEL ACP-40-PS MHE 234  
NSN 3930-01-040-4594  
(144" LIFT HEIGHT & PNEUMATIC TIRES)  
MODEL ACC-40-PS MHE 232  
NSN 3930-01-039-8291  
(144" LIFT HEIGHT & SOLID RUBBER TIRES)  
NSN 3930-01-039-8292  
(180" LIFT HEIGHT & SOLID RUBBER TIRES)

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Tank-Automotive Command, Warren, MI 48090, ATTN: DRSTA-MBS. A reply will be furnished to you.

**TABLE OF CONTENTS**

	<u>PAGE</u>
CHAPTER I <b>OPERATING INSTRUCTIONS</b> .....	1-1
CHAPTER I INDEX.....	1-1C
GENERAL DESCRIPTION.....	1-1E
PREPARING A NEW TRUCK FOR SERVICE .....	1-3
OPERATING CONTROLS .....	1-4
OPERATION OF LIFT TRUCK .....	1-7
BATTERY .....	1-14
LUBRICANT SPECIFICATIONS .....	1-15
LUBRICANT AND SERVICE .....	1-17
CHAPTER II <b>MAINTENANCE INSTRUCTIONS</b> .....	2-1
MAINTENANCE INDEX.....	2-1A
ENGINE	
DESCRIPTION AND SPECIFICATIONS .....	2-1B

VALVE ADJUSTMENT .....	2-4
OIL FILTER.....	2-5
OIL PRESSURE RELIEF VALVE .....	2-5
ENGINE TUNE- UP.....	2-6
TROUBLESHOOTING CHART.....	2-11

FUEL SYSTEM

FUEL SYSTEM (PRT) .....	2-16
AIR CLEANER (PRT) .....	2-18
AIR CLEANER (SRT) .....	2-18A
FUEL TANK .....	2-19
FUEL PUMP AND FILTER.....	2-19
CARBURETOR.....	2-20
ACCELERATOR LINKAGE.....	2-21
GOVERNOR.....	2-22

ELECTRIC SYSTEM

ELECTRICAL SYSTEM.....	2-23
BATTERY .....	2-24
ALTERNATOR AND REGULATOR .....	2-25
STARTER MOTOR .....	2-27
ELECTRICAL WIRING .....	2-28
HORN AND HORN RELAY.....	2-29
IGNITION COIL.....	2-30
DISTRIBUTOR.....	2-32
INSTRUMENT PANEL.....	2-35

COOLING SYSTEM

COOLING SYSTEM .....	2-39
RADIATOR.....	2-41
WATER PUMP.....	2-43
THERMOSTAT.....	2-45
FAN AND FAN BELT.....	2-47

TRANSMISSION

TRANSMISSION .....	2-49
POWER SHIFT TRANSMISSION CHECKOUT PROCEDURES....	2-53
SHIFTING MECHANISM.....	2-56
OIL COOLER .....	2-58
OIL FILTER.....	2-59
UNIVERSAL JOINT.....	2-61

DRIVE AXLE

DRIVE AXLE.....	2-63
HYDRAULIC BRAKES .....	2-69
DIFFERENTIAL .....	2-69
DRIVE WHEEL PNEUMATIC TIRES (PRT ONLY) .....	2-73

BRAKE SYSTEM

BRAKES.....2-75  
 MASTER CYLINDER.....2-76  
 DRIVE WHEEL BRAKES.....2-77  
 PARKING BRAKE.....2-78

POWER STEERING SYSTEM

STEERING .....2-79  
 STEER AXLE.....2-80  
 STEERING WHEEL AND COLUMN.....2-82  
 DRAG LINK .....2-82  
 TIE ROD.....2-83  
 POWER STEER CYLINDER.....2-83  
 WHEELS AND TIRES.....2-83A

HYDRAULIC SYSTEM

HYDRAULIC SYSTEM SERVICE.....2-85

COUNTERWEIGHT AND FRAME .....2-91

COUNTERWEIGHT AND FRAME.....2-91  
 COUNTERWEIGHT.....2-91  
 BODY COMPONENTS .....2-94  
 OVERHEAD GUARD.....2-96

HIGH FREE LIFT MAST

GENERAL.....2-97  
 MAST ASSEMBLY .....2-98  
 LIFT CYLINDERS .....2-99

CARRIAGES, SIDESHIFTER AND FORKS

CARRIAGE.....2-101  
 SIDESHIFTER (PRT ONLY) .....2-103  
 FORKS.....2-104

TROUBLESHOOTING CHARTS

FUEL SYSTEM.....2-105  
 COOLING SYSTEM .....2-107  
 HYDRAULIC SYSTEM .....2-108  
 DRIVE UNIT.....2-109  
 HYDRAULIC BRAKE SYSTEM.....2-110  
 POWER STEERING SYSTEM.....2-111  
 MAST HYDRAULIC SYSTEM .....2-112  
 POWER SHIFT TRANSMISSION.....2-113  
 ELECTRICAL SYSTEM.....2-114

LUBRICANT AND FUEL SPECIFICATIONS

LUBRICANT SPECIFICATIONS.....2-116  
 FUEL SPECIFICATIONS .....2-117

	LUBRICATION CHART.....	2-119
CHAPTER III	<b>REPAIR INSTRUCTIONS</b> .....	3-1
	REPAIR INDEX.....	3-1A
	<b>ENGINE ASSEMBLY</b>	
	FITS AND TOLERANCES.....	3-1B
	ENGINE SERVICE AND MAINTENANCE .....	3-4
	MANIFOLD.....	3-5
	VALVES, INTAKE AND EXHAUST.....	3-7
	CYLINDER HEAD.....	3-13
	CRANKSHAFT AND CRANKSHAFT COMPONENTS .....	3-15
	FLYWHEEL AND HOUSING.....	3-23
	PISTON AND CONNECTING RODS .....	3-27
	CAMSHAFT, CAMSHAFT BEARINGS, AND VALVE TAPPETS ....	3-33
	GEAR TRAIN.....	3-35
	CYLINDER BLOCK .....	3-39
	OIL PUMP .....	3-43
	OIL PRESSURE RELIEF VALVE .....	3-45
	FILLER BLOCKS AND OIL GUARD.....	3-46
	OIL PAN.....	3-48
	ENGINE RUN-IN SCHEDULE .....	3-49
	ENGINE REMOVAL/INSTALLATION.....	3-50
	<b>FUEL SYSTEM</b>	
	FUEL SYSTEM.....	3-53
	FUEL TANK .....	3-55
	FUEL PUMP AND FUEL FILTER .....	3-57
	CARBURETOR (TYPE II) (PRT) .....	3-59
	CARBURETOR (SRT).....	3-66
	ACCELERATOR LINKAGE.....	3-67
	GOVERNOR.....	3-69
	AIR CLEANER (PRT) .....	3-70
	<b>ELECTRICAL SYSTEM</b>	
	BATTERY.....	3-71
	ALTERNATOR.....	3-81
	STARTER MOTOR.....	3-91
	DISTRIBUTOR (TYPE II).....	3-98
	<b>COOLING SYSTEM</b>	
	COOLING SYSTEM DESCRIPTION.....	3-103
	WATER PUMP.....	3-105
	RADIATOR.....	3-109
	EXHAUST SYSTEM .....	3-113
	<b>TRANSMISSION</b>	
	TRANSMISSION.....	3-115

TORQUE CONVERTER AND PUMP .....	3-125
DRUM ASSEMBLY .....	3-127
CONTROL VALVE .....	3-129
UNIVERSAL JOINT .....	3-131
DRIVE AXLE	
DRIVE AXLE .....	3-135
DIFFERENTIAL .....	3-142
DRIVE WHEEL PNEUMATIC TIRES (PRT) .....	3-146
BRAKE SYSTEM	
DRIVE WHEEL BRAKES .....	3-147
MASTER CYLINDER .....	3-151
WHEEL CYLINDERS .....	3-153
PARKING BRAKE .....	3-153
BLEEDING THE BRAKE SYSTEM .....	3-155
POWER STEERING SYSTEM	
GENERAL DESCRIPTION .....	3-157
STEER AXLE .....	3-157
STEERING VALVE UNIT .....	3-163
STEERING CYLINDER AND DRAG LINK .....	3-171
TIE RODS .....	3-175
STEER WHEELS (PRT) .....	3-176
STEER WHEELS (SRT) .....	3-178a
HYDRAULIC SYSTEM	
HYDRAULIC PUMP .....	3-179
CONTROL VALVE .....	3-182
TILT CYLINDER .....	3-185
MASTS, CARRIAGES AND FORKS	
MASTS .....	3-189
LIFT CYLINDERS .....	3-192
CARRIAGES .....	3-195
FORK .....	3-197
WELDING REPAIR PROCEDURE .....	3-199
SIDE SHIFTERS .....	3-201
HOSE REEL .....	3-204
SUPPLEMENTAL OPERATING, MAINTENANCE AND REPAIR PARTS INSTRUCTIONS .....	i
GENERAL .....	1
MAINTENANCE .....	3
REPAIR PARTS SUPPLY .....	5

APPENDIX A-L.....8

    WARRANTY .....8

    ASL/PLL .....9

    MAC.....10

    MEL CHART.....25

    MAOSL.....26

    MAINTENANCE OF NEW VEHICLE.....28

    PREVENTIVE MAINTENANCE CHECKS AND SERVICES  
    (PMCS).....30

    BASIC ISSUE ITEMS LIST .....42

    DISTRIBUTION CODES .....44

    FLOW OF REQUISITIONS AND MATERIEL PARTS, NSN.....47

    FLOW OF REQUISITIONS AND MATERIEL PARTS, NON-  
    NSN .....48

    SAMPLE REQUISITIONING FORMATS .....49

**PARTS LIST** .....i

    BASE UNIT INDEX.....ii

    FSCN INDEX.....iii

    PART NUMBER LIST.....A

ILLUSTRATIONS.....1A

"This technical manual is an authentication of the manufacturer's commercial literature and does not conform with the format and content specified in AR 310-3, Military Publications. The technical manual does, however, contain available information that is essential to the operation and maintenance of the equipment."

## ILLUSTRATIONS

	<u>PAGE</u>
Accelerator .....	45
Accelerator Pedal and Cable .....	45b
Air Cleaner (PRT) .....	43
Air Cleaner (PRT Model No. 113217).....	43a
Air Cleaner (SRT) .....	43c
Alternator .....	47
Alternator Assembly.....	49, 49a
Battery .....	67
Battery Tray.....	69
Brake Master Cylinder.....	97
Brake Pedal.....	95
Carburetor.....	39
Carriage Backrest .....	185
Clutch Assemble Forward and Reverse.....	79
Control Valve.....	135
Counterweight .....	143
Cowl .....	143b
Crankcase Ventilation .....	11
Crankshaft.....	5
Cross Tie.....	161
Cylinder Assembly .....	190
Cylinder Block .....	1-B
Cylinder Head.....	9
Deck.....	155, 155b
Differential Assembly .....	90b
Differential Carrier.....	89
Distributor.....	55
Distributor Assembly .....	57
Drive Axle.....	87
Drive Wheel.....	93, 93b
Drive Wheel Brakes .....	99, 99b
Engine Mounting.....	35
Exhaust Group (PRT) .....	33
Exhaust Group (SRT) .....	33b
Floor Plate Power Shift.....	145
Flywheel and Housing Power Shift .....	21
Fork Components .....	186
Front Screen.....	163, 163b
Fuel Strainer.....	37f
Fuel System (PRT).....	37
Fuel System (SRT).....	37b
Gear Cover.....	23
Headlight and Connections.....	64
Horn Group .....	63
Hose Group.....	194
Hose Reel Assembly.....	192



	<u>PAGE</u>
Hydraulic Adaption.....	195
Hydraulic Filter.....	131
Hydraulic Pump .....	125, 127
Inching Control (PRT).....	83
Inching Control (SRT).....	83b
Instrument Panel Assembly .....	61
Instrument Panel and Connections.....	59
Intake and Exhaust Manifold.....	25
Junction Block.....	193
Lift Assembly - 180" (Tri-Max).....	165
Lift Assembly - 144" (Tri-Max).....	169
Lift Cylinder .....	180
Lift Cylinder Cluster - 144", 180" .....	173
Lift Cylinder Cluster.....	183
Main Hydraulics.....	123
Mast Assembly .....	177
Mast Mounting .....	159
Oil Filter .....	19
Oil Pan.....	17, 17A
Oil Pump.....	15
Overhead Guard.....	149
Parking Brake Assembly .....	91
Parking Brake Lever.....	103
Piston and Connecting Rod .....	7
Plunger Section Assembly - Lift .....	137
Plunger Section Assembly - Side Shift.....	141
Plunger Section Assembly - Tilt,/ACC.....	139
Power Steer Cylinder .....	117
Power Steering Linkage.....	115
Radiator - Power Shift .....	31
Reel Group - R.H.....	191
Reservoir.....	129, 129a
Seat.....	151
Seat Assembly .....	153
Shifting Assembly - Power Shift .....	109
Side Panel.....	157
Side Shift Carriage.....	189
Starter.....	51
Starter Assembly .....	52a, 53a
Steer Axle .....	105
Steer Unit .....	113
Steer Wheel .....	117e, 119
Steering Hydraulics .....	121
Stop and Tail Light .....	65
Thermostat and Housing .....	29
Tilt Cylinder and Connections .....	133
Toe Plate - Power Shift .....	147, 147b
Transmission Assembly .....	73
Transmission Filter .....	81
Transmission - Power Shift .....	71
Transmission Valve Assembly .....	77
Universal Joint - P/S .....	85
Valve Mechanism .....	13

PAGE

Water Pump and .....	27
Wheel Cylinder .....	101
Yoke Assembly.....	117c