

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LIST**

**ENGINE, DIESEL, V-12 (DETROIT)
INSTALLED IN LANDING CRAFT,
MECHANIZED (LCM-8)
(ROHR AND GUNDERSON MODELS)
NSN 2815-01-018-0637**

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

26 March 1990

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 26 March 1990

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST
FOR
ENGINE, DIESEL, V-12 (DETROIT)
INSTALLED IN LANDING CRAFT, MECHANIZED (LCM-8)
(ROHR AND GUNDERSON MODELS)
NSN 2815-0118-0637
Current as of 12 March, 1990**

Authorized for public release; distribution is unlimited.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Blvd, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTENTS

		Page	Figure
Section I.	INTRODUCTION	1	
Section II.	REPAIR PARTS LIST	1-1	
Group 0100	Engine	1-1	1
Group 0101	Marine Transmission	2-1	2
Group 010101	Marine Transmission Oil Lines.....	3-1	3
Group 010102	Top Power Take Off	4-1	4
Group 0102	Emergency System (Alarm Switches)	5-1	5
Group 0103	Governor	6-1	6
Group 0104	Air Silencer and Air Intake Housing.....	7-1	7

TABLE OF CONTENTS (Continued)

		Page	Figure
Group 0105	Blower.....	8-1	8
Group 0106	Fuel Pump	9-1	9
Group 0107	Fuel Filter, Fuel Lines	10-1	10
Group 0108	Fuel Injector.....	11-1	11
Group 010801	Injector Controls.....	12-1	12
Group 0109	Lubricating Oil Filters and Housing.....	13-1	13
Group 0110	Engine and Transmission Oil Coolers.....	14-1	14
Group 0111	Fresh Water Pump.....	15-1	15
Group 0112	Raw Water Pump.....	16-1	16
Group 0113	Water Connections and Water Bypass.....	17-1	17
Group 0114	Water Manifold	18-1	18
Group 0115	Thermostat and Housing.....	19-1	19
Group 0116	Expansion Tank.....	20-1	20
Group 0117	Tachometer Drive	21-1	21
Group 0118	Instrument Panel.....	22-1	22
Group 0119	Vibration Damper	23-1	23
Group 0120	Balance Weight Cover.....	24-1	24
Group 0121	Engine Supports, Lift Brackets and Crankshaft Front Cover.....	25-1	25
Group 0122	Exhaust Manifold and Fittings.....	26-1	26
Group 0123	Valve Rocker Arm Cover	27-1	27
Group 0124	Flywheel and Housing.....	28-1	28
Group 0125	Camshaft and Gear Train.....	29-1	29
Group 0126	Valve And Injector Operating Mechanism, Exhaust Valve.....	30-1	30

TABLE OF CONTENTS (Continued)

		Page	Figure
Group 0127	Cylinder Head	31-1	31
Group 0128	Oil Pan and Dipstick.....	32-1	32
Group 0129	Lube Oil Relief Valve and Regulator	33-1	33
Group 0130	Lube Oil Pump	34-1	34
Group 0131	Lube Oil Distribution System	35-1	35
Group 0132	Pistons, Connecting Rods and Liners	36-1	36
Group 0133	Crankshaft, Bearings and Seals	37-1	37
Group 0134	Accessory Drives	38-1	38
Group 0135	Ventilation Systems (Oil Breather)	39-1	39
Group 0136	Air Box Drains.....	40-1	40
Group 0137	Throttle Controls	41-1	41
Section III.	SPECIAL TOOLS LIST AND TEST MEASUREMENT/DIAGNOSTIC EQUIPMENT	42-1	42
Section IV.	CROSS REFERENCE INDEXES:		
	National Stock Number Index.....	I-1	
	Part Number Index.....	I-7	
	Figure and Item Number Index.....	I-28	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT
 MAINTENANCE REPAIR PARTS
 AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Diesel Engine (V-12), installed in the Landing Craft, Mechanized, (LCM-8), Rohr and Gunderson Models. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

