

TECHNICAL MANUAL

UNIT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

**TRUCK, FIRE FIGHTING,
1000 GPM MULTIPURPOSE,
MODEL 2500L**

NSN 4210-01-193-3621

Approved for public release. Distribution is unlimited.

**HEADQUARTERS DEPARTMENT OF THE ARMY
20 NOVEMBER 1987**

Unit Maintenance Repair Parts and Special Tools List

for

TRUCK, FIREFIGHTING
1000 GPM MULTIPURPOSE
MODEL 2500L NSN 4210-01-193-3621

Current as of 26 March 1992

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know; Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTENTS

		Page	Illus Figure
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
Group 00	Truck, Firefighting, 1000 GPM. Multipurpose		
Group 01	Front Bumper	1-1	1
Group 03	Heat Shields	3-1	3
Group 04	Cab	4-1	
	Windshield Wiper and Washer	4-1	4
	Engine Covers, Guards and Trim	5-1	5
	Cab Mirrors	5-1	5
	Cab Spotlights	5-1	5
	Siren and Glove Box	5-1	5
	Cab Door (Mounting)	6-1	6
	Cab Door (Outer)	6-1	6
	Cab Door (Inner)	6-1	6
	Cab Windows	7-1	7
	Cab Seats.....	8-1	8
	Cab heater	9-1	9
	Cab Heater Water Lines and Ducting	10-1	10
	Battery Housing	11-1	11

TABLE OF CONTENTS (Continued)

		Page	Illus Figure
Group 05	Pump Body	12-1	
	Pump Body Assembly	12-1	12
	Pump Panel Control Levers	13-1	13
	Pump Panel Instruments	14-1	14
Group 06	Hose Reel Assembly	15-1	15
	Wiring Harness Hose Reel	15-1	15
Group 07	Auxiliary Power Unit (APU)	16-1	
	APU Assembly	16-1	16
	APU Alternator	17-1	17
	Engine Starter and Flywheel Housing	18-1	18
	Engine Injector, Governor and Sump	19-1	19
	Engine Cylinder Head	20-1	20
Group 08	Engine Crankshaft	21-1	21
	Hose Body	22-1	
	Hose Body Trim (Rear)	22-1	22
	Hose Body Trim (Sides)	22-1	22
	Hose Body Matting	23-1	23
	Hose Body Doors (Left)	25-1	25
	Hose Body Doors (Right)	25-1	25
	Hose Body Front Panel	27-1	27
Group 09	Pump Drive	32-1	
	Pump Drive Shafts	32-1	32
	Pump Drive Gearbox	33-1	33
Group 10	Fire Pump, Water and Foam Piping	34-1	
	Fire Pump Volute Body	34-1	34
	Fire Pump Priming Valve	35-1	35
	Fire Pump Priming Pump	36-1	36
	Fire Pump Bearing Housing	40-1	40
	Water Tank Valve	41-1	41
	Water Piping	42-1	42
	Water Piping	43-1	43
	Water Piping	44-1	44
	Roof Turret	45-1	45
	Roof Turret (Nozzle Assembly)	45-1	45
	Bumper Turret	46-1	46
	Bumper Turret (Nozzle Assembly)	46-1	46
Group 11 and 12	Water and Foam Tank	49-1	49
Group 13	Winterization System	50-1	
	Winterization Fuel and Exhaust System	50-1	50
	Winterization Water Piping	51-1	51
	Winterization Electrical System	52-1	52
	Pump Body Heater	53-1	53
	Winterization Heater	54-1	54
	Winterization Heater (Blower)	54-1	54
Group 14	Radiator	55-1	
	Radiator Assembly	55-1	55
	Radiator Fan Drive Assembly	56-1	56
	Radiator Hoses	57-1	57

TABLE OF CONTENTS (Continued)

		Page	Illus Figure
Group 15	Exhaust System	58-1	
	Exhaust Muffler	58-1	58
	Exhaust System	59-1	59
Group 16	Air System	60-1	
	Air Compressor Governor	60-1	60
	Air Drier	61-1	61
	Foot Throttle	62-1	62
	Brake Pedal Plate	63-1	63
	Brake Pedal Assembly	64-1	64
	Air Horn	65-1	65
	Pressure Protection Valves	66-1	66
	Quick Release Valve	67-1	67
	Spring Brake Valve	68-1	68
	Relay Valve	69-1	69
	Air Schematic (Chassis)	70-1	70
	Air Schematic (Pump Body)	70-1	70
	Air Schematic (Engine)	70-1	70
Air Schematic (Cab)	70-1	70	
Group 17	Fuel System	71-1	
	Fuel Tank and Lines	71-1	71
	Fuel Tank and Lines (Engine)	71-1	71
	Fuel Priming Pump	72-1	72
	Water/Fuel Separator	73-1	73
	Air Filter	75-1	75
Group 18	Electrical System	76-1	
	12 VDC Alternator	76-1	76
	Engine Starter Motor	77-1	77
	Engine Starter Motor	77-1	77
	Electrical Components	78-1	78
	Cab Lights (Upper)	79-1	79
	Cab Lights (Lower)	80-1	80
	Hose Body Lights	81-1	81
	Hose Body Lights	82-1	82
	Engine Sender Units	83-1	83
	Engine and Transmission Sender Units	84-1	84
	Cab Instrument Dash Panel	85-1	85
	Cab Instrument Air Panel	86-1	86
	Cab Instrument Fold-Down Panel	87-1	87
	Cab Instrument Flashers and Relays	88-1	88
	1 10-VAC Alternator	89-1	89
	Wiring Harness, 12-Vdc (Pump Body)	90-1	90
	Wiring Harness, 12-Vdc (Hose Body)	90-1	90
	Wiring Harness, 12-Vdc (Cab Junction, Fire Package, PTO and Tank Valve)	90-1	90
	Wiring Harness, 12-Vdc (Engine)	90-1	90
Wiring Harness, 12-Vdc (Battery)	90-1	90	
Wiring Harness, 12-Vdc (Air Panel)	90-1	90	
Wiring Harness, 12-Vdc (Lower Cab)	90-1	90	
Wiring Harness, 12-Vdc (Upper Cab)	90-1	90	

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit maintenance of the Model 2500L Firefighting Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross-references NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

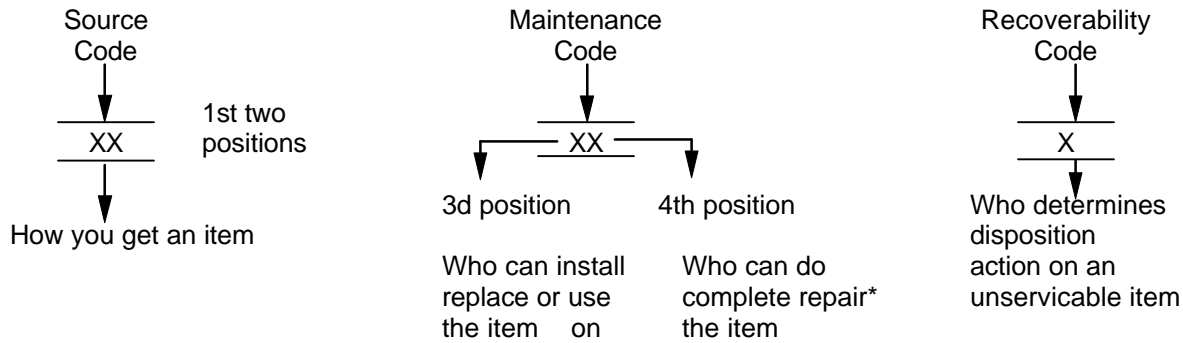

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

PA
PB
PC
PD
PE
PF
PG

Explanation

Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.

**NOTE: Items coded PC are subject to deterioration.

KD
KF
KB

Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.

MO—Made at org/
AVUM category
MF—Made at DS/
AVUM category
MH—Made at GS
category
ML—Made at
Specialized
Repair Activity
(SRA)
MD—Made at Depot

Explanation

Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.