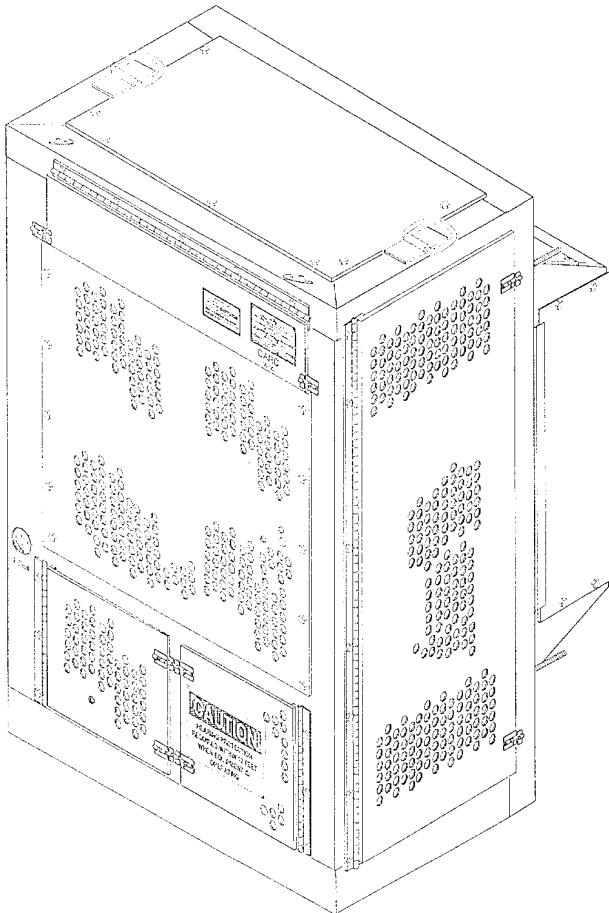


TECHNICAL MANUAL**OPERATOR'S, UNIT, DIRECT SUPPORT,
AND GENERAL SUPPORT MAINTENANCE MANUAL**

OPERATING INSTRUCTIONS	2-1
OPERATOR PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)	2-6
UNIT MAINTENANCE INSTRUCTIONS	4-1
UNIT PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)	4-9
UNIT TROUBLESHOOTING	4-34
DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5-1
GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	6-1
MAINTENANCE ALLOCATION CHART	B-1

**REFRIGERATION UNIT, MECHANICAL,
10K BTU, DIESEL
MODEL F10000RD**

(4110-01-389-9183)

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
26 AUGUST 1996**

TECHNICAL MANUAL

NO. 9-4110-257-14

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, D.C., **26 AUGUST 1996**

**OPERATOR'S, UNIT, DIRECT SUPPORT AND
 GENERAL SUPPORT MAINTENANCE MANUAL
 FOR
 REFRIGERATION UNIT, MECHANICAL,
 10K BTU, DIESEL
 MODEL F10000RD
 4110-01-389-9183**

Reporting of Errors**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <daf2028@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release, distribution is unlimited.

TABLE OF CONTENTS

	Page	
CHAPTER 1	INTRODUCTION	1-1
Section I	General Information.....	1-1
Section II	Equipment Description.....	1-3
Section III	Principles of Operation.....	1-5
CHAPTER 2	OPERATING INSTRUCTIONS	2-1
Section I	Description and Use of Operator's Controls and Indicators.....	2-1
Section II	Preventive Maintenance Checks and Services (PMCS)	2-6
Section III	Operation Under Usual Conditions	2-23
Section IV	Operation Under Unusual Conditions	2-29

TABLE OF CONTENTS - Continued

	Page	
CHAPTER 3	OPERATOR MAINTENANCE INSTRUCTIONS.....	3-1
Section I	Lubrication.....	3-1
Section II	Troubleshooting Procedures	3-1
Section III	Operator's Maintenance Procedures	3-5
CHAPTER 4	UNIT MAINTENANCE INSTRUCTIONS.....	4-1
Section I	Repair Parts, Tools, Special Tools, Test, Measurement, and Diagnostic Equipment (TMDE), and Support Equipment	4-1
Section II	Service Upon Receipt	4-1
Section III	Unit Preventive Maintenance Checks and Services (PMCS).....	4-9
Section IV	Troubleshooting Instructions.....	4-34
Section V	Unit Maintenance Instructions	4-38
Section VI	Preparation for Storage or Shipment.....	4-163
CHAPTER 5	DIRECT SUPPORT MAINTENANCE INSTRUCTIONS.....	5-1
Section I	Direct Support Troubleshooting Instructions	5-1
Section II	Direct Support Maintenance Instructions	5-3
CHAPTER 6	GENERAL SUPPORT MAINTENANCE INSTRUCTIONS.....	6-1
APPENDIX A	REFERENCES	A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART	B-1
Section I	Introduction.....	B-1
Section II	Maintenance Allocation Chart for Refrigeration Unit.....	B-5
Section III	Tool and Test Equipment Requirements for Refrigeration Unit.....	B-11
Section IV	Remarks for Refrigeration Unit.....	B-11
APPENDIX C	COMPONENTS OF END ITEM (COEI) AND BASIC ISSUE ITEMS (BII) LIST	C-1
Section I	Introduction.....	C-1
Section II	Components of End Item	C-1
Section III	Basic Issue Items List	C-2
APPENDIX D	ADDITIONAL AUTHORIZATION LIST	D-1
APPENDIX E	EXPENDABLE AND DURABLE ITEMS LIST	E-1
Section I	Introduction.....	E-1
Section II	Expendable and Durable Items List.....	E-2

TABLE OF CONTENTS - Continued

	Page
APPENDIX F ILLUSTRATED LIST OF MANUFACTURED ITEMS	F-1
Section I	F-1
Section II	F-1
APPENDIX G MANDATORY REPLACEMENT PARTS	G-1

LIST OF ILLUSTRATIONS

Figure	Title	Page
1-0	Refrigeration Unit	1-0
1-1	Major Components.....	1-4
1-2	Operating/Electrical System	1-6
1-3	Electrical Schematic.....	1-7
1-4	Electrical Wiring Diagram.....	1-8
1-5	Refrigeration System.....	1-10
1-6	Refrigeration Schematic.....	1-11
1-7	Air Handling System.....	1-12
2-1	Operating Controls and Indicators	2-3
2-2	Fault Controls and Indicators.....	2-5
2-3	Operator PMCS Routing Diagram (Sheet 1 of 2).....	2-8
2-3	Operator PMCS Routing Diagram (Sheet 2 of 2).....	2-9
2-4	Operator Controls and Indicators.....	2-24
2-5	Decals and Instruction Plates (Sheet 1 of 2).....	2-27
2-5	Decals and Instruction Plates (Sheet 2 of 2).....	2-28
4-1	Wall Opening Dimensions.....	4-2
4-2	Installation.....	4-3
4-3	Unit Preparation	4-4
4-4	Refrigeration Valve Settings for Normal Operation.....	4-7
4-5	Defrost Timer Adjustment	4-8
4-6	Lubrication (Sheet 1 of 2)	4-10
4-6	Lubrication (Sheet 2 of 2)	4-11
4-7	Top Panel	4-38
4-8	Condenser Side Doors and Barrel Bolts	4-40
4-9	Front Bottom Doors and Barrel Bolts.....	4-42
4-10	Control Panel Cover, Barrel Bolts, and Door Holder Clips	4-44
4-11	Evaporator Air Outlet Guard.....	4-45
4-12	Evaporator Coil Guard	4-46
4-13	Condenser Coil Guard	4-47
4-14	Wires Cables and Harnesses	4-49
4-15	Circuit Breaker	4-55
4-16	Lamp Assembly	4-57
4-17	Fuses	4-59
4-18	Control Relays	4-62
4-19	Time Delay Relay.....	4-63

LIST OF ILLUSTRATIONS - Continued

Figure	Title	Page
4-20	Hourmeter.....	4-66
4-21	Ammeter.....	4-68
4-22	Toggle Switch	4-70
4-23	Remote Bulb Thermostat (Temperature Control).....	4-73
4-24	Defrost Timer.....	4-77
4-25	Engine Speed Switch	4-79
4-26	Control Transformer T1.....	4-81
4-27	Refrigeration Temperature Gage (Thermometer)	4-84
4-28	Continuous Duty Solenoid.....	4-86
4-29	Battery	4-89
4-30	Temperature Switch	4-91
4-31	Push Switches.....	4-94
4-32	V-Belts	4-97
4-33	Condenser Fan	4-100
4-34	Evaporator Fan	4-102
4-35	Compressor Pulley.....	4-105
4-36	Engine Pulley.....	4-106
4-37	Idler Pulley.....	4-108
4-38	Flange Bearings.....	4-111
4-39	Fan Clutch	4-113
4-40	Solenoid Valve (Liquid Line).....	4-115
4-41	Solenoid Valve (Defrost Line).....	4-117
4-42	Oil Filter	4-119
4-43	Air Cleaner.....	4-121
4-44	Muffler	4-124
4-45	Engine Oil Pressure Switch	4-126
4-46	Engine Temperature Switch	4-128
4-47	Fuel Solenoid.....	4-131
4-48	Starting Motor	4-132
4-49	Fuel Filter.....	4-134
4-50	Voltage Regulator	4-136
4-51	Alternator Test Point	4-137
4-52	Glow Plug	4-139
4-53	Fuel Supply Hoses (Sheet 1 of 2)	4-141
4-53	Fuel Supply Hoses (Sheet 2 of 2)	4-142
4-54	Fuel Return Hoses	4-147
4-55	Engine Drain Hose	4-151
4-56	In-line Fuel Filter	4-153
4-57	Fuel Gage.....	4-154
4-58	Sending Unit	4-156
4-59	Fuel Tank.....	4-158
4-60	Gasket (Heat Shield).....	4-161
4-61	Refrigeration System Pump Down.....	4-164

LIST OF ILLUSTRATIONS - Continued

Figure	Title	Page
5-1	Control Panel Cover.....	5-3
5-2	Control Panel	5-6
5-3	Fan Drive Shaft.....	5-7
5-4	Service Manifold Installation	5-9
5-5	Discharging Refrigerant.....	5-12
5-6	Nitrogen Tank Connection.....	5-14
5-7	Evacuation of Refrigerant System.....	5-21
5-8	Refrigerant Charging (Total System)	5-23
5-9	Refrigerant Charging (Partial System /Small Quantity Charge).....	5-25
5-10	Dehydrator	5-31
5-11	Compound Gage.....	5-33
5-12	Pressure Gage	5-35
5-13	Strainer	5-37
5-14	Receiver	5-39
5-15	Condenser Coil	5-42
5-16	Pressure Regulator Valve.....	5-43
5-17	Pressure Regulator Valve.....	5-45
5-18	Check Valve.....	5-47
5-19	Metal Hose Assembly.....	5-48
5-20	Metal Hose Assembly.....	5-49
5-21	Stop Valve	5-50
5-22	Stop Valve	5-52
5-23	Sight Indicator.....	5-53
5-24	Solenoid Valve.....	5-54
5-25	Solenoid Valve.....	5-56
5-26	Isolation Valves.....	5-59
5-27	Accumulator.....	5-60
5-28	Tubing And Fittings	5-63
5-29	Heat Exchanger	5-65
5-30	Expansion Valve	5-67
5-31	Evaporator Coil	5-68
5-32	Differential Oil Pressure Switch.....	5-71
5-33	Dual Pressure Control Switch.....	5-74
5-34	Compressor	5-78
5-35	Nozzles.....	5-85
5-36	Fuel Injection Pumps.....	5-88
5-37	Fuel Pump	5-93
5-38	Cylinder Head	5-95
5-39	Engine Oil Pump.....	5-99
5-40	Flywheel.....	5-102
5-41	Alternator	5-104
5-42	Engine	5-107
5-43	Fuel Tank.....	5-110
5-44	Housing.....	5-112
C-1	Basic Issue Items	C-2

LIST OF ILLUSTRATIONS - Continued

Figure	Title	Page
F-1	Tubing-Copper, Straight Flared, Part Number 12076-3-1000.....	F-4
F-2	Tubing, Plastic, Part Number 13218E0001-305.....	F-4
F-3	Gasket, Control Box, Top, Part Number 150K0095	F-4
F-4	Gasket, Various.....	F-5
F-5	Webbing Fabric, Part Number 150K0119	F-5
F-6	Tube, Distributor to Tee, Part Number 150K0145	F-6
F-7	Tube, Distributor to Street Elbow, Part Number 150K0146	F-6
F-8	Tube, Tee to Isolator, Part Number 150K0157	F-7
F-9	Tube, Accumulator to Crankcase Pressure Regulator, Part Number 150K0158.....	F-8
F-10	Tube, Copper, Straight, Part Number 150K0197, and 150K0213.....	F-8
F-11	Tube, Heat Exchanger to Accumulator, Part Number 150K0160	F-9
F-12	Hose, Drain, Part Number 150K0163 and 150K0165.....	F-9
F-13	Gasket, Side, Part Number 150K0169.....	F-10
F-14	Gasket, Side Part Number 150K0170.....	F-10
F-15	Gasket, Top and Bottom, Part Number 150K0171.....	F-11
F-16	Gasket, Top and Bottom, Part Number 150K0172.....	F-11
F-17	Braid, Wire, Tubular, Part Number 150K0185-1/1 and 150K0201-1 /1.....	F-11
F-18	Tube, Reducer to Expansion Valve, Part Number 150K0187-1/T	F-12
F-19	Tube, D.P.R. Valve to Elbow, Part Number 150K0188	F-12
F-20	Tube, Accumulator Inlet, Part Number 150K0196.....	F-13
F-21	Tube, Straight Flare One End, Part Number 150K0198-1, -3, -5, -9, and -11.....	F-14
F-22	Tube, Interchanger to Expansion Valve, Part Number 150K0200-1/T	F-14
F-23	Insulation Tubing.....	F-15
F-24	Tube, Elbow, to Interchanger, Part Number 150K0202	F-15
F-25	Tube, Expansion Valve Equalizer, Part Number 150K0203-1/T	F-16
F-26	Capillary Lines, Part Number 150K0206-1/3, -3/3, and -5/3	F-16
F-27	Tube, Isolator to Compressor, Part Number 150K0208.....	F-17
F-28	Tube, Strainer, to Solenoid, Part Number 150K0212-1/T	F-17
F-29	Tube, Receiver Inlet, Part Number 150K0214-1/T	F-18
F-30	Tube, Receiver Outlet to Drier, Part Number 151K0215-1/T	F-19
F-31	Tube, Drier to Reducer, Part Number 150K0216-1/T	F-20
F-32	Tube, Tee to Hand Valve, Part Number 150K0217.....	F-21
F-33	Tube, Sight Glass to Elbow, Part Number 150K0218-1/T	F-21
F-34	Loom 1/2 I.D. Part Number 51206-7, -15, -25, and -39	F-22
F-35	Tape, Adhesive, Part Number 8337032-4.....	F-22

LIST OF TABLES

Table	Title	Page
2-1	Operator Preventive Maintenance Checks and Services for Model F10000RD.....	2-10
4-1	Unit Preventive Maintenance Checks and Services for Model F10000RD	4-13
4-2	200 Hour Mandatory Replacement Parts.....	4-33
4-3	Semi-Annually Mandatory Replacement Parts.....	4-33
5-1	Pressure Temperature Relationship of Saturated Refrigerant R-134a.....	5-29
5-2	Nominal Operating Pressure At Suction And Discharge Shut Off Valves.....	5-30

HOW TO USE THIS MANUAL

Be sure to read all Warnings before using this equipment.

This manual contains instructions for operation and maintenance of the Refrigeration Unit.

The front cover index of this manual lists the areas of the manual used most often and guides you to those sections. Follow the black mark on the cover index edge through the pages to the edge mark on the section you want. The subjects on the front cover index are also boxed in the table of contents. A detailed alphabetical index is located at the back of the manual.

Chapter 1 - Introduces you to the equipment and gives you information such as weight and dimensions used and general theory of operation including principles of operation.

Chapter 2 - Provides the operator with information necessary to identify and service the equipment. Operating instructions for usual and unusual conditions.

Chapter 3 - Provides operator lubrication tasks, troubleshooting procedures for identifying common equipment malfunctions, and maintenance procedures for performing operator maintenance tasks.

Chapter 4 - Provides unit maintenance personnel with procedures for lubrication and service upon receipt of equipment and instructions for performing repairs on equipment as authorized by the maintenance allocation chart.

Chapter 5 - Provides direct support maintenance personnel with instructions for performing repairs on equipment as authorized by the maintenance allocation chart.

Chapter 6 - Provides general support maintenance personnel with instructions for performing repairs on equipment as authorized by the maintenance allocation chart.

Appendix A - Provides a list of frequently used forms and publications referenced or used in this manual.

Appendix B - The maintenance allocation chart identifies repairable components and the maintenance level authorized to perform the repairs.

Appendix C - List of components of end item and basic issue items to help you inventory the equipment.

Appendix D - Lists additional items that are authorized for the support of the refrigeration unit.

Appendix E - Lists expendable and durable items needed to operate and maintain the refrigeration unit.

Appendix F - Provides you with instructions for making items authorized to be manufactured or fabricated at unit, direct support or general support maintenance.

Appendix G - Lists all mandatory replacement parts.

Alphabetical Index - Lists subject matter contained in manual in alphabetical order with the paragraph number.

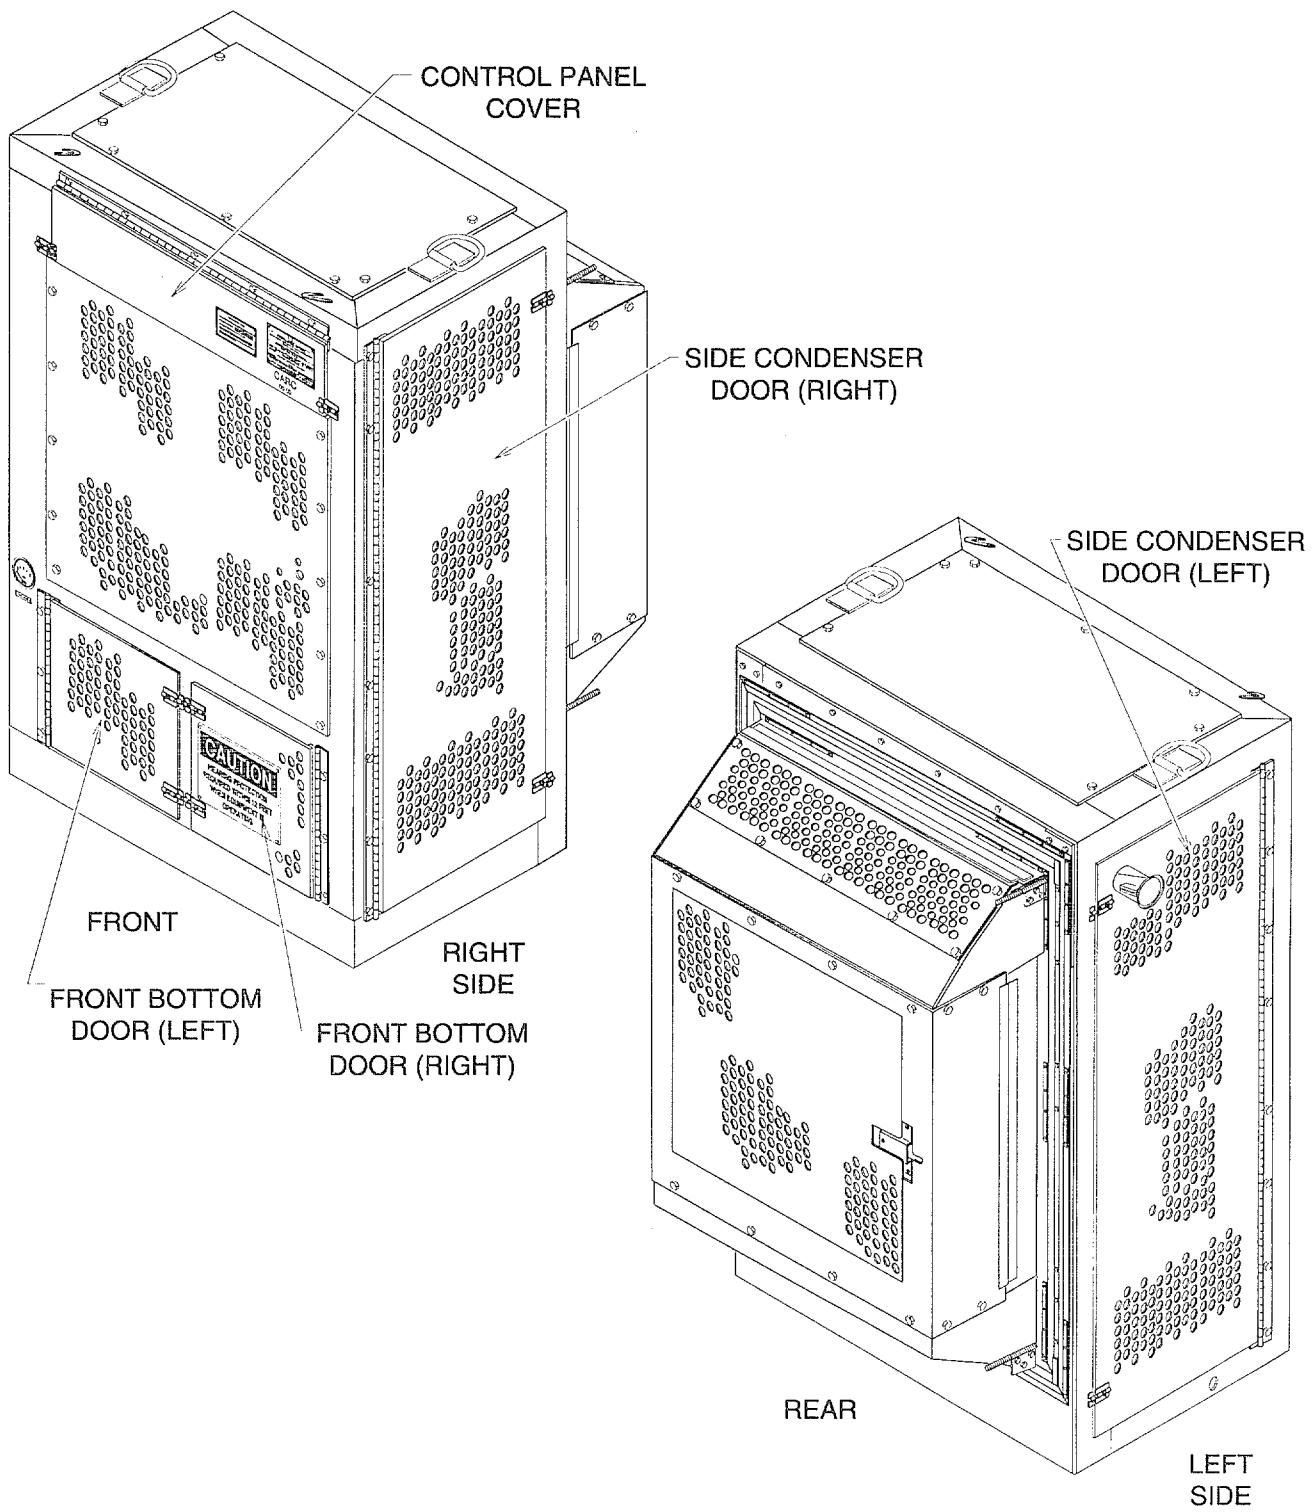


Figure 1-0. Refrigeration Unit

CHAPTER 1

INTRODUCTION

SECTION I GENERAL INFORMATION

1-1. SCOPE.

- a. Type of Manual. Operator's, Unit, Direct Support and General Support Maintenance Manual.
- b. Model Number and Equipment Name. The Model F1000ORD, Mechanical, Diesel engine driven, 10,000 Btu per hour Refrigeration Unit.
- c. Purpose of Equipment. The refrigeration unit is intended for world-wide Military field use under adverse climatic and operating conditions without added protection from the elements. In use, the units are mounted with evaporator section extending into the opening provided in prefabricated panel type refrigerators conforming to MIL- R-10932.

1-2. MAINTENANCE FORMS, RECORDS AND REPORTS.

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 738-750, The Army Maintenance Management System.

1-3. DESTRUCTION OF ARMY MATERIAL TO PREVENT ENEMY USE.

Refer to TM 750-244-3 for specific instructions on the destruction of army material to prevent enemy use.

1-4. PREPARATION FOR STORAGE OR SHIPMENT.

Refer to Chapter 4 for specific information under the same heading.

1-5. QUALITY ASSURANCE.

Requirement for specific quality assurance steps are not applicable to this equipment.