


**ARMY TM 9-6115-639-13  
AIR FORCE TO 35C2-3-386-51  
MARINE CORPS TM 10155A-13/1**

---

**OPERATOR'S, UNIT, AND DIRECT SUPPORT  
MAINTENANCE MANUAL**

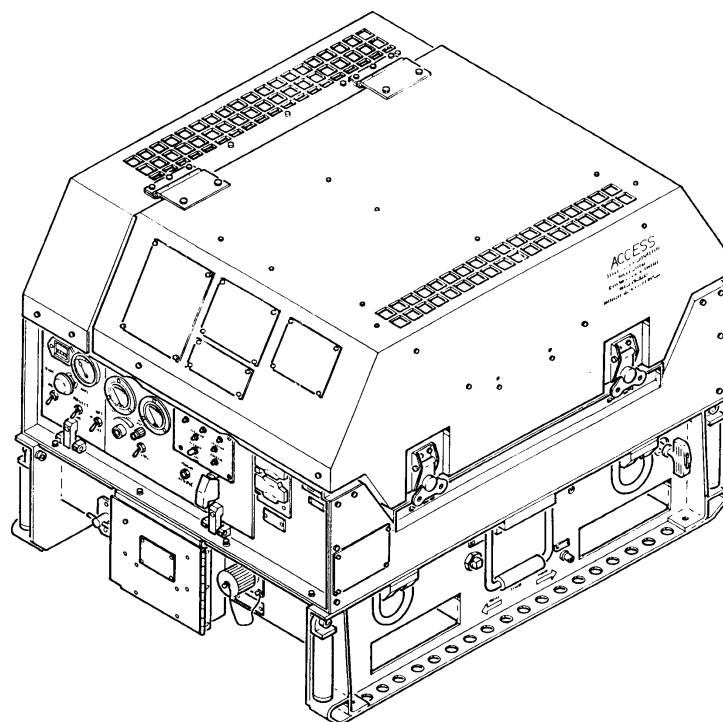

<b>OPERATING INSTRUCTIONS</b>	<b>2-1</b>
<b>OPERATOR TROUBLESHOOTING</b>	<b>3-3</b>
<b>UNIT LEVEL PMCS</b>	<b>4-7</b>
<b>UNIT LEVEL TROUBLESHOOTING</b>	<b>4-12</b>
<b>UNIT MAINTENANCE PROCEDURES</b>	<b>4-27</b>
<b>DIRECT SUPPORT TROUBLESHOOTING</b>	<b>5-3</b>
<b>DIRECT SUPPORT MAINTENANCE</b>	<b>5-4</b>
<b>MAINTENANCE ALLOCATION CHART</b>	<b>B-1</b>

**3KW TACTICAL QUIET GENERATOR SET  
MEP 831A (60 HZ) (NSN: 6115-01-285-3012) (EIC: VG6)  
MEP 832A (400 HZ) (NSN: 6115-01-287-2431) (EIC: VN7)**

**DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.**

**DESTRUCTION NOTICE: Destroy by any method that will prevent disclosure of contents or reconstruction of the document.**

---

**HEADQUARTERS, DEPARTMENTS OF THE ARMY,  
AIR FORCE AND MARINE CORPS**

**1 November 2000**

**PCN 182 101550 00**

**TECHNICAL MANUAL**  
**ARMY TM 9-6115-639-13**  
**AIR FORCE TO 35C2-3-386-51**  
**MARINE CORPS TM 10155A-13/1**

**HEADQUARTERS**  
**DEPARTMENTS OF THE ARMY,**  
**AIR FORCE AND MARINE CORPS**  
**WASHINGTON D.C. 1 November 2000**

**OPERATOR'S, UNIT, AND DIRECT SUPPORT  
MAINTENANCE MANUAL**

**FOR**

**3KW TACTICAL QUIET GENERATOR SET**  
**MEP 831A (60 HZ) (NSN: 6115-01-285-3012) (EIC: VG6)**  
**MEP 832A (400 HZ) (NSN: 6115-01-287-2431) (EIC: VN7)**

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes, or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Form) or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Communications and Electronics Command (CECOM), ATTN: AMSEL-LC-LEO-D-CS-CFO, Fort Monmouth, NJ 07703-5000. The FAX number is 732-532-1413, DSN 992-1413. You can also E-mail your recommendations to [AMSEL-LC-LEO-PUBS-CHG@cecom3.monmouth.army.mil](mailto:AMSEL-LC-LEO-PUBS-CHG@cecom3.monmouth.army.mil).

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, TO 00-5-1. Forward direct to prime ALC/MST.

For Marine Corps units, submit NAVMC 10772 (Recommended Changes to Technical Publications) to: Commanding General, Marine Corps Logistics Base (Code 850), Albany, Georgia 31704-5000.

A reply will be furnished directly to you.

**TABLE OF CONTENTS**

WARNING SUMMARY.....	a
HOW TO USE THIS MANUAL .....	vi
CHAPTER 1        INTRODUCTION.....	1-1
Section I     General Information .....	1-1
Section II    Equipment Description.....	1-5
Section III   Principles of Operation .....	1-21

**ARMY TM 9-6115-639-13  
AIR FORCE TO 35C2-3-386-51  
MARINE CORPS TM 10155A-13/1**

**TABLE OF CONTENTS**

<b>CHAPTER 2</b>	<b>OPERATING INSTRUCTIONS</b>	..... 2-1
Section I	Description and Use of Operator's Controls and Indicators .....	2-2
Section II	Operator Preventive Maintenance Checks and Services (PMCS) .....	2-8
Section III	Operation Under Usual Conditions.....	2-19
Section IV	Operation Under Unusual Conditions.....	2-28
<b>CHAPTER 3</b>	<b>OPERATOR MAINTENANCE INSTRUCTIONS</b>	..... 3-1
Section I	Lubrication Instructions.....	3-2
Section II	Operator Troubleshooting Procedures.....	3-3
Section III	Operator Maintenance Procedures.....	3-9
<b>CHAPTER 4</b>	<b>UNIT MAINTENANCE INSTRUCTIONS</b>	..... 4-1
Section I	Lubrication Instructions .....	4-3
Section II	Repair Parts; Tools; Special Tools; Test, Measurement and .....	4-6
Section III	Diagnostic Equipment (TMDE); and Support Equipment Service Upon Receipt of Equipment.....	4-6
Section IV	Unit Preventive Maintenance Checks and Services (PMCS) .....	4-7
Section V	Unit Level Troubleshooting Procedures.....	4-12
Section VI	Unit Maintenance Procedures.....	4-27
Section VII	Preparation for Shipment and Storage .....	4-140
<b>CHAPTER 5</b>	<b>DIRECT SUPPORT MAINTENANCE INSTRUCTIONS</b>	..... 5-1
Section I	Repair Parts; Tools; Special Tools; Test, Measurement and .....	5-2
Section II	Diagnostic Equipment (TMDE); and Support Equipment Service Upon Receipt of Equipment.....	5-2
Section III	Direct Support Level Troubleshooting Procedures .....	5-3
Section IV	Direct Support Maintenance Procedures .....	5-4
<b>Appendix A</b>	<b>REFERENCES</b>	..... A-1
<b>Appendix B</b>	<b>MAINTENANCE ALLOCATION CHART (MAC)</b>	..... B-1
<b>Appendix C</b>	<b>COMPONENTS OF END ITEM (COEI) AND BASIC ISSUE</b>	..... C-1
<b>ITEMS (BII) LISTS</b>		
<b>Appendix D</b>	<b>ADDITIONAL AUTHORIZATION LIST (AAL) ITEMS</b>	..... D-1
<b>Appendix E</b>	<b>EXPENDABLE AND DURABLE ITEMS LIST</b>	..... E-1
<b>Appendix F</b>	<b>ILLUSTRATED LIST OF MANUFACTURED ITEMS</b>	..... F-1
<b>Appendix G</b>	<b>TORQUE LIMITS</b>	..... G-1
<b>Appendix H</b>	<b>MANDATORY REPLACEMENT PARTS</b>	..... H-1
<b>Appendix I</b>	<b>WARRANTY INFORMATION</b>	..... I-1
	<b>ALPHABETICAL INDEX</b>	..... Index-1

## **LIST OF ILLUSTRATIONS**

<u>Figure No.</u>	<u>Title</u>	<u>Page</u>
1-1	3kW Tactical Quiet Generator Set.....	1-3
1-2	Location of Generator Set Components.....	1-7
1-3	Engine / Generator Assembly .....	1-9
1-4	Generator Set Fuel System.....	1-11
1-5	Generator Set Data, Instruction, and Warning Plates .....	1-14
1-6	Fuel System Schematic .....	1-25
2-1	Generator Set Controls and Indicators .....	2-5
2-2	Ground Rod and Cable Installation.....	2-21
2-3	Operating Procedures.....	2-27
2-4	Manual Engine Starting .....	2-31
3-1	Air Filter Replacement.....	3-11
4-1	Engine Oil Servicing.....	4-5
4-2	Diagnostic Test Points .....	4-13
4-3	Control Box Assembly.....	4-29
4-4	Control Panel Assembly .....	4-33
4-5	HOURS Meter .....	4-34
4-6	FUEL LEVEL Gauge .....	4-35
4-7	VOLTAGE Meter .....	4-36
4-8	LOAD Meter.....	4-37
4-9	Fault Indicator Module .....	4-38
4-10	Operator Switches.....	4-39
4-11	EMERGENCY STOP Switch.....	4-41
4-12	DC CIRCUIT BREAKER .....	4-43
4-13	CIRCUIT INTERRUPTER Indicator Light .....	4-44
4-14	VOLTAGE ADJUST Rheostat.....	4-46
4-15	Control Box Relays.....	4-48
4-16	Terminal Blocks, Fuse, Diodes .....	4-51
4-17	Governor Control .....	4-52
4-18	Control Box Wiring Harness .....	4-55
4-19	AC Circuit Interrupter Contactor .....	4-56
4-20	Battery Charging Regulator .....	4-58
4-21	Convenience Receptacle .....	4-60
4-22	Ground Fault Circuit Interrupter .....	4-62
4-23	SLAVE RECEPTACLE .....	4-64
4-24	Output Terminals / Filter .....	4-66
4-25	Voltage Resistors .....	4-70
4-26	Lifting Handles .....	4-72
4-27	Engine Oil Drain Assembly .....	4-75
4-28	Engine Temperature Switch.....	4-76
4-29	Lubrication Oil Pressure Switch .....	4-78

**ARMY TM 9-6115-639-13  
AIR FORCE TO 35C2-3-386-51  
MARINE CORPS TM 10155A-13/1**

**LIST OF ILLUSTRATIONS - cont.**

<u>Figure No.</u>	<u>Title</u>	<u>Page</u>
4-30	Fuel Level Switch .....	4-80
4-31	Fuel Sender .....	4-82
4-32	Fuel Tank Pickup Tube.....	4-84
4-33	Primary Fuel Pump .....	4-85
4-34	Muffler Assembly .....	4-89
4-35	Battery .....	4-93
4-36	Battery Cables.....	4-97
4-37	Main Access Cover.....	4-101
4-38	Enclosure Panels .....	4-109
4-39	High Temperature Switch and Cooling Fan Removal .....	4-113
4-40	Low Temperature Switch and Cooling Fan Removal.....	4-115
4-41	Low Temperature Switch and Cooling Fan Installation .....	4-117
4-42	High Temperature Switch and Cooling Fan Installation .....	4-119
4-43	Filter Servicing .....	4-120
4-44	Fuel Filter / Water Separator.....	4-121
4-45	Fuel Fill Cap and Pocket.....	4-123
4-46	Auxiliary Fuel Pump.....	4-126
4-47	Power Inverter / Converter.....	4-129
4-48	DC Magnetic Contactors.....	4-133
4-49	Governor Actuator Adjustment.....	4-134
4-50	Governor Control Module .....	4-135
4-51	Governor Actuator .....	4-137
5-1	Engine / Alternator Assembly.....	5-5
5-2	Permanent Magnet Alternator.....	5-11
5-3	Fuel Tank .....	5-15
FO-1	Generator Set Electrical Schematic.....	FP-1
FO-2	Generator Set Wiring Diagram .....	FP-5
FO-3	Engine Wiring Harness Diagram, 60 Hz .....	FP-13
FO-4	Engine Wiring Harness Diagram, 400 Hz .....	FP-17
FO-5	Control Box Wiring Harness Diagram, 60 Hz .....	FP-21
FO-6	Control Box Wiring Harness Diagram, 400 Hz .....	FP-27

**ARMY TM 9-6115-639-13  
AIR FORCE TO 35C2-3-386-51  
MARINE CORPS TM 10155A-13/1**

**LIST OF TABLES**

<u>Table No.</u>	<u>Title</u>	<u>Page</u>
1-1	Nomenclature Cross-Reference .....	1-4
1-2	Equipment Data .....	1-12
2-1	Operator Preventive Maintenance Checks and Services.....	2-12
3-1	Lubricant Table for Generator Set MEP 831A/832A .....	3-2
3-2	Malfunction Index (Operator Troubleshooting) .....	3-3
3-3	Operator Level Troubleshooting.....	3-4
4-1	Lubricant Table for Generator Set .....	4-3
4-2	Unit Level Preventive Maintenance Checks and Services.....	4-10
4-3	Malfunction Index (Unit Troubleshooting) .....	4-12
4-4	Unit Level Troubleshooting Procedures .....	4-14

## **How to Use This Manual**

### **1. DESCRIPTION OF THE MANUAL.**

- a. **Chapter Organization.** This manual has five chapters covering: introductory information, principles of operation, operator maintenance instruction, unit maintenance instructions, and direct support maintenance instructions. Each chapter is divided into sections. These sections contain the cleaning, inspection, troubleshooting, and repair tasks appropriate for the specific maintenance level. Each chapter contains a table of contents containing the tasks within that chapter. See the overall Table of Contents (page i) for the chapters and sections of this manual.
- b. **Paragraph and Task Numbering.** All paragraphs and maintenance tasks are numbered. This helps you find what you need when you need it. Use the Table of Contents (page i) or alphabetical index (at the back of the manual) to find the paragraph or task you need.
- c. **Appendices.** The appendices in this manual contain both general maintenance information and specific data for this generator set. They list reference manuals and materials, components of the generator set, additional authorization list items, expendable supplies and materials, torque limits, and mandatory replacement parts. Refer to the Table of Contents (page i) for a complete list of the appendices used in this manual.

### **2. HOW TO FIX A GENERATOR SET MALFUNCTION.**

- a. **Determining the Cause.** Figuring out the cause of the malfunction, or troubleshooting, is the first step in fixing the generator set and returning it to operation. Follow these steps to determine the root of your problem:

- (1) Turn to the Table of Contents section in this manual (page i).
- (2) Locate “Troubleshooting” for your maintenance level and turn to the page indicated.
- (3) In the Troubleshooting section, find the troubleshooting symptom for the component affected by the malfunction. Refer to the Symptom Index for help.

#### **NOTE**

If the specific symptom is not addressed, the maintenance required is most likely more detailed than authorized for your level. Notify personnel at a higher maintenance level.

- (4) Begin troubleshooting. Carefully work your way down through the troubleshooting table to try and determine what the problem is.
- (5) Once the trouble has been determined, go to the maintenance task called out. Remedy the malfunction, test the generator set, and return it to service.