

**TECHNICAL MANUAL  
 MAINTENANCE INSTRUCTIONS  
 ORGANIZATIONAL MAINTENANCE  
 M977 SERIES 8 x 8 HEAVY  
 EXPANDED MOBILITY  
 TACTICAL TRUCKS (HEMTT)**

MODEL	NSN
TRUCK, CARGO, WITH WINCH M977	2320-01-097-0260
TRUCK, CARGO, WITHOUT WINCH M977	2320-01-099-6426
TRUCK, TANK, FUEL, WITH WINCH M978	2320-01-097-0249
TRUCK, TANK, FUEL, WITHOUT WINCH M978	2320-01-100-7672
TRUCK, TRACTOR, WITH WINCH, WITHOUT CRANE M983	2320-01-097-0247
TRUCK, TRACTOR, WITH WINCH, WITH CRANE M983	2320-01-099-6421
TRUCK, WRECKER-RECOVERY M984	2320-01-097-0248
TRUCK, WRECKER-RECOVERY M984E1	2320-01-195-7641
TRUCK, CARGO, WITH WINCH M985	2320-01-097-0261
TRUCK, CARGO, WITHOUT WINCH M985	2320-01-100-7673
TRUCK, CARGO, WITH WINCH M985E1	2320-01-194-7032
TRUCK, CARGO, WITHOUT WINCH M985E1	2320-01-194-7031

Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**TABLE OF CONTENTS  
 PAGE i**

**TRANSMISSION  
 MAINTENANCE  
 PAGE 8-1**

**TRANSFER CASE AND  
 PROPELLER SHAFT  
 MAINTENANCE  
 PAGE 9-1**

**AXLE MAINTENANCE  
 PAGE 10-1**

**BRAKE AND AIR  
 SYSTEM MAINTENANCE  
 PAGE 11-1**

**WHEEL MAINTENANCE  
 PAGE 12-1**

**STEERING SYSTEM  
 MAINTENANCE  
 PAGE 13-1**

**FRAME AND TIRE  
 CARRIER MAINTENANCE  
 PAGE 14-1**

**SUSPENSION  
 MAINTENANCE  
 PAGE 15-1**

**CAB AND BODY  
 MAINTENANCE  
 PAGE 16-1**

**WINCHES, CRANES, AND  
 POWER TAKE-OFF  
 MAINTENANCE  
 PAGE 17-1**

**ALPHABETICAL  
 INDEX  
 PAGE INDEX 1**

## MAINTENANCE INSTRUCTIONS

### ORGANIZATIONAL

#### M977 SERIES, 8 X 8 HEAVY EXPANDED MOBILITY TACTICAL TRUCKS (HEMTT)

MODEL	NSN
TRUCK, CARGO, WITH WINCH, M977	2320-01-097-0260
TRUCK, CARGO, WITHOUT WINCH, M977	2320-01-099-6426
TRUCK, TANK, FUEL, WITH WINCH, M978	2320-01-097-0249
TRUCK, TANK, FUEL, WITHOUT WINCH, M978	2320-01-100-7672
TRUCK, TRACTOR, WITH WINCH, WITHOUT CRANE, M983	2320-01-097-0247
TRUCK, TRACTOR, WITH WINCH, WITH CRANE, M983	2320-01-099-6421
TRUCK, WRECKER-RECOVERY, M984	2320-01-097-0248
TRUCK, WRECKER-RECOVERY, M984E1	2320-01-195-7641
TRUCK, CARGO, WITH WINCH, M985	2320-01-097-0261
TRUCK, CARGO, WITHOUT WINCH, M985	2320-01-100-7673
TRUCK, CARGO, WITH WINCH, M985E1	2320-01-194-7032
TRUCK, CARGO, WITHOUT WINCH, M985E1	2320-01-194-7031

**Approved for public release; distribution is unlimited.**

#### REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) Web site. The Internet address is <http://aeeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM." The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax, or e-mail your letter or DA Form 2028 direct to: AMSTA-LC-CI/TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The e-mail address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

M983 with crane and M985E1 without winch are no longer in the fleet. Ignore all references to these vehicles. The M984E1 and M984A1 are the same vehicle. All references to M984E1 shall be interpreted as the M984A1 model.

#### TABLE OF CONTENTS

		Page
CHAPTER 8	TRANSMISSION MAINTENANCE	8-1
Section I	Introduction	8-1
Section II	Shift Control	8-1
Section III	Transmssion	8-10
Section IV	Filter	8-16

TABLE OF CONTENTS (CONT)

	Page
CHAPTER 9	9-1
<b>TRANSFER CASE AND PROPELLER SHAFT MAINTENANCE</b> .....	
Section I	9-1
Section II	9-1
Section II	9-24
CHAPTER 10	10-1
<b>AXLE MAINTENANCE</b> .....	
Section I	10-1
Section II	10-1
Section III	10-7
CHAPTER 11	11-1
<b>BRAKE AND AIR SYSTEM MAINTENANCE</b> .....	
Section I	11-2
Section II	11-2
Section III	11-31
Section IV	11-74
Section V	11-90
Section VI	11-141
Section VII	11-146
Section VIII	11-161
Section IX	11-172
CHAPTER 12	12-1
<b>WHEEL MAINTENANCE MAINTENANCE</b> .....	
Section I	12-1
Section II	12-1
Section III	12-24
CHAPTER 13	13-1
<b>STEERING SYSTEM</b> .....	
Section I	13-1
Section II	13-1
Section III	13-18
CHAPTER 14	14-1
<b>FRAME AND TIRE CARRIER MAINTENANCE</b> .....	
Section I	14-1
Section II	14-2
Section III	14-18
Section IV	14-24
Section V	14-33
CHAPTER 15	15-1
<b>SUSPENSION MAINTENANCE</b> .....	
Section I	15-1
Section II	15-1
CHAPTER 16	16-1
<b>CAB AND BODY MAINTENANCE</b> .....	
Section I	16-2
Section II	16-2.2
Section III	16-46
Section IV	16-114
Section V	16-131
Section VI	16-166
Section VII	16-186
Section VIII	16-189
Section IX	16-210.2

**TABLE OF CONTENTS (CONT)**

		<b>Page</b>
CHAPTER 17	<b>WINCHES, CRANES, AND POWER TAKEOFF MAINTENANCE</b> .....	17-1
Section I	Introduction .....	17-1
Section II	Cable Tensioners and Guides .....	17-2
Section III	Winches .....	17-48
Section IV	Cranes .....	17-63
Section V	Winch and Crane Controls .....	17-90
Section VI	Power Take off .....	17-110
Section VII	Outriggers and Outrigger Controls .....	17-122
	<b>Index</b> .....	Index 1

**LIST OF ILLUSTRATIONS**

Figure	Title	Page
9-1	Capscrew Torque Limits .....	9-25
11-1	Engine Airhoses .....	11-149
11-2	Wiper and AirHorn Hoses .....	11-150.1
11-2.1	Wiper and Horn Hoses .....	11-151
11-3	Chassis Airhoses .....	11-153
11-4	Brake Airhoses .....	11-157
11-5	Cab Airhoses .....	11-159
11-6	Air Manifold No.4 .....	11-160

**LIST OF TABLES**

Number	Title	Page
11-1	Engine Hose Index .....	11-148
11-2	Wiper and AirHorn Hoses .....	11-150
11-3	Chassis Airhoses .....	11-152
11-4	Brake Airhoses .....	11-156
11-5	Cab Airhoses .....	11-158