

**TECHNICAL MANUAL  
MAINTENANCE INSTRUCTIONS  
DIRECT SUPPORT AND GENERAL SUPPORT**

**M977 SERIES 8 x 8 HEAVY  
EXPANDED MOBILITY  
TACTICAL TRUCKS (HEMTT)**

<b>MODEL</b>	<b>NSN</b>
TRUCK, CARGO, WITH WINCH M977	2320-01-097-0260
TRUCK, CARGO, WITHOUT WINCH M977	2320-01-099-6426
TRUCK, TANK, FUEL, WITH WINCH M978	2320-01-097-0249
TRUCK, TANK, FUEL, WITHOUT WINCH M978	2320-01-100-7672
TRUCK, TRACTOR, WITH WINCH, WITHOUT CRANE M983	2320-01-097-0247
TRUCK, TRACTOR, WITH WINCH, WITH CRANE M983	2320-01-099-6421
TRUCK, WRECKER-RECOVERY M984	2320-01-097-0248
TRUCK, WRECKER-RECOVERY M984E1	2320-01-195-7641
TRUCK, CARGO, WITH WINCH M985	2320-01-097-0261
TRUCK, CARGO, WITHOUT WINCH M985	2320-01-100-7673
TRUCK, CARGO, WITH WINCH M985E1	2320-01-194-7032
TRUCK, CARGO, WITHOUT WINCH M985E1	2320-01-194-7031

Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**TABLE OF CONTENTS  
PAGE i**

**AXLES NO. 3 AND NO. 4  
MAINTENANCE  
PAGE 10-1**

**BRAKE SYSTEM  
MAINTENANCE  
PAGE 11-1**

**STEERING SYSTEM  
MAINTENANCE  
PAGE 12-1**

**FRAME MAINTENANCE  
PAGE 13-1**

**SUSPENSION  
MAINTENANCE  
PAGE 14-1**

**CAB AND BODY  
MAINTENANCE  
PAGE 15-1**

**WINCH MAINTENANCE  
PAGE 16-1**

**ALPHABETICAL  
INDEX  
PAGE INDEX 1**

**MAINTENANCE INSTRUCTIONS**  
**DIRECT SUPPORT AND GENERAL SUPPORT**  
**M977 SERIES, 8 X 8 HEAVY EXPANDED MOBILITY**  
**TACTICAL TRUCKS (HEMTT)**

MODEL	NSN
TRUCK, CARGO, WITH WINCH, M977	2320-01-097-0260
TRUCK, CARGO, WITHOUT WINCH, M977	2320-01-099-6426
TRUCK, TANK, FUEL, WITH WINCH, M978	2320-01-097-0249
TRUCK, TANK, FUEL, WITHOUT WINCH, M978	2320-01-100-7672
TRUCK, TRACTOR, WITH WINCH, WITHOUT CRANE, M983	2320-01-097-0247
TRUCK, TRACTOR, WITH WINCH, WITH CRANE, M983	2320-01-099-6421
TRUCK, WRECKER-RECOVERY, M984	2320-01-097-0248
TRUCK, WRECKER-RECOVERY, M98E1	2320-01-195-7641
TRUCK, CARGO, WITH WINCH, M985	2320-01-097-0261
TRUCK, CARGO, WITHOUT WINCH, M985	2320-01-100-7673
TRUCK, CARGO, WITH WINCH, M985E1	2320-01-194-7032
TRUCK, CARGO, WITHOUT WINCH, M985E1	2320-01-194-7031

**Approved for public release; distribution is unlimited.**

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) Web site. The Internet address is <http://aeprs.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM." The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax, or e-mail your letter or DA Form 2028 direct to: AMSTA-LC-CI/TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The e-mail address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

M983 with crane and M985E1 without winch are no longer in the fleet. Ignore all references to these vehicles. The M984E1 and M984A1 are the same vehicle. All references to M984E1 shall be interpreted as the M984A1 model.

**TABLE OF CONTENTS**

	<b>Page</b>
CHAPTER 10 <b>AXLES NO 3. AND NO. 4 MAINTENANCE</b> .....	10-1
Section I Introduction .....	10-1
Section II Axle Assemblies .....	10-1
Section III Differential Carriers .....	10-15

**TABLE OF CONTENTS (CONT)**

CHAPTER 11	<b>BRAKE SYSTEM MAINTENANCE</b>	11-1
Section1	Introduction	11-1
Section11	Service Brakes	11-1
Section III	Air Brake System	11-5
SectionIV	Air Compressor	11-18
Section V	Trailer Brake System	11-33
CHAPTER 12	<b>STEERING SYSTEM MAINTENANCE</b>	12-1
Section1	Introduction	12-1
Section II	Steering Linkage and Gearbox	12-1
Section III	Steering Gear and Slave	12-19
SectionIV	Steering Pump	12-42
Section V	Steering System Adjustments	12-48
CHAPTER13	<b>FRAME MAINTENANCE..</b>	13-1
Section1	Introduction	13-1
Section11	Frame Assembly	13-2
Section III	Fifth Wheel Assembly	13-91
CHAPTER 14	<b>SUSPENSION MAINTENANCE</b>	14-1
Section1	Introduction	14-1
Section II	Spring Assembly	14-2
Section III	Lateral Torque Rod and Equalizer Beams	14-11
CHAPTER 15	<b>CABAND BODY MAINTENANCE</b>	15-1
Section1	Introduction	15-1
Section II	Cab Assembly	15-1
Section III	Pump Module, Tank, and Cargo Bodies	15-26
CHAPTER 16	<b>WINCH MAINTENANCE..</b>	16-1
Section I	Introduction	16-1
Section II	Self-Recovery Winch	16-2
Section III	Heavy-Duty Winch	16-22
<b>INDEX</b>		Index- 1