

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE MANUAL**

**LANDING CRAFT, MECHANIZED,
STEEL, DED, OVERALL LENGTH 74 FEET,
MOD 1, MARK VIII, NAVY DESIGN LCM-8
(GUNDERSON BROS. ENGINEERING CORP.,
MARINETTE MARINE CORP.,
AND ROHR CORP.)
FSN 1905-935-6057**

This copy is a reprint which includes current pages from Changes 1 and 2.

HEADQUARTERS, DEPARTMENT OF THE ARMY
OCTOBER 1974

TECHNICAL MANUAL
No. 55-1905-217-34



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 8 October 1974

DIRECT AND GENERAL SUPPORT MAINTENANCE MANUAL

LANDING CRAFT, MECHANIZED, STEEL, DED

OVERALL LENGTH 74 FEET, MOD 1, MARK VIII,

NAVY DESIGN LCM-8

(GUNDERSON BROS. ENGINEERING CORP,

MARINETTE MARINE CORPORATION,

AND ROHR CORPORATION)

NSN 1905-00-935-6057

		Paragraph	Page
Chapter	1. INTRODUCTION		
Section	I. General.....	1-1 -1-3	1-1
	II. Description and data.....	1-4 -1-6	1-3
Chapter	2. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE INSTRUCTIONS.		
Section	I. Repair parts, special tools, and equipment.....	2-1 -2-3	2-1
	II. Troubleshooting.....	2-4 -2-5	2-3
	III. Removal and installation of major components.....	2-6 -2-9	2-7
Chapter	3. REPAIR OF ENGINE AND TRANSMISSION		
Section	I. Engine accessories.....	3-1 -3-12	3-1
	II. Engine components and transmission.....	3-10 -3-30	3-62
Chapter	4. REPAIR OF CONTROL SYSTEM		
Section	I. Electrical System	4-1 -4-3	4-1
	II. Hydraulic starting system	4-4 -4-9	4-22
	III. Hydraulic steering system	4-10 -4-14	4-37
	IV. Ramp hoist hydraulic system.....	4-15 -4-25	4-55
Chapter	5. REPAIR OF PROPELLER, SHAFT, RAMP, AND HATCHES		
Section	I. Propeller and shaft assembly.....	5-1 -5-5	5-1
	II. Hatches and ramp assembly	5-6 -5-7	5-11
Chapter	6. REPAIR OF COMMUNICATION AND NAVIGATION EQUIPMENT		
Section	I. Communication equipment	6-1 -6-4	6-1
	II. Navigation equipment	6-5	6-9
Appendix	A. REFERENCES		A-1
Index		I-1

*This manual supersedes TM 55-1905-217-34, 13 January 1969, including all changes.

LIST OF ILLUSTRATIONS

Figure No.	Title	Page
1-1	Landing craft, mechanized, diesel, design LCM 8 MOD-1 hull nos. 8540 thru 8560 and 8580 thru 8618.....	1-2
1-2	Wiring diagram-hull no. 8500-8519 (Located in rear of manual)	Fig. 1-2
1-3	Wiring diagram-hull no. 8520-8539	1-11
1-4	Wiring diagram-hull nos. 8540-8560 and 8580-8618 (Located in rear of manual)	Fig. 1-4
3-1	Fuel system diagram.....	3-1
3-2	Fuel injector assembly	3-2
3-3	Fuel metering from no load to full load	3-3
3-4	Phases of fuel injector operation thru vertical travel of plunger.....	3-4
3-5	Checking fuel injector rack for freeness.....	3-6
3-6	Fuel injector in testing and popping fixture installation.....	3-7
3-7	Fuel injector high pressure test.....	3-9
3-8	Fuel injector follower stop in, removal	3-10
3-9	Defective fuel injector plungers	3-11
3-10	Setting comparator stroke counter.....	3-12
3-11	Injector follower spring and plunger, removal and installation	3-13
3-12	Installing injector in comparator	3-14
3-13	Fuel injector filter, removal and installation	3-15
3-14	Injector rack, gear, spray tip and valve assembly components, removal and installation .	3-16
3-15	Removing spray tip from fuel injector nut	3-17
3-16	Reaming fuel injector spray tip.....	3-18
3-17	Cleaning injector spray tip orifices	3-19
3-18	Cleaning injector nut spray tip seat.....	3-20
3-19	Fuel injector sealing surfaces which may require lapping	3-21
3-20	Lapping edge of hole in injector valve seat.....	3-22
3-21	Installing fuel injector follower stop pin	3-24
3-22	Checking fuel injector spray tip concentricity	3-25
3-23	Reaming seat of injector tube in cylinder head	3-26
3-24	Removing oil seals from fuel pump body.....	3-27
3-25	Governor and throttle controls, disassembly and reassembly	3-30
3-26	Governor, assembled.....	3-33
3-27	Fresh water expansion tank, removal and installation.....	3-35
3-28	Fresh water pump, exploded view	3-36
3-29	Raw water pump, exploded view	3-38
3-30	Keel cooler, removal and installation.....	3-39
3-31	Blower, disassembly and reassembly	3-42
3-32	Proper shim location for correct rotor lobe clearance.....	3-45
3-33	Chart of minimum clearances for blower	3-47
3-34	Installing rotor gears on shaft for preliminary check of clearance.....	3-48
3-35	Blower and drive assembly with accessories attached to blower.....	3-50
3-36	Transmission control valve, exploded view	3-52
3-37	Removing shut-off valve oil seal from control housing	3-53
3-38	Installing shut-off valve oil seal in control valve housing	3-54
3-39	Transmission oil pump, disassembly and reassembly.....	3-56
3-40	Oil pump porting and rotors including bleed holes	3-58
3-41	Installing oil seals in pump body.....	3-58
3-42	Power take-off, removal and installation.....	3-59
3-43	Power take-off clutch, disassembly and reassembly	3-61
3-44	Injector control tube and cylinder head mounting nuts and bolts, removal and installation.....	3-63
3-45	Cylinder head and valves, disassembly and reassembly	3-64
3-46	Injector control tube assembly, disassembly and reassembly	3-65
3-47	Checking bottom face of cylinder head.....	3-66
3-48	Minimum distance between top and bottom faces of cylinder head.....	3-67
3-49	Correct installation of water nozzles in cylinder head.....	3-67
3-50	Rocker arm and shaft, removal and installation.....	3-69
3-51	Rocker arms, cam followers, and push rods, disassembly and reassembly.....	3-70
3-52	Cam follower and guide, removal and installation.....	3-71
3-53	Cam roller wear and clearance diagram	3-72
3-54	Cam follower, roller, and pin, removal and installation.....	3-73
3-55	Valve seat insert, removal.....	3-75
3-56	Relationship between exhaust valve, insert, and cylinder head	3-76
3-57	Idler gear assembly, cross-section view	3-78
3-58	Idler gear hole spacer, removal and installation.....	3-80
3-59	Idler gear assembly, disassembly and reassembly	3-82
3-60	Pressing hub out of bearing.....	3-83

LIST OF ILLUSTRATIONS-Continued

Figure No.	Title	Page
3-61	Idler gear bearing and spacer, cross-section view	3-84
3-62	Hardwood ram for pressing outer race from gear.....	3-84
3-63	Location of notches in idler gear.....	3-85
3-64	Fixture for testing bearing pre-load.....	3-86
3-65	Plates for bearing test fixture.....	3-86
3-66	Checking preload of idler gear bearing	3-88
3-67	Gear train and timing marks, left hand rotation engine	3-91
3-68	Gear train and timing marks, right hand rotation engine	3-92
3-69	Oil pan, removal, disassembly, reassembly, and installation	3-94
3-70	Oil pump, removal, disassembly, reassembly, and installation	3-96
3-71	Oil pump drive shaft and gear assembly	3-98
3-72	Piston, connecting rod and cylinder sleeve, removal, disassembly, reassembly, and installation.....	3-99
3-73	Reaming piston pin bushings in connecting rod.....	3-101
3-74	Installation of spray nozzle in connecting rod	3-102
3-75	Cylinder liners, removal	3-104
3-76	High and low pressure contact areas on cylinder liners.....	3-105
3-77	Cylinder liner measurement diagram.....	3-106
3-78	Cylinder liner mounting in block	3-108
3-79	Installing piston and connecting rod assembly in cylinder liner	3-109
3-80	Crankshaft pulley, removal.....	3-110
3-81	Power transfer gear assembly, (HM Marine).....	3-111
3-82	Transfer gear housing and flywheel housing, removal and installation	3-112
3-83	Removing lock nut from power driven shaft.....	3-113
3-84	Main bearing cap, removal.....	3-115
3-85	Rear main bearing thrust washer and mounting.....	3-116
3-86	Main bearing upper shell, removal (except rear main) crankshaft in place.....	3-117
3-87	Rear main bearing upper shell, removal-crankshaft in place.....	3-118
3-88	Torquematic marine gear and flywheel assembly, cross-section view.....	3-121
3-89	Reverse gear assembly, cross-section view	3-123
3-90	Removing retaining ring from reverse gear housing	3-124
3-91	Removing oil seal rings from reverse gear drive shaft.....	3-125
3-92	Flywheel and forward clutch, cross-section view.....	3-126
3-93	Installing reverse clutch plate and drive plate assembly into reverse gear housing ...	3-132
3-94	Installing reverse planetary gear assembly and sun gear on reverse gear drive shaft	3-134
3-95	Crankshaft front cover, removal and installation.....	3-136
3-96	Crankshaft front cover, bolt, tightening sequence	3-137
3-97	Crankshaft, disassembly and reassembly.....	3-139
3-98	Balance weight cover, removal and installation and bolt tightening sequence.....	3-141
3-99	Loosening nut on camshaft or balance shaft.....	3-142
3-100	Camshaft and balance shaft, exploded view.....	3-143
3-101	Cylinder block, disassembly and reassembly.....	3-147
4-1	Alternator, exploded view (hulls 8500-8519 and 8520-8539).....	4-2
4-2	Alternator, exploded view (hulls 8540-8560 and 8580-8618).....	4-5
4-3	Diode installation (hulls 8540-8560 and 8580-8618)	4-6
4-4	Stator, rotor, and brush test points (hulls 8500-8519 and 8520-8539)	4-8
4-5	Rectifier diode test points (hulls 8500-8519 and 8520-8539).....	4-9
4-6	Alternator stator testing (hulls 8540-8560 and 8580-8618)	4-10
4-7	Diode testing (hulls 8540-8560 and 8580-8618).....	4-11
4-8	Starter motor, cross-section view	4-15
4-9	Motor drive housing, exploded view	4-16
4-10	Middle bearing assembly, exploded view	4-17
4-11	Commutator end bearing assembly, cross-section view.....	4-18
4-12	Frame and field assembly, cross-section view.....	4-19
4-13	Hydraulic starting system reservoirs (hulls 8500-8519 and 8520-8539).....	4-23
4-14	Hydraulic starting system reservoir (hulls 8540-8560 and 8580-8618)	4-24
4-15	Hydraulic oil reservoir, removal, disassembly, reassembly and installation.....	4-25
4-16	Hydraulic starting motor, cross-section view.....	4-27
4-17	Starting system hydraulic pump, disassembly and reassembly.....	4-29
4-18	Pump pressure relief piston assembly cross-section view.....	4-30
4-19	Installing pressure relief piston back-up ring, seal ring, and washers w/tool J 7192 ...	4-31
4-20	Installing shat seal.....	4-32
4-21	Accumulator gage, and valve, removal and installation	4-33
4-22	Accumulator, cross-section view	4-34
4-23	Hand pump, cross-section view.....	4-36
4-24	Steering pump drive adapter assembly, removal, disassembly, reassembly and installation.....	4-38
4-25	Steering cylinder, cross-section view.....	4-40

LIST OF ILLUSTRATIONS-Continued


Figure No.	Title	Page
4-26	Helm unit assembly.....	4-41
4-27	Helm unit control section and metering section, disassembly and reassembly.....	4-43
4-28	Helm unit column assembly, disassembly and reassembly.....	4-45
4-29	Removing end cap.....	4-46
4-30	Removing check valve seat, ball, and spring.....	4-46
4-31	Drive and meter gear star.....	4-48
4-32	Steering system relief valve, cross-section view.....	4-49
4-33	Steering system flow control valve, cross-section view.....	4-50
4-34	Steering system double overcenter valve, cross-section view.....	4-51
4-35	Steering system relief valve (hulls 8520-8560 and 8580-8618).....	4-52
4-36	Steering system flow divider (hulls 8520-8560 and 8580-8618).....	4-53
4-37	Steering system counterbalance valve (hulls 8520-8560 and 8580-8618).....	4-54
4-38	Winch assembly, (hulls 8500-8519).....	4-56
4-39	Winch gear reducer (hulls 8500-8519).....	4-58
4-40	Winch brake (hulls 8500-8519).....	4-60
4-41	Winch, (hulls 8520-8560 and 8580-8618).....	4-62
4-42	Winch final drive assembly (hulls 8520-8560 and 8580-8618) disassembly and reassembly.....	4-63
4-43	Drum and winch base assembly (hulls 8520-8560 and 8580-8618) disassembly and reassembly.....	4-64
4-44	Primary drive assembly (hulls 8520-8560 and 8580-8618) disassembly and reassembly.....	4-66
4-45	Final planet assembly (hulls 8520-8560 and 8580-8618) disassembly and reassembly.....	4-68
4-46	Winch alignment.....	4-72
4-47	Ramp hoist pump, exploded view.....	4-74
4-48	Ramp hoist control valve, disassembly and reassembly.....	4-77
4-49	Ramp hoist counterbalance valve, cross-section view.....	4-79
4-50	Ramp system relief, valve (hulls 8500-8519) disassembly and reassembly.....	4-80
4-51	Ramp system relief valve (hulls 8520-8560 and 8580-8618) disassembly and reassembly.....	4-81
4-52	Ramp hydraulic check valve, cross-section view.....	4-82
4-53	Ramp hoist hand pump, cross-section view (hulls 8520-8560 and 8580-8618).....	4-83
4-54	Ramp locking cylinder, cutaway view (hulls 8540-8560 and 8580-8618).....	4-84
4-55	Ramp locking system two-way selector valve, exploded view (hulls 8540-8560 and 8580-8618).....	4-86
5-1	Heating propeller with a forge.....	5-1
5-2	Peening propeller on anvil.....	5-2
5-3	Badly damaged propeller on pitch block.....	5-3
5-4	Propeller on pitch block after straightening.....	5-4
5-5	Welding a replacement section to a propeller.....	5-5
5-6	Stuffing box (hulls 8540-8560 and 8580-8618) removal and installation.....	5-7
5-7	Anodes, removal and installation.....	5-8
5-8	Rudder and bearing, removal and installation.....	5-10
6-1	Radio set AN/SRC-32 (hulls 8540-8560 and 8580-8618).....	6-1
6-2	Radio set AN/VRC-46 (hulls 8540-8560 and 8580-8618).....	6-4
6-3	Radio set AN/VRC-47 (hulls 8540-8560 and 8580-8618).....	6-6
6-4	Radio set AN/GRC-106 (hulls 8540-8560 and 8580-8618).....	6-8
6-5	Remote magnetic heading system (hulls 8540-8560 and 8580-8618).....	6-10

CHAPTER 1

INTRODUCTION

Section I. GENERAL**1-1. Scope**

a. These instructions are published for the use of direct and general support maintenance personnel maintaining the Landing Craft, design LCM (8) MOD-1 (fig. 1-1). The instructions provide information on the maintenance of the equipment which is beyond the scope of the tools, personnel, or supplies normally available to using organizations.

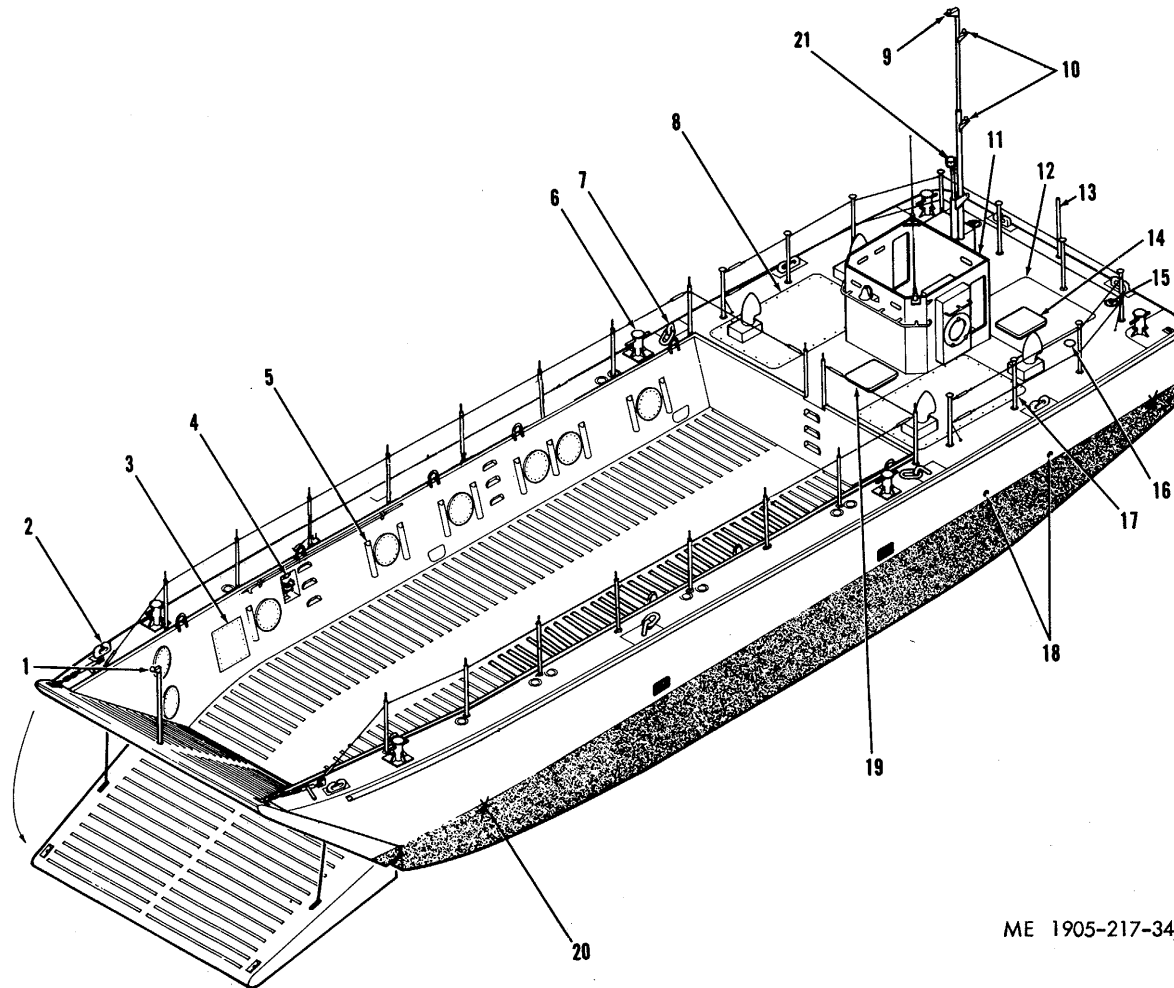

ME 1905-217-34/1-1

Figure 1-1. Landing craft, mechanized, diesel, design LCM (8) Mod-1-hull nos. 8540 through 8560 and 8580 through 8618.