 


TM 9-2350-366-20-1-1

TECHNICAL MANUAL

UNIT MAINTENANCE MANUAL

**FOR
OPPOSING FORCES SURROGATE VEHICLE (OSV)
M113A3/BMP-2
6920-01-420-4716 (EIC AUK)
HULL**

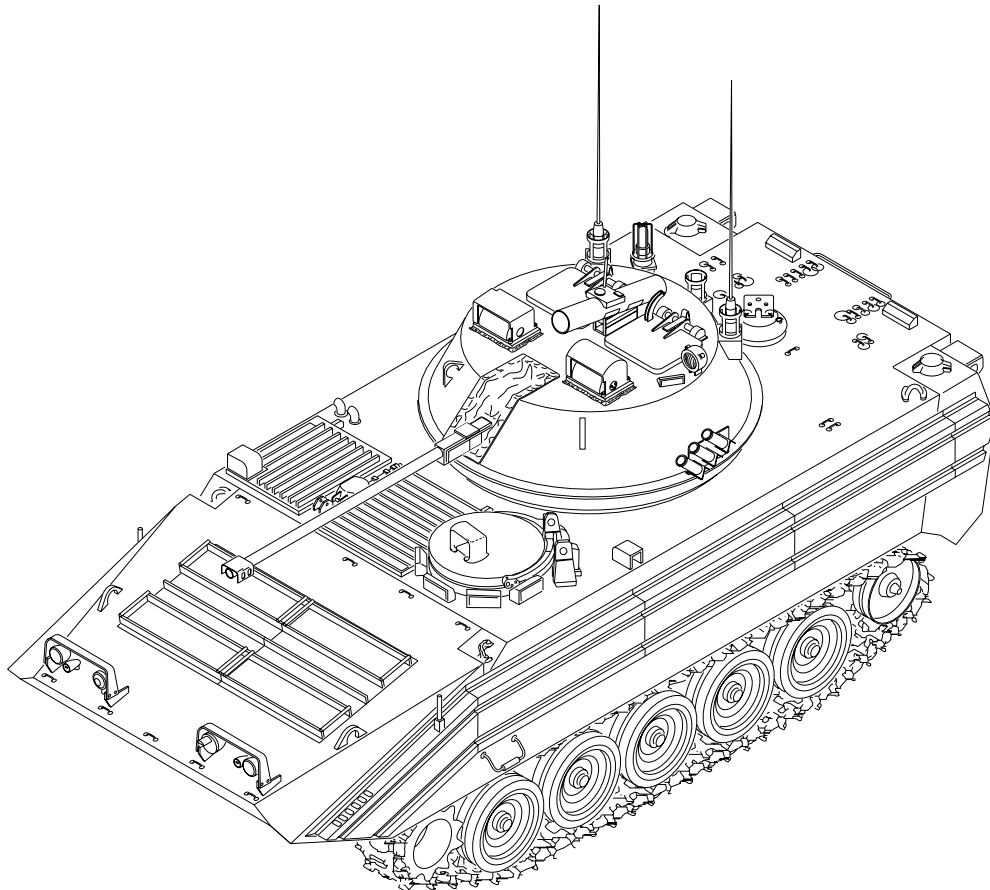

DISTRIBUTION STATEMENT A — Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

26 July 2001

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 26 JULY 2001

TECHNICAL MANUAL

UNIT MAINTENANCE MANUAL

OPPOSING FORCES SURROGATE VEHICLE (OSV)M113A3/BMP-2
NSN 6920-01-420-4716
(EIC AUK)
HULL

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Publications and Blank Forms), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeprs.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax, or E-mail your letter or DA Form 2028 directly to: AMSTA-LC-CI/TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The E-mail address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

DISTRIBUTION STATEMENT A — Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

WP Sequence No.

Volume 1

WARNING SUMMARY

HOW TO USE THIS MANUAL

CHAPTER 1 — UNIT INTRODUCTORY INFORMATION WITH THEORY OF OPERATION

GENERAL INFORMATION.....	0001 00
EQUIPMENT DESCRIPTION AND DATA.....	0002 00
THEORY OF OPERATION.....	0003 00
REPAIR PARTS, SPECIAL TOOLS, TMDE, AND SUPPORT EQUIPMENT.....	0004 00

CHAPTER 2 — UNIT TROUBLESHOOTING PROCEDURES

INTRODUCTION TO TROUBLESHOOTING.....	0005 00
MALFUNCTION/SYMPATOM INDEX WP.....	0006 00
ENGINE OVERHEATS.....	0007 00

TABLE OF CONTENTS (cont)

	<u>WP Sequence No.</u>
ENGINE DOESN'T CRANK.....	0008 00
ENGINE DOES NOT START (COLD WEATHER ONLY).....	0009 00
WAIT INDICATOR FLASHES DURING START ATTEMPTS (PREGLOW OR AFTERGLOW).....	0010 00
WAIT INDICATOR LIGHT DOESN'T LIGHT.....	0011 00
ENGINE CRANKS SLOWLY.....	0012 00
ENGINE CRANKS BUT WILL NOT START.....	0013 00
ENGINE CRANKS BUT WON'T START BELOW 40°F (GLOW PLUGS ARE USED).....	0014 00
ENGINE RUNS ROUGH, STALLS, OR DOES NOT PUT OUT FULL POWER.....	0015 00
GENERATOR MALFUNCTIONS AS INDICATED BY BATTERY/GENERATOR INDICATOR.....	0016 00
ENGINE OIL LOW PRESSURE INDICATOR COMES ON.....	0017 00
ENGINE OPERATES AT LESS THAN NORMAL TEMPERATURE.....	0018 00
ENGINE CHARGING SYSTEM SCHEMATIC.....	0019 00
ENGINE FUEL SYSTEM SCHEMATIC.....	0020 00
ENGINE STARTER CIRCUIT SCHEMATIC.....	0021 00
NO POWER TO TURRET.....	0022 00
NO EXTERIOR LIGHTS OPERATE.....	0023 00
BLACKOUT DRIVE LIGHT DOES NOT WORK.....	0024 00
SERVICE HEADLIGHTS DO NOT WORK.....	0025 00
SERVICE AND/OR BLACKOUT STOP LIGHTS MALFUNCTION.....	0026 00
BLACKOUT MARKER LIGHTS DO NOT WORK.....	0027 00
SERVICE TAILLIGHT(S) DO NOT WORK.....	0028 00
HORN DOES NOT WORK.....	0029 00
INSTRUMENT PANEL AND/OR TRANS CONTROLLER ILLUMINATION LIGHTS MALFUNCTION.....	0030 00
DOMELIGHT(S) DO NOT WORK.....	0031 00
ELECTRICAL INSTALLATION WIRING DIAGRAM.....	0032 00
MASTER SWITCH ON INDICATOR DOES NOT LIGHT.....	0033 00
FUEL LEVEL INDICATOR MALFUNCTIONS.....	0034 00
HIGH BEAM INDICATOR LIGHT DOES NOT WORK.....	0035 00
BATTERY/GENERATOR INDICATOR MALFUNCTIONS.....	0036 00
PARKING BRAKE INDICATOR MALFUNCTIONS.....	0037 00
COOLANT TEMP INDICATOR MALFUNCTIONS.....	0038 00
STEERING LOCKED INDICATOR MALFUNCTIONS.....	0039 00
ENGINE OIL LOW PRESSURE INDICATOR MALFUNCTIONS.....	0040 00
TRANSMISSION OIL LOW PRESSURE INDICATOR MALFUNCTIONS.....	0041 00
TRANS OIL HI TEMP INDICATOR MALFUNCTIONS.....	0042 00
ENGINE COOLANT LOW LEVEL INDICATOR MALFUNCTIONS.....	0043 00
TRANS FILTER CLOGGED INDICATOR MALFUNCTIONS.....	0044 00
INDICATORS SCHEMATIC.....	0045 00
DRIVER'S VENTILATION FAN DOES NOT BLOW AIR.....	0046 00

TABLE OF CONTENTS (cont)

	<u>WP Sequence No.</u>
CREW VENTILATION FAN DOES NOT BLOW AIR.....	0047 00
VENTILATION FAN SCHEMATIC.....	0048 00
VEHICLE MOVES WITH TRANSMISSION IN SL.....	0049 00
VEHICLE DOES NOT MOVE IN ANY SHIFT LEVER POSITION.....	0050 00
VEHICLE DRIFTS OR DOES NOT STEER.....	0051 00
SERVICE AND/OR PARKING BRAKE WILL NOT HOLD VEHICLE.....	0052 00
TRANSMISSION WILL NOT UPSHIFT OR SHIFTS ERRATICALLY IN 1-4 POSITION.....	0053 00
TRANSMISSION DOES NOT DOWNSHIFT IN 1-4 POSITION.....	0054 00
TRANSMISSION DOES NOT HOLD 1ST POSITION.....	0055 00
TRANSMISSION DOES NOT HOLD 2ND POSITION.....	0056 00
TRANSMISSION DOES NOT HOLD 3RD POSITION.....	0057 00
TRANSMISSION DOES NOT REVERSE.....	0058 00
TRANSMISSION DOES NOT PIVOT STEER.....	0059 00
TRANSMISSION HIGH TEMP INDICATOR COMES ON.....	0060 00
TRANSMISSION OIL LOW PRESSURE INDICATOR COMES ON.....	0061 00
TRANSMISSION SYSTEM SCHEMATIC.....	0062 00
STEERING LOCK MALFUNCTIONS.....	0063 00
STEERING LOCK SCHEMATIC.....	0064 00
BILGE PUMP AND/OR LIGHT DON'T WORK.....	0065 00
BILGE PUMP SCHEMATIC.....	0066 00
PERSONNEL HEATER MALFUNCTIONS.....	0067 00
PERSONNEL HEATER SCHEMATIC.....	0068 00
SPEEDOMETER MALFUNCTIONS.....	0069 00
TACHOMETER MALFUNCTIONS.....	0070 00
HOOK UP/REMOVE STE/ICE TEST SET TO DCA 6.....	0071 00
STE/ICE TEST 10 ENGINE RPM.....	0072 00
STE/ICE TEST 24 FUEL SUPPLY PRESSURE.....	0073 00
STE/ICE TEST 25 FUEL RETURN PRESSURE.....	0074 00
STE/ICE TEST 32 AIR BOX PRESSURE.....	0075 00
STE/ICE TEST 67 BATTERY VOLTAGE.....	0076 00
STE/ICE TEST 68 STARTER MOTOR VOLTAGE.....	0077 00
STE/ICE TEST 69 STARTER NEGATIVE CABLE VOLTAGE DROP.....	0078 00
STE/ICE TEST 70 STARTER SOLENOID VOLTAGE.....	0079 00
STE/ICE TEST 71 STARTER CURRENT (AVERAGE).....	0080 00
STE/ICE TEST 72 STARTER CURRENT (FIRST PEAK).....	0081 00
STE/ICE TEST 73 BATTERY RESISTANCE AND STE/ICE TEST 75 BATTERY RESISTANCE CHANGE (PACK).....	0082 00
STE/ICE TEST 74 STARTER CIRCUIT RESISTANCE.....	0083 00
STE/ICE TEST 80 BATTERY CURRENT.....	0084 00
STE/ICE TEST 82 GENERATOR OUTPUT VOLTAGE.....	0085 00

TABLE OF CONTENTS (cont)

	<u>WP Sequence No.</u>
STE/ICE TEST 83 GENERATOR FIELD VOLTAGE.....	0086 00
STE/ICE TEST 84 GENERATOR NEGATIVE CABLE VOLTAGE DROP.....	0087 00
STE/ICE BLANK DISPLAY DIAGNOSTIC TROUBLESHOOTING.....	0088 00
STE/ICE CONFIDENCE TEST DIAGNOSTIC TROUBLESHOOTING.....	0089 00
STE/ICE TEST 10, 12 AND 13 DIAGNOSTIC TROUBLESHOOTING.....	0090 00
DCA BATTERY VOLTAGE DIAGNOSTIC TROUBLESHOOTING.....	0091 00
DCA CURRENT SHUNT DIAGNOSTIC TROUBLESHOOTING.....	0092 00
STE/ICE TEST 24 FUEL SUPPLY PRESSURE DIAGNOSTIC TROUBLESHOOTING.....	0093 00
STE/ICE TEST 25 FUEL RETURN PRESSURE DIAGNOSTIC TROUBLESHOOTING.....	0094 00
STE/ICE TEST 32 AIR BOX PRESSURE DIAGNOSTIC TROUBLESHOOTING.....	0095 00
STE/ICE TEST 68 STARTER MOTOR VOLTAGE DIAGNOSTIC TROUBLESHOOTING.....	0096 00
STE/ICE TEST 69 STARTER NEGATIVE CABLE VOLTAGE DROP DIAGNOSTIC TROUBLESHOOTING.....	0097 00
STE/ICE TEST 70 STARTER SOLENOID VOLTAGE DIAGNOSTIC TROUBLESHOOTING.....	0098 00
STE/ICE TEST 82 GENERATOR OUTPUT VOLTAGE DIAGNOSTIC TROUBLESHOOTING.....	0099 00
STE/ICE TEST 83 GENERATOR FIELD VOLTAGE DIAGNOSTIC TROUBLESHOOTING.....	0100 00
STE/ICE TEST 84 GENERATOR NEGATIVE CABLE VOLTAGE DROP DIAGNOSTIC TROUBLESHOOTING.....	0101 00
STE/ICE SCHEMATIC.....	0102 00
 CHAPTER 3 — UNIT MAINTENANCE INSTRUCTIONS FOR VEHICLE HULL — GENERAL	
SERVICE UPON RECEIPT.....	0103 00
PREVENTIVE MAINTENANCE CHECKS AND SERVICES.....	0104 00
REPLACE DATAPLATES, STENCILS, MARKERS, AND DECALS.....	0105 00
 CHAPTER 4 — UNIT MAINTENANCE INSTRUCTIONS FOR ENGINE	
REMOVE/INSTALL POWER PLANT ASSEMBLY.....	0106 00
BLOCK POWER PLANT.....	0107 00
REPLACE ENGINE MOUNTS.....	0108 00
REPLACE LEFT AIR BOX DRAIN CHECK VALVE AND TUBES.....	0109 00
REPLACE RIGHT AIR BOX DRAIN CHECK VALVE AND TUBES.....	0110 00
REPLACE ENGINE LIFTING BRACKET.....	0111 00
REPLACE ENGINE OIL FILLER CAP.....	0112 00
REPLACE ENGINE OIL SAMPLING VALVE AND HOSE.....	0113 00
REPLACE OIL GAUGE ROD AND TUBE.....	0114 00
REPLACE STARTER.....	0115 00
 CHAPTER 5 — UNIT MAINTENANCE INSTRUCTIONS FOR FUEL SYSTEM	
REPLACE ENGINE FUEL PUMP.....	0116 00

TABLE OF CONTENTS (cont)

	<u>WP Sequence No.</u>
REPLACE FUEL SUPPLY PRESSURE TRANSDUCER.....	0117 00
REPLACE FUEL RETURN PRESSURE TRANSDUCER.....	0118 00
REPLACE TURBO OUTLET PRESSURE TRANSDUCER.....	0119 00
REPLACE AIR BOX PRESSURE TRANSDUCER.....	0120 00
REPLACE FUEL FILTER DIFFERENTIAL PRESSURE SWITCH.....	0121 00
REPLACE AUXILIARY TANK FLUID LEVEL DETECTOR.....	0122 00
DRAIN TANKS.....	0123 00
REPLACE FUEL QUANTITY TRANSMITTER.....	0124 00
REPLACE FUEL SELECT SWITCH TO GAUGE LEAD.....	0125 00
REPLACE GLOW PLUG HARNESS AND GLOW PLUGS.....	0126 00
REPLACE GLOW PLUG CONTROLLER.....	0127 00
REPLACE GLOW PLUG POWER HARNESS.....	0128 00
REPLACE GLOW PLUG CONTROLLER MOUNTING BRACKET.....	0129 00
REPLACE ENGINE FUEL SUPPLY HOSE.....	0130 00
REPLACE ENGINE FUEL RETURN HOSE.....	0131 00
REPLACE PRIMARY AND SECONDARY FUEL FILTERS AND BRACKET.....	0132 00
REPLACE PRIMARY AND SECONDARY FUEL FILTER ELEMENTS.....	0133 00
REPLACE FUEL SUPPLY PRESSURE TRANSDUCER.....	0134 00
REPLACE FUEL RETURN PRESSURE TRANSDUCER.....	0135 00
REPLACE FUEL FILTER DIFFERENTIAL PRESSURE SWITCH.....	0136 00
REPLACE GOVERNOR ASSEMBLY.....	0137 00
 CHAPTER 6 — UNIT MAINTENANCE INSTRUCTIONS FOR AIR CLEANER	
SERVICE AIR CLEANER FILTER ELEMENT.....	0138 00
REPLACE AIR CLEANER AND ELBOW.....	0139 00
REPAIR AIR CLEANER ASSEMBLY.....	0140 00
REPAIR AIR CLEANER RETAINER.....	0141 00
REPLACE AIR CLEANER RESTRICTION INDICATOR.....	0142 00
REPLACE AIR CLEANER RESTRICTION INDICATOR HOSE.....	0143 00
REMOVE/INSTALL AIR INTAKE ELBOW.....	0144 00
REPLACE GRILL AIR INTAKE ELBOW AND HOSE.....	0145 00
REPLACE EXHAUST EVACUATOR VALVE AND CONNECTOR.....	0146 00
ADJUST VENTILATING FAN DRIVE BELT.....	0147 00
REPLACE VENTILATING FAN DRIVE BELT.....	0148 00
 CHAPTER 7 — UNIT MAINTENANCE INSTRUCTIONS FOR EXHAUST SYSTEM	
REPLACE ENGINE EXHAUST ELBOWS AND DOUBLE FLEX JOINT.....	0149 00
REPAIR DOUBLE FLEX EXHAUST JOINT.....	0150 00
REPLACE MUFFLER EXTENSION AND CAP.....	0151 00
REPLACE EXHAUST MUFFLER AND BRACKET.....	0152 00
REPLACE ENGINE LEFT/RIGHT EXHAUST ELBOWS.....	0153 00
REPLACE LEFT/RIGHT TURBO EXHAUST PIPE HEAT SHIELD.....	0154 00

TABLE OF CONTENTS (cont)

WP Sequence No.

CHAPTER 8 — UNIT MAINTENANCE INSTRUCTIONS FOR RADIATOR AND EXPANSION TANK

DRAIN AND FILL COOLING SYSTEM.....0155 00
 CLEAN RADIATOR.....0156 00
 REPLACE RADIATOR AND PARTS.....0157 00
 REPLACE AUXILIARY TANK.....0158 00

CHAPTER 9 — UNIT MAINTENANCE INSTRUCTIONS FOR HEADERS/THERMOSTATS/ HOUSINGS

REPLACE THERMOSTATIC FAN SPEED SWITCH.....0159 00
 REPLACE UPPER COOLANT HOSE AND TUBE.....0160 00
 REPLACE RADIATOR OUTLET TUBE AND HOSE.....0161 00
 REPLACE BALANCE HOSE.....0162 00
 REPLACE DRAIN COCK AND HOSE.....0163 00
 REPLACE COOLANT AIR SEPARATOR.....0164 00
 REPLACE THERMOSTAT/COVER.....0165 00
 REPLACE THERMOSTAT TUBE/HOSES.....0166 00

CHAPTER 10 — UNIT MAINTENANCE INSTRUCTIONS FOR WATER PUMP

ADJUST COOLANT PUMP BELTS.....0167 00
 REPLACE COOLANT PUMP IDLER PULLEY/BELTS.....0168 00
 REPLACE ENGINE COOLANT PUMP.....0169 00

CHAPTER 11 — UNIT MAINTENANCE INSTRUCTIONS FOR GENERATOR

REPLACE GENERATOR TURNBUCKLE PARTS.....0170 00
 REPLACE GENERATOR/BRACKET.....0171 00
 ADJUST GENERATOR DRIVE BELT.....0172 00
 REPLACE GENERATOR DRIVE BELT.....0173 00
 REPLACE FLAT PULLEYS AND BEARINGS.....0174 00
 REPLACE IDLER ARM AND SPRING TENSIONER.....0175 00
 ADJUST VOLTAGE REGULATOR.....0176 00
 REPLACE REGULATOR ASSEMBLY.....0177 00
 REPLACE FAN AND GENERATOR VARIABLE SPEED DRIVE.....0178 00

CHAPTER 12 — UNIT MAINTENANCE INSTRUCTIONS FOR WIRING HARNESSSES

REMOVE/REPLACE WIRING HARNESS 1W13 (CIRCUIT BREAKER TO FAN SWITCH).....0179 00
 REMOVE/REPLACE WIRING HARNESS 1W19 (DRIVER'S FAN TO INSTRUMENT PANEL).....0180 00
 REMOVE/REPLACE WIRING HARNESS 1W3, TURRET POWER.....0181 00
 REMOVE/REPLACE CABLE ASSEMBLY 1W2, SPECIAL PURPOSE.....0182 00
 REMOVE/REPLACE WIRING HARNESS 1W1, DRIVERS COMMUNICATION BOX0183 00
 REPLACE WARNING PANEL WIRING HARNESS.....0184 00
 REPLACE RIGHT HEADLIGHT VEHICLE WIRING HARNESS.....0185 00

TABLE OF CONTENTS (cont)

	<u>WP Sequence No.</u>
REMOVE/REPLACE WIRING HARNESS 1W5 OR 1W6, HEADLIGHT EXTENSION	0186 00
REPLACE REAR MAIN WIRING HARNESS 1W4.....	0187 00
REPLACE TRANSMISSION CONTROLLER WIRING HARNESS.....	0188 00
REPAIR WIRING HARNESS.....	0189 00
REPLACE TRANSMISSION WIRING HARNESS.....	0190 00
REPLACE ENGINE WIRING HARNESS.....	0191 00
 CHAPTER 13 — UNIT MAINTENANCE INSTRUCTIONS FOR DISTRIBUTION BOX	
REPLACE MASTER SWITCH TO DISTRIBUTION BOX LEAD (CIRCUIT 49).....	0192 00
REPAIR DISTRIBUTION BOX.....	0193 00
REPLACE DISTRIBUTION BOX ASSEMBLY.....	0194 00

Volume 2

CHAPTER 14 — UNIT MAINTENANCE INSTRUCTIONS FOR GAUGES	
SERVICE SPEEDOMETER/TACHOMETER CABLE FLEXIBLE CORE.....	0195 00
REPLACE SPEEDOMETER.....	0196 00
REPLACE SPEEDOMETER CABLE AND ADAPTER.....	0197 00
REPAIR SPEEDOMETER CABLE.....	0198 00
REPLACE TACHOMETER.....	0199 00
REPLACE TACHOMETER ENGINE ADAPTER.....	0200 00
REPLACE TACHOMETER CABLE.....	0201 00
REPAIR TACHOMETER CABLE.....	0202 00
REPLACE DRIVER'S LEVEL INDICATOR AND MOUNT PLATE.....	0203 00
 CHAPTER 15 — UNIT MAINTENANCE INSTRUCTIONS FOR INSTRUMENT AND WARNING INDICATORS	
REPLACE ENGINE OIL LOW PRESSURE TRANSMITTER AND HARDWARE.....	0204 00
REPLACE COOLANT TEMPERATURE TRANSMITTER.....	0205 00
REPLACE TRANSMISSION OIL HIGH TEMPERATURE SWITCH.....	0206 00
REPLACE HOSES FROM THERMOSTAT TO VARIABLE SPEED DRIVE.....	0207 00
REPLACE TRANSMISSION OIL SUPPLY AND RETURN HOSES.....	0208 00
REPLACE TURBO OUTLET PRESSURE TRANSDUCER.....	0209 00
REPLACE AIR BOX PRESSURE TRANSDUCER.....	0210 00
REPLACE INSTRUMENT PANEL MOUNTS AND GROUND LEAD.....	0211 00
REPLACE WARNING PANEL LIGHTS.....	0212 00
REPLACE WARNING LIGHT PANEL.....	0213 00
REPLACE WARNING LIGHT PANEL ASSEMBLY.....	0214 00
REPLACE INSTRUMENT PANEL SPECIAL PURPOSE CABLE.....	0215 00
REPLACE INSTRUMENT PANEL BATTERY-GENERATOR GAUGE WIRING HARNESS.....	0216 00
REPLACE INSTRUMENT WARNING LIGHT PANEL.....	0217 00
REPLACE INSTRUMENT PANEL WARNING LIGHTS.....	0218 00

TABLE OF CONTENTS (cont)

	<u>WP Sequence No.</u>
REPLACE PANEL LIGHTS AND INDICATOR LIGHTS.....	0219 00
REPLACE INSTRUMENT PANEL ASSEMBLY.....	0220 00
REPLACE INSTRUMENT PANEL GAUGES.....	0221 00
 CHAPTER 16 — UNIT MAINTENANCE INSTRUCTIONS FOR VEHICLE LIGHTS	
REPAIR DOME LIGHT.....	0222 00
REPLACE DOME LIGHT LENS.....	0223 00
REPLACE REAR DOME LIGHT SWITCH AND CIRCUIT BREAKER.....	0224 00
REPLACE DOMELIGHT INTERLOCK SWITCH.....	0225 00
REPAIR BLACKOUT MARKER LIGHT.....	0226 00
REPLACE BLACKOUT MARKER LIGHT.....	0227 00
REPAIR BLACKOUT HEADLIGHT.....	0228 00
REPLACE BLACKOUT HEADLIGHT.....	0229 00
REPAIR SERVICE HEADLIGHTS.....	0230 00
REPLACE SERVICE HEADLIGHTS.....	0231 00
REPLACE STOP LIGHT-TAIL LIGHT AND GUARDS.....	0232 00
REPAIR LEFT STOP LIGHT-TAIL LIGHT.....	0233 00
REPAIR RIGHT STOP LIGHT-TAIL LIGHT.....	0234 00
REPLACE HEADLIGHT HIGH BEAM SELECTOR SWITCH.....	0235 00
REPLACE DOME LIGHT.....	0236 00
 CHAPTER 17 — UNIT MAINTENANCE INSTRUCTIONS FOR BATTERIES	
DISCONNECT/CONNECT BATTERY GROUND STRAP.....	0237 00
REPLACE BATTERY LEADS AND TERMINALS.....	0238 00
REPLACE BATTERIES AND RETAINERS.....	0239 00
REPAIR BATTERY BOX.....	0240 00
REPLACE BATTERY TO MASTER SWITCH LEAD (CIRCUIT 6).....	0241 00
 CHAPTER 18 — UNIT MAINTENANCE INSTRUCTIONS FOR AUXILIARY POWER	
REPLACE AUXILIARY POWER (SLAVE) RECEPTACLE.....	0242 00
REPLACE AUXILIARY POWER (SLAVE) RECEPTACLE GROUND LEAD.....	0243 00
REPLACE MASTER SWITCH TO AUXILIARY POWER RECEPTACLE LEAD (CIRCUIT 50).....	0244 00
 CHAPTER 19 — UNIT MAINTENANCE INSTRUCTIONS FOR SWITCHES	
REPLACE MASTER SWITCH.....	0245 00
REPLACE MASTER SWITCH PANEL ASSEMBLY.....	0246 00
REPLACE INSTRUMENT PANEL ON-OFF SWITCHES.....	0247 00
REPLACE MAIN LIGHT SWITCH.....	0248 00
REPLACE ENGINE START SWITCH.....	0249 00
REPLACE HORN SWITCH.....	0250 00
REPLACE CREW FAN SWITCH AND CIRCUIT BREAKER.....	0251 00
REMOVE/REPLACE DRIVER’S HATCH SWITCH 1S9.....	0252 00

TABLE OF CONTENTS (cont)

	<u>WP Sequence No.</u>
REMOVE/REPLACE DRIVER’S HATCH SWITCH 1S6.....	0253 00
REPLACE TRANSMISSION OIL HIGH TEMPERATURE SWITCH.....	0254 00
REPLACE GENERATOR FIELD PRESSURE SWITCH.....	0255 00
REPLACE STARTER RELAY SWITCH.....	0256 00
REPLACE CIRCUIT BREAKER.....	0257 00
REPLACE BILGE PUMP CIRCUIT BREAKER.....	0258 00
 CHAPTER 20 — UNIT MAINTENANCE INSTRUCTIONS FOR VENTILATING FANS	
REMOVE/INSTALL CREW VENTILATION FAN ASSEMBLY.....	0259 00
REMOVE/REPLACE DRIVER’S VENTILATION FAN ASSEMBLY MOUNTING BRACKET AND HARDWARE.....	0260 00
REMOVE/INSTALL EXTERNAL FRESH AIR DUCT ASSEMBLY.....	0261 00
REMOVE/INSTALL CREW INTERNAL FRESH AIR DUCT ASSEMBLY.....	0262 00
REMOVE/INSTALL EXTERNAL FRESH AIR SYSTEM FILTER.....	0263 00
 CHAPTER 21 — UNIT MAINTENANCE INSTRUCTIONS FOR TRANSMISSION	
REPLACE TRANSMISSION OIL DRAIN TUBES AND BRACKET.....	0264 00
REPLACE TRANSMISSION MOUNTS.....	026500
REPLACE TRANSMISSION RANGE CONTROLLER/BRACKET.....	0266 00
 CHAPTER 22 — UNIT MAINTENANCE INSTRUCTIONS FOR TRANSFER AND FINAL DRIVES	
OPERATIONAL CHECK/ADJUST TRANSMISSION STEERING.....	0267 00
REPLACE TRANSMISSION OIL LEVEL DIPSTICK, TUBE, AND ADAPTER.....	0268 00
REPLACE TRANSMISSION OIL AND OIL FILTER ELEMENT.....	0269 00
REPLACE TRANSMISSION OIL COOLER HOSES, FITTINGS, AND MOUNTING.....	0270 00
REPLACE TRANSMISSION OIL SAMPLING VALVE AND PRESSURE SWITCH.....	0271 00
REPLACE DIFFERENTIAL PRESSURE SWITCH AND BYPASS PLUG.....	0272 00
REPLACE FINAL DRIVE FILLER TUBE AND DIPSTICK.....	0273 00
REPLACE FINAL DRIVE.....	0274 00
REPLACE FINAL DRIVE DIFFERENTIAL OIL SEAL.....	027500
REPLACE PROPELLER SHAFT AND UNIVERSAL JOINTS.....	0276 00
 CHAPTER 23 — UNIT MAINTENANCE INSTRUCTIONS FOR BRAKES	
ADJUST PARKING BRAKE.....	0277 00
ADJUST SERVICE BRAKE CONTROL LINKAGE.....	0278 00
ADJUST TRANSMISSION BRAKES.....	0279 00
CHECK TRANSMISSION BRAKE ADJUSTMENT.....	0280 00
REPLACE PARKING BRAKE CONTROL LEVER ASSEMBLY.....	0281 00
REPLACE SERVICE BRAKE CONTROL LINKAGE.....	0282 00
REPLACE PARKING BRAKE CONTROL CABLE ASSEMBLY.....	0283 00
REPLACE UPPER AND LOWER SERVICE BRAKE PEDAL.....	0284 00
REPLACE STOP SWITCH.....	0285 00

TABLE OF CONTENTS (cont)

	<u>WP Sequence No.</u>
REPLACE HORN AND GROUND LEAD.....	0318 00
REPLACE UTILITY OUTLET RECEPTACLE.....	0319 00
REPLACE POWER PLANT GRILL SCREEN.....	0320 00
REMOVE/REPLACE ENGINE ACCESS COVER PLATE SEAL.....	0321 00
REPLACE TOWING HOOK AND EYE.....	0322 00
REPLACE REAR TIEDOWN PLATES.....	032300
REPLACE LIFTING EYE.....	0324 00
REPLACE HEADLIGHT GUARD.....	0325 00
REMOVE/REPLACE REAR DOOR CATCH HOOKS.....	0326 00
REMOVE/REPLACE REAR DOOR BUMPER.....	0327 00
REMOVE/REPLACE RIGHT REAR DOOR HANDLES, HINGES, LATCHES, AND CHAIN.....	0328 00
REPLACE REAR DOORS, HINGES, AND GASKETS.....	0329 00
REPLACE LEFT REAR DOOR INSIDE HINGES AND LATCH.....	0330 00
ADJUST TOW START CONTROL CABLE ASSEMBLY.....	0331 00
REPLACE TOW START CONTROL ASSEMBLY AND BEARING.....	0332 00
REPLACE TOW START CONTROL ASSEMBLY COVER.....	0333 00
 CHAPTER 29 — UNIT MAINTENANCE INSTRUCTIONS FOR HULL DRAIN PLUGS	
REPLACE HULL DRAIN PLUGS.....	0334 00
 CHAPTER 30 — UNIT MAINTENANCE INSTRUCTIONS FOR POWER PLANT GRILL	
REMOVE/INSTALL POWER PLANT GRILLE.....	0335 00
INSPECT POWER PLANT SLING.....	0336 00
 CHAPTER 31 — UNIT MAINTENANCE INSTRUCTIONS FOR DRIVER’S HATCH AND FLOOR PLATES	
REPLACE DRIVER’S HATCH CUSHION PAD.....	0337 00
REPLACE DRIVER’S HATCH INTERIOR LOCK AND LATCH.....	0338 00
REPLACE VEHICLE PERISCOPE LOCKS AND SEALS.....	0339 00
REPAIR DRIVER’S HATCH.....	0340 00
REPLACE REAR COMPARTMENT AIR VENTILATOR.....	0341 00
REPLACE DRIVER’S COMPARTMENT FLOOR PLATES.....	0342 00
REPLACE FLOOR PLATES/RUBBER STRIPS.....	0343 00
 CHAPTER 32 — UNIT MAINTENANCE INSTRUCTIONS FOR TURRET SHIELD	
REPAIR TURRET SHIELD DOOR LATCH ASSEMBLY.....	0344 00
REPLACE TURRET SHIELD DOOR.....	0345 00
REPLACE TURRET SHIELD DOOR LOWER TRACKS.....	0346 00
REPLACE TURRET SHIELD DOOR UPPER TRACK (EAK).....	0347 00
REPLACE TURRET SHIELD DOOR LATCH STRIKE.....	0348 00
REPLACE TURRET SHIELD DOOR SWITCH ASSEMBLY.....	0349 00
REPLACE RIGHT TURRET SHIELD PANEL.....	0350 00

TABLE OF CONTENTS (cont)

	<u>WP Sequence No.</u>
REPLACE LEFT TURRET SHIELD PANEL.....	0351 00
 CHAPTER 33 — UNIT MAINTENANCE INSTRUCTIONS FOR SHOCK ABSORBERS	
REPLACE SHOCK ABSORBER.....	0352 00
REPLACE SHOCK ABSORBER MOUNT.....	0353 00
REPLACE SHOCK ABSORBER PIN.....	0354 00
 CHAPTER 34 — UNIT MAINTENANCE INSTRUCTIONS FOR BILGE PUMPS	
REPLACE FRONT BILGE PUMP PIPES.....	0355 00
REPLACE FRONT BILGE PUMP AND STRAINER.....	0356 00
REPLACE FRONT BILGE VALVE.....	0357 00
 CHAPTER 35 — UNIT MAINTENANCE INSTRUCTIONS FOR SEATS	
REPLACE PERSONNEL SEATS, BACKRESTS, CUSHIONS, AND BELTS.....	0358 00
REPLACE DRIVER’S SEAT ASSEMBLY.....	0359 00
REPAIR DRIVER’S SEAT.....	0360 00
REPLACE DRIVER’S SEAT BACK ASSEMBLY.....	0361 00
REPAIR DRIVER’S SEAT BACK ASSEMBLY.....	0362 00
REPLACE DRIVER’S SEAT IMPACT ABSORBER.....	0363 00
REPLACE DRIVER’S SEAT POST ASSEMBLY.....	0364 00
REPAIR DRIVER’S SEAT POST ASSEMBLY.....	0365 00
REPLACE DRIVER’S FOOTREST.....	0366 00
REPLACE OILCAN BRACKET.....	0367 00
 CHAPTER 36 — UNIT MAINTENANCE INSTRUCTIONS FOR PERSONNEL HEATER	
REPAIR PERSONNEL HEATER DUCT.....	0368 00
REPLACE PERSONNEL HEATER DUCT AND HOSES.....	0369 00
REPAIR PERSONNEL HEATER ASSEMBLY.....	0370 00
REPLACE PERSONNEL HEATER ASSEMBLY.....	0371 00
REPAIR PERSONNEL HEATER CONTROL BOX.....	0372 00
REPLACE PERSONNEL HEATER CONTROL BOX.....	0373 00
REPLACE FUEL PUMP TO BULKHEAD CONNECTION HOSE.....	0374 00
REPLACE PERSONNEL HEATER FUEL FILTER/BRACKET.....	0375 00
REPLACE PERSONNEL HEATER FUEL PUMP.....	0376 00
REPLACE PERSONNEL HEATER FUEL PUMP HOSE.....	0377 00
REPLACE HEATER/FILTER FUEL SUPPLY HOSES.....	0378 00
REPLACE PERSONNEL HEATER FUEL TUBE.....	0379 00
REPLACE HEATER AIR INTAKE AND EXHAUST PIPES.....	0380 00
REPLACE FUEL SHUT-OFF VALVE ASSEMBLY.....	0381 00
SERVICE PERSONNEL HEATER FUEL FILTER.....	0382 00
SERVICE PERSONNEL HEATER FUEL PUMP.....	0383 00
BLEED AIR FROM PERSONNEL HEATER FUEL LINES.....	0384 00

TABLE OF CONTENTS (cont)

WP Sequence No.

CHAPTER 37 — UNIT MAINTENANCE INSTRUCTIONS FOR STE/ICE COMPONENTS

REPLACE STE/ICE PULSE TACHOMETER.....	0385 00
REPLACE STE/ICE SHUNT.....	0386 00
REPLACE STE/ICE DISTRIBUTION BOX.....	0387 00
REPLACE STE/ICE CREW WIRING HARNESS.....	0388 00
REPLACE STE/ICE ENGINE WIRING HARNESS.....	0389 00

CHAPTER 38 — UNIT MAINTENANCE INSTRUCTIONS FOR FIRE EXTINGUISHERS

REPLACE FIRE EXTINGUISHER CYLINDER AND MOUNT.....	0390 00
REPLACE CYLINDER DISCHARGE TUBES.....	0391 00
REPLACE EXTERNAL HANDLE SHIELD.....	0392 00
REPLACE FIRE EXTINGUISHER CONTROL VALVE AND EXTERNAL HANDLE.....	0393 00
REPLACE EXTERNAL CABLE TUBE.....	0394 00

CHAPTER 39 — UNIT SUPPORTING INFORMATION

REFERENCES.....	0395 00
MAINTENANCE ALLOCATION CHART (MAC).....	0396 00
TOOL IDENTIFICATION LIST.....	0397 00
TORQUE LIMITS.....	0398 00
EXPENDABLE AND DURABLE ITEMS LIST.....	0399 00
DATAPLATES, STENCILS, MARKERS AND DECALS.....	0400 00
GENERAL MAINTENANCE INSTRUCTIONS.....	0401 00

HOW TO USE THIS MANUAL

HOW TO USE THIS MANUAL

The safest, easiest, and best way to care for, operate, and maintain the OSV is to use this manual. Learning to use this manual is as easy as reading it. Knowing what is in this manual and how to use it will save you time. Becoming familiar with the work, procedures, and cautions will help you in your job and reduce your exposure to unnecessary hazards.

WHERE DO YOU START

This TM is divided into chapters and front and rear matter. The chapters are further divided into Work Packages (WPs). Go to the area within the manual that covers what you are to do and follow the instructions. Be sure to read and follow the Warnings, Cautions and Notes.

HOW THIS MANUAL IS ORGANIZED

The WARNING SUMMARY section provides safety and first aid information. This section includes general warnings not found in the TM text and a list of the most important detailed warnings extracted from the WPs. All of these warnings cover hazards that could kill or injure personnel.

The TABLE OF CONTENTS lists the WPs in each chapter.

CHAPTER 1 covers General Information, Location and Description, Equipment Data and Theory of operation. The Equipment Description WP gives a brief description of major parts and features of the vehicle. The Theory of Operation WP provides information that will help you understand how the vehicle components work.

CHAPTER 2 contains the troubleshooting procedures that are used to find the cause of vehicle malfunctions.

CHAPTERS 3 through 38 include the maintenance WPs.

The INDEX is an alphabetical listing of all the major controls, procedures, indicators, systems, and subsystems covered in this manual. Each entry is cross-referenced to the WP number and page number.

DA FORM 2028 is used to report errors and to recommend improvements for procedures in this manual. Three blank DA Forms 2028 are in the back of this manual.

The back cover includes a METRIC CONVERSION CHART that can be used to convert U.S. customary measurements to their metric equivalents. Measurements in this manual are given in U.S. customary units with metric units in parentheses.

HOW TO USE THE WORK PACKAGES

Pick a key word from the vehicle part or system to be used. Look in the INDEX for this key word or the name of the action you will perform. The INDEX lists each WP under one or more headings. Each entry is cross-referenced to the WP number. Go to the WP indicated.

How to read the WP

 
WPs provide either descriptive/supporting information or detailed procedures for operating and maintaining the equipment.

Pay attention to all **warnings**, **cautions** and **notes**. These can appear in all types of procedures. They help you avoid harm to yourself, other personnel, and equipment. They also tell you things you should know about the procedure.

Before you start a procedure, get all the tools, supplies, manuals, and personnel you need to do the procedure. These items will be listed in the INITIAL SETUP of the WP.

HOW TO USE THIS MANUAL (cont)

Read the INITIAL SETUP section carefully before you start any procedure. Make sure you have the required MATERIALS/PARTS needed to do the task such as sealants, gaskets, lockwashers or other parts. See sample below:

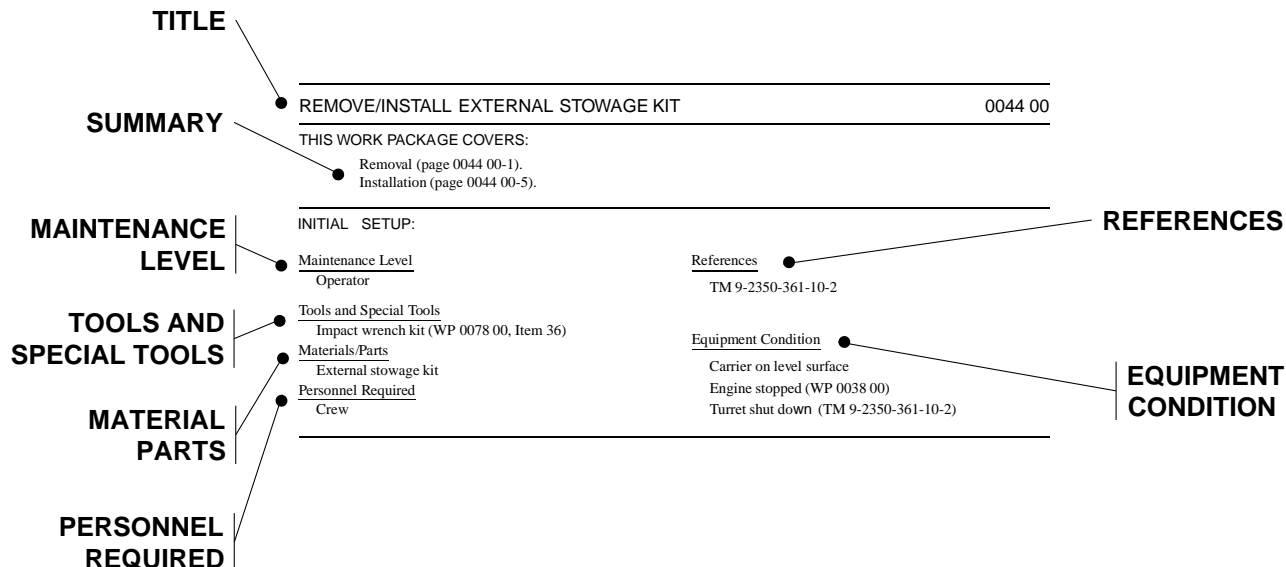

INITIAL SETUP LEGEND

TITLE	The name of the procedure.
SUMMARY	A listing of the general actions to be performed, cross-referenced to the page where each action begins.
MAINTENANCE LEVEL	The level of maintenance authorized to perform the procedures in the WP.
TOOLS AND SPECIAL TOOLS	The tools and equipment needed to do the procedures in the WP.
MATERIALS/PARTS	The supplies and parts needed to do the procedures in the WP.
PERSONNEL REQUIRED	The personnel needed to do the procedures in the WP.
REFERENCES	Other WPs, TMs, and publications you will need to do the procedures in the WP.
EQUIPMENT CONDITION	Any special equipment conditions required before the procedure can be started.

Start with step 1 and do each step in the order given. Numbered steps tell you what to do.


Look at the illustrations. Locators show you where the equipment and parts are located on the vehicle. Closeup illustrations show the details you need to do the procedure.

HOW TO USE THIS MANUAL (cont)

The words END OF TASK will tell you when you have finished the procedure. See sample below:

STOW/UNSTOW STINGER MISSILES	Continued	0011 00
------------------------------	-----------	---------

WARNING



Unsecured missiles can fall and strike personnel during vehicle operation.
Make sure stowage clamps securely hold missiles.

CAUTION

No BCU s shall be installed in missiles when missiles are stowed in racks. BCU s shall not be installed in missiles until after soldiers exit carrier.
Missiles in cases are easily damaged. Handle missile cases with care. Do not drop missiles. Do not step on missiles.

NOTE

M6 carriers hold maximum of six STINGER missiles. Four are stowed equipped with gripstocks and two are stowed without gripstocks.
Upper and middle missile racks are raised and lowered the same way.
Check position of missiles every 200 miles. Reposition missiles and/or adjust straps as required.

STEP


2. RAISE UPPER AND MIDDLE RACKS.

WARNING

CAUTION


NOTE

LOCATOR

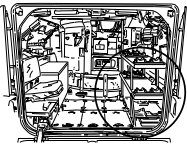

SUBSTEP

a. Lift up two levers to release two straps on rack.

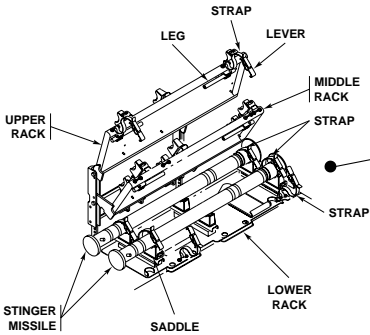

CLOSE-UP

MAINTENANCE STEPS LEGEND

STEP	This tells you WHAT to do.
SUBSTEP	This tells you HOW to do it.
WARNING	This describes some danger to yourself and other personnel.
CAUTION	This describes possible damage to equipment.
NOTE	This gives you additional information which may not be obvious the first time you do the procedure.
LOCATOR	An illustration that locates the equipment on the hull.
CLOSEUP	A detailed illustration of the equipment.

Preventive Maintenance Checks and Services (PMCS) WP

The PMCS procedures are performed on a daily, weekly, and monthly basis to keep the vehicle operating properly.

There are five types of PMCS for the vehicle, as follows:


The **BEFORE (B)** PMCS must be done before you operate the vehicle.


The **DURING (D)** PMCS must be done when you operate the vehicle. Monitor the vehicle systems as you perform your mission. Perform **DURING (D)** PMCS on a system only when the system is required to complete your mission.

HOW TO USE THIS MANUAL (cont)

The AFTER (A) PMCS must be done after completing your mission.
 The WEEKLY (W) PMCS must be done weekly.
 The MONTHLY (M) PMCS must be done monthly.

MAN-HOUR		CREWMEMBER		EQUIPMENT NOT READY/AVAILABLE IF:	
ITEM NUMBER	INTERVAL	MAN-HOUR	ITEM TO BE CHECKED OR SERVICED	CREWMEMBER PROCEDURE	EQUIPMENT NOT READY/AVAILABLE IF:
19	Before		Internal Fire Extinguisher	ASSISTANT GUNNER a. Check that pressure gauges on both squad area fire extinguishers read at or above minimum pressure on chart. Estimate temperature in squad area.	Pressure gauge on squad area fire extinguisher reads below pressure shown on chart.

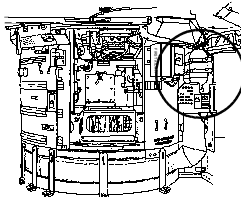

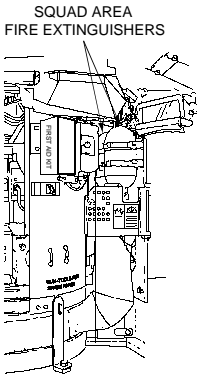

SQUAD AREA
FIRE EXTINGUISHERS

LEGEND

- ITEM NUMBER** This is the sequence for doing the PMCS.
- INTERVAL** This tells you when to perform the PMCS check.
- MAN-HOUR** When equipment must be lubricated, this tells you the man-hours that will be required for the lubrication procedure.
- ITEM TO BE CHECKED OR SERVICED** The name of the OSV system or component being checked.
- CREWMEMBER** This tells you which crewmember/mechanic must perform the check.
- PROCEDURE** This tells you what needs to be done.
- EQUIPMENT NOT READY/AVAILABLE IF:** This tells you what conditions make the OSV NOT READY/AVAILABLE. These conditions will have to be corrected before the system is capable of performing its primary mission.

HOW TO USE THIS MANUAL (cont)

DEFINITION OF WP TERMS

Warnings, Cautions, And Notes

Pay attention to all warnings and cautions within the WP. Ignoring a warning could cause death or injury to yourself or other personnel. Ignoring a caution could cause damage to equipment. Notes contain facts to make the procedure easier. Warnings, cautions, and notes always appear just above the step to which they apply.

WARNINGS	Call attention to things that could kill or injure personnel. Warnings are also listed in the Warning Summary section in the front of the manual.
CAUTIONS	Call attention to actions or materials that could damage equipment.
NOTES	Contain important facts to make the procedure easier.

Helper

Helpers are needed in procedures that require more than one person. A helper may be needed to help lift objects or act as an outside observer.

 
If a helper is needed to perform a procedure, the INITIAL SETUP will list “Helper (H)” under the PERSONNEL REQUIRED heading.

If a helper assists with a step, the step will include: “Have helper assist”.

If a helper performs the action alone, the step will start with “(H):”.


LOCATION TERMS

The terms “front”, “rear”, “left”, and “right” are used to indicate where items are located on the vehicle. Think of these locations as if you were standing behind the vehicle facing the inside of the vehicle or sitting in the vehicle facing the 30mm gun.

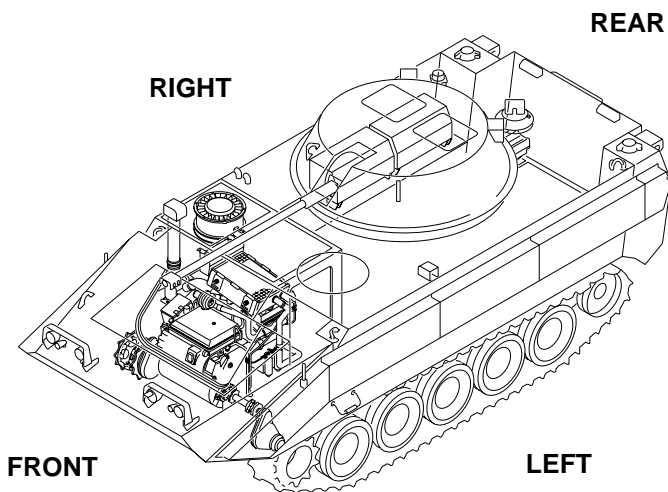

HOW TO USE THIS MANUAL (cont)

 If you are working with power unit items think of the location as if you were standing at the end of the transmission facing the engine flywheel. This point of reference applies whether the engine is in or out of the vehicle.

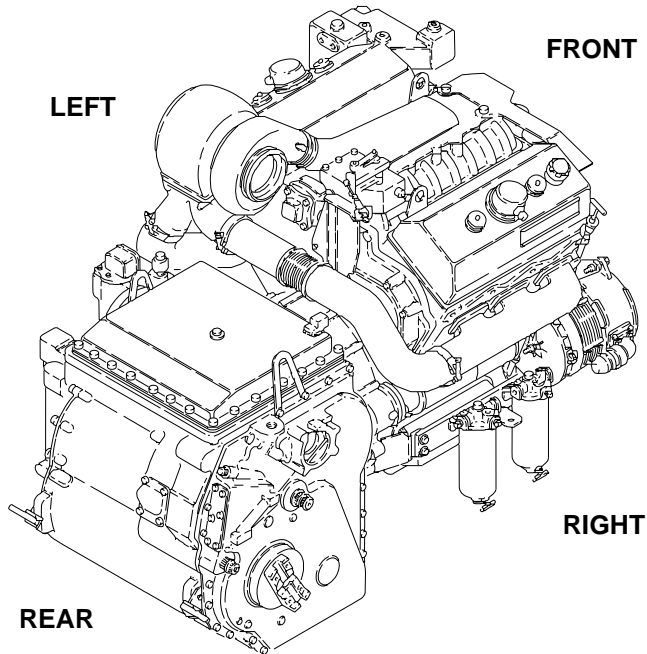

REFERENCES

 
References within a task refer to a different manual or to another task in the same manual. They are found in the Initial Setup and in task steps. Two frequent WP references are:

MASTER SWITCH OFF (TM 9-2350-366-10-1)

Battery ground lead disconnected (WP 0237 00)

GENERAL MAINTENANCE

Cleaning, inspecting, checking for leaks, and similar procedures which apply to most tasks are found in WP 0401 00, GENERAL MAINTENANCE INSTRUCTIONS. Use the steps in that WP to clean and inspect any part being removed, repaired, or installed. Special cleaning, if required, will be covered in the WP task. Below is a step that would require general cleaning.

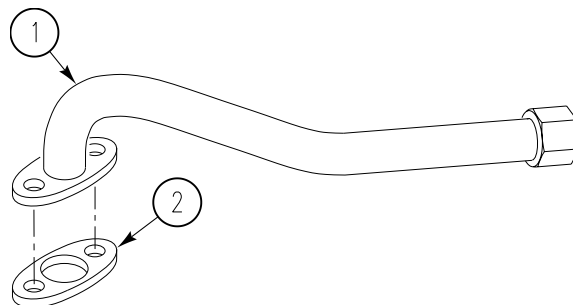

5. REMOVE GASKET (2) FROM UPPER TUBE FLANGE (1)

After doing this step, clean the mating surface of the tube flange with cleaning compound and a wiping rag in accordance with WP 0401 00. In other tasks, hoses or rubber seals would need to be checked for leaks or damage.

HOW TO USE THIS MANUAL (cont)

HOW TO USE THE REPAIR PARTS AND SPECIAL TOOLS LIST (RPSTL)

The RPSTL TM 9-2350-366-24P-1 gives the National Stock Number (NSN) required to order parts used in maintenance tasks. To use the RPSTL to identify and order a part do the following:

1. In this manual, go to first page of task (WP) to be performed.
2. Find Materials/Parts under INITIAL SETUP and note the NSNs for parts that need replacement. If needed, find the illustrated part in the task steps.
3. Go to the RPSTL and find the same illustrated part. Look up the item number for that part in the listing for that figure. Use the figure and item number index to find the National Stock Number (NSN).
4. If you find a part is damaged, go to the RPSTL and find the SMR code for the item. If the SMR code does not authorize you to repair the item, reassemble it and send it to the authorized level of maintenance.