

# TM 5-4320-248-25P

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

---

ORGANIZATIONAL, DIRECT AND  
GENERAL SUPPORT, AND DEPOT  
MAINTENANCE REPAIR PARTS AND  
SPECIAL TOOLS LIST

FUEL SYSTEM, TRANSFER, PORTABLE,  
PUMP, CENTRIFUGAL, 100 GPM; TWO  
DISCHARGE HOSE ASSEMBLIES;  
ONE SUCTION HOSE ASSEMBLY;  
TWO NON-AUTOMATIC NOZZLE  
ASSEMBLIES; ONE MONITOR GO-NO-GO  
GAGE, 100 GPM; 3 HP GASOLINE ENGINE;  
ONE BASKET ASSEMBLY KENCO  
MODEL 114MX1A FSN 4320-900-8544

---

HEADQUARTERS, DEPARTMENT OF THE ARMY

FEBRUARY 1968

**Organizational, Direct And General Support, And Depot  
Maintenance**

**Repair Parts And Special Tools List**

**FUEL SYSTEM, TRANSFER, PORTABLE, PUMP, CENTRIFUGAL,  
100 GPM; TWO DISCHARGE HOSE ASSEMBLIES; ONE SUCTION  
HOSE ASSEMBLY; TWO NON-AUTOMATIC NOZZLE ASSEM-  
BLIES; ONE MONITOR GO-NO-GO GAGE, 100 GPM; 3 HP  
GASOLINE ENGINE; ONE BASKET ASSEMBLY KENCO MODEL  
114MX1A  
FSN 4320-900-8544**

**CURRENT AS OF NOVEMBER 1967**

	Paragraph	Page
SECTION I. INTRODUCTION		
Scope -----	1	iii
General - - - - -	2	iii
Explanation of columns-- - - - -	3	iii
Special information-- - - - -	4	vi
How to locate repair parts -- - - - -	5	vi
Abbreviations -----	6	vi
Federal supply codes for manufactures-----	7	vi
Recommendations for maintenance manual improvements -----	8	vi
II. PRESCRIBED LOAD ALLOWANCE - - - - -		vii
III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR ORGANIZATIONAL MAINTENANCE (NOT APPLICABLE)		
SECTION IV. REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE		
Group 01. Engine		
0100 Engine assembly -----	1	1
0106 Engine lubrication system -----	1	1
0107 Engine starting system -----	2	2
03. Fuel System		
0 3 0 1 C a r b u r e t o r -----	3	3
0304 Air cleaner -----	3	3
0306 Tanks, lines, and fittings-----	4	4
0308 Engine speed governor-----	4	4
04. Exhaust System		
0 4 0 1 M u f f l e r a n d p i p e s -----	5	5
05. Cooling System		
0 5 0 2 S h r o u d s -----	5	5
06. Electrical System		
0605 Ignition components -----	6	6

	Page
Group 15. Frame	
1501 Frame assembly -----	8
22. Body Chassis or Hull and Accessory Items	
2202 Accessory items -----	9
2210 Data plates and instruction holders -----	10
72. Dispensing and Servicing Equipment Components	
7202 Pumps and meters -----	11
7203 Valves, fittings, nozzles -----	12
7204 Miscellaneous parts and accessories -----	13
 SECTION V. REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE	
Group 01. Engine	
0100 Engine assembly -----	16
0101 Crankcase, block, cylinder head -----	17
0102 Crankshaft -----	18
0104 Pistons, connecting rods -----	18
0105 Valves, camshafts and timing system -----	18
0106 Engine lubrication system -----	19
0107 Engine starting system -----	20
03. Fuel System	
0301 Carburetor -----	21
0304 Air cleaner -----	23
0306 Tanks, lines, and fittings -----	23
0308 Engine speed governor -----	24
04. Exhaust System	
0401 Muffler and pipes -----	26
05. Cooling System	
0502 Shrouds -----	26
06. Electrical System	
0605 Ignition components -----	27
15. Frame	
1501 Frame assembly -----	28
22. Body Chassis or Hull, and Accessory Items	
2202 Accessory items -----	29
2210 Data plates and instruction holders -----	31
72. Dispensing and Servicing Equipment Components	
7202 Pumps and meters -----	31
7203 Valves, fittings, nozzles -----	33
7204 Miscellaneous parts and accessories -----	35
 SECTION VI. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DS, GS, AND DEPOT MAINTENANCE (NOT APPLICABLE)	
VII. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER, CROSS-REFERENCE TO INDEX NUMBER -----	52

**SECTION I.**  
**INTRODUCTION**

**1. Scope**

This manual lists repair parts required for the performance of organizational, direct support, general support, and depot maintenance of the pump.

**2. General**

a. The repair parts list is arranged as follows:

- (1) Individual parts and major assemblies are listed alphabetically by item name within the numbered functional groups.
- (2) Assembly components and subassemblies are intended and listed alphabetically by item name under major assemblies.

b. This Repair Parts and Special Tools List is divided into the following sections.

- (1) *Prescribed Load Allowance (PLA)-Section II.* A consolidated listing of repair parts quantitatively allocated for initial stockage at the organizational level. *This is a mandatory minimum stockage allowance.*
- (2) *Special Tools, Test and Support Equipment-Section III.* A list of special tools test and support equipment authorized for the performance of maintenance at the organizational level. (NOT APPLICABLE)
- (3) *Repair Parts-Section IV.* A list of repair parts authorized for the performance of maintenance at the organizational level.
- (4) *Repair Parts-Section V.* A list of repair parts authorized for the performance of maintenance at the direct

support, general support, and depot level.

- (5) *Special Tools, Test and Support Equipment—Section VI.* A list of special tools, test and support equipment authorized for the performance of maintenance at the direct support, general support, and depot level. (NOT APPLICABLE)
- (6) *Federal Stock Number and Reference Number Index—Section VII.* A list of Federal stock numbers followed by reference numbers, appearing in all the listings, in ascending alphanumeric sequence cross-referenced to index number.

**3. Explanation of Columns**

The following provides an explanation of columns in the tabular lists in Sections II through VI.

a. *Source, Maintenance, and Recoverability Codes (SMR).*

- (1) *Source Code.* Indicates the selection status and source for the listed item. Source codes used are:

Code	Explanation
P	Applied to repair parts which are stocked in or supplied from DSA/GSA or Army supply system, and authorized for use at indicated maintenance categories.
M	Applied to repair parts which are not procured or stocked but are to be manufactured at indicated maintenance categories.
A	Applied to assemblies which are not procured or stocked as such but made up of two or more units, each of which carry individual stock numbers and descriptions and are procured and stocked and can be assembled by units at indicated maintenance categories