

TECHNICAL MANUAL

GENERAL SUPPORT AND DEPOT MAINTENANCE MANUAL

**SIGNAL
GENERATOR
AN/URM-149**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
JUNE 1973**

TECHNICAL MANUAL }
 No. 11-6625-1633-45 }

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, D.C., 29 June 1973

GENERAL SUPPORT AND DEPOT MAINTENANCE MANUAL

SIGNAL GENERATOR AN/URM-149

		Paragraph	Page
CHAPTER	1. GENERAL	1-1, 1-2	1-1
	2. FUNCTIONING OF EQUIPMENT	2-1 - 2-11	2-1
	3. GENERAL SUPPORT MAINTENANCE	3-1 - 3-16	3-1
CHAPTER	4. REPAIRS AND ADJUSTMENTS		
Section	I. Repairs	4-1 - 4-11	4-1
	II. Adjustment procedures	4-12 - 4-19	4-5
CHAPTER	5. DEPOT MAINTENANCE PROCEDURES		
Section	I. Depot maintenance	5-1, 5-2	5-1
	II. Depot overhaul standards.....	5-3 - 5-13	5-1
APPENDIX	REFERENCES.....	A-1
INDEX.....		Index-1

*This manual supersedes TM 11-6625-1633-45, 1 May 1968.

LIST OF ILLUSTRATIONS

<i>Number</i>	<i>Title</i>	<i>Page</i>
3-1	Signal Generator AN/URM-149, top view	3-2
3-2	Signal Generator AN/URM-149, bottom view	3-3
3-3	Signal Generator AN/URM-149, rf oscillator section removed, right side view.....	3-4
3-4	Signal Generator AN/URM-149, left side view.....	3-5
3-5	RF Oscillator Section, top view	3-6
3-6	RF Oscillator Section, right side view.....	3-7
3-7	RF Oscillator Section, left side view	3-7
3-8	Tracking Subassembly, bottom view.....	3-8
3-9	Terminal Board TB2-A1, parts location diagram	3-9
3-10	Terminal Board TB3-A2, parts location diagram	3-10
3-11	Terminal Board TB4-A3, parts location diagram	3-11
3-12	Chassis Terminal Boards, parts location diagram	3-12
3-13	Normal waveform diagram	3-16
3-14	Typical common emitter stage diagram	3-16
3-15	Transistor diode test connections	3-18
4-1	Tracking Potentiometers A4R20 and A4R23, mounting details	4-2
5-1	RF output frequency, test setup diagram.....	5-4
5-2	RF output power, test setup diagram.....	5-5
5-3	Internal modulation frequencies accuracy, test setup diagram	5-7
5-4	RF noise level measurement, test setup diagram	5-8
5-5	Tube socket voltage and resistance diagram	Fold-out
5-6	Resistor, inductor, and capacitor color code diagrams	Fold-out
5-7	Signal Generator AN/URM-149, block diagram.....	Fold-out
5-8 ①	Signal Generator AN/URM-149, schematic diagram (Part 1 of 2)	Fold-out
5-8 ②	Signal Generator AN/URM-149, schematic diagram (Part 2 of 2)	Fold-out

CHAPTER 1 GENERAL

1-1. Scope

a. This manual contains general support (gs) and depot maintenance instructions for Signal Generator AN/URM-149. It includes instructions appropriate to gs and depot maintenance for troubleshooting, testing, and repair of equipment. It also lists the test equipment required for gs and depot maintenance.

b. The complete technical manual for this equipment includes TM 11-6625-1633-12. The gs and depot maintenance parts list is contained in TM 11-6625-1633-45P.

c. The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted

on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CR, Fort Monmouth, NJ 07703.

1-2. Maintenance Forms and Records

Maintenance forms and records which are to be used by maintenance personnel at all maintenance levels are listed in and prescribed by TM 38-750. For procedures, forms and records, and inspections required during administrative storage of this equipment, refer to TM 740-90-1.