

**TECHNICAL MANUAL
ORGANIZATIONAL DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
GENERATOR, SIGNAL AN/USM-44C
(NSN 6625-00-138-7773'**

**THIS PUBLICATION IS A COURTESY QUICK COPY FROM THE UNITED STATES ARMY'
PUBLICATIONS DISTRIBUTION CENTER, ST. LOUIS, MISSOURI, TO MEET YOUR NEEDS
WHILE WE REPLENISH OUR
REGULAR STOCK.**

HEADQUARTERS, DEPARTMENT OF THE ARMY

APRIL 1977

**ORGANIZATIONAL, DIRECT SUPPORT, AND
 GENERAL SUPPORT MAINTENANCE
 REPAIR PARTS AND SPECIAL TOOLS LISTS
 FOR
 GENERATOR, SIGNAL AN/USM-44C
 (NSN 66250-138-7773)**

Current as of 14 January 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction	1	
	II. Repair parts list	5	
Group	01 Generator, Signal TS-510C/U	5	
	Cover assembly (top and bottom).....		1
	Rear chassis assembly		2
	Front chassis assembly		3
	Bottom chassis assembly		4
	Drum assembly		5
	Circuit board bracket assembly		6
	Panel assembly front (top)		7
	Top chassis assembly		8
	Attenuator window assembly		9
	Harness assembly		10
	Box assembly (p/o A9).....		11
	Circuit card hinge assembly (p/o A9).....		12
	Cover assembly (p/o A9)		13
	Circuit card assembly, left (A9A1)		14
	Circuit card assembly, right (A9A1)		15
	Circuit card assembly (A9A2)		16
	Circuit card assembly (A3).....		17
	Circuit card assembly (A5).....		18
	Circuit card assembly (A7).....		19
	Circuit card assembly (A1 I).....		20
	Circuit card assembly (A6).....		21
	Cover assembly (P/O AS).....		22
	Box assembly (P/O A8)		23
	Circuit card assembly, right (A8A3)		24
	Circuit card assembly, left (A8A3)		25
	Filter assembly A1.....		26
	Filter assembly A2		26
	Filter assembly A3		27
	Filter assembly A4		27
	Filter assembly A5		27
	Filter assembly A6		27

			Page	Illus Figure
Group	02	Cable assemblies.....	18	28
	03	Fuseholder MX-1730/U.....	18	29
SECTION	III.	Special tools list (Not applicable)		
	IV.	National stock number and pan number index	48	

**SECTION I.
INTRODUCTION**

1. Scope

This manual lists repair parts required for performance of organizational and general support maintenance of the AN/USM-44C.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. National Stock Number and Part Number Index. A list, in ascending numerical sequence, of all National stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

a. Illustration. This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration in which the item is shown.

(2) Item number. The number used to identify each item called out in the illustration.

b. Source, Maintenance, and Recoverability Codes (SMR).

(1) Source code. Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source-coded above, except those coded XA, XD, and aircraft support items as restricted by AR 700-42.

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance codes entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	Support item is removed, replaced, used at the organizational level.
H	Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
Z	Nonreparable. No repair is authorized.

(3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability Codes	Definition
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
H	Reparable item. When uneconomically repairable, condemn and dispose at the general support level.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements, to identify an item or range of items.