

TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT,

AND GENERAL SUPPORT

MAINTENANCE REPAIR PARTS

AND SPECIAL TOOLS LISTS

FOR

Q-METER TS-617C/U

TECHNICAL MANUAL }  
 No. 11-6625-471-24P-4 }

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, DC, 29 March 1977

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE**

**REPAIR PARTS AND SPECIAL TOOLS LISTS**

**FOR**

**Q-METER TS-617C/U**

**Current as of 15 October 1976**

**Table of Contents**

**REPORTING OF ERRORS**

**You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.**

**If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.**

**In either case a reply will be furnished direct to you.**

	Page	Illus Figure
SECTION I. Introduction . . . . .	5	
SECTION II. Repair parts list . . . . .	5	
Group 00 Q-Meter TS-617C/U . . . . .	5	1
01 Panel assembly . . . . .	7	2
Vtvm assembly . . . . .	11	3
Capacitor assembly . . . . .	13	4
Oscillator assembly . . . . .	15	5
Turret assembly . . . . .	17	6
0101 Case assembly . . . . .	19	7
Power supply . . . . .	21	8
0102 Cover assembly . . . . .	23	9
010201 Cable Assembly, RF CG-1432/U . . . . .	25	10
02 Accessory case assembly . . . . .	27	11
Cover assembly . . . . .	29	12
Case assembly . . . . .	31	13
Case subassembly . . . . .	33	14
0201 Cable assembly, power . . . . .	35	15
SECTION III. Special tools list (NOT APPLICABLE)		
IV. National stock number and part, number index . . . . .	37	

# SECTION I

## INTRODUCTION

---

### 1. Scope

This manual lists repair parts for the performance of organizational, and general support maintenance of the TS-617C/U.

### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II—Repair Parts List.* A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III—Special Tools List.* Not applicable.

*c. Section IV—National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

### 3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

*a. Illustration.* This column is divided as follows

(1) *Figure number.* Indicates the figure number of the illustration in which item is shown.

(2) *Item number.* The number used to identify each item called out in the illustration.

*b. Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source Code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
-------------	-------------------

PA—Item procured and stocked for anticipated or known usage.	
--	--

<i>Code</i>	<i>Definition</i>
-------------	-------------------

XD—A support item that is not stocked. When required, item will be procured through normal supply channels.	
---	--

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source-coded above, except those coded XD and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

O—Support item is removed, replaced, used at the organizational level.	
--	--

H—Support item is removed, replaced, used at the general support level.	
---	--

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes.

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

H—Reparable item. When uneconomically reparable, condemn and dispose at the general support level.	
--	--

Z—Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.	
--	--

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows: