

---

**TECHNICAL MANUAL**

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT, GENERAL SUPPORT,**

**AND DEPOT MAINTENANCE MANUAL**

**INCLUDING REPAIR PARTS AND SPECIAL TOOLS LISTS**

**MAINTENANCE KIT,**

**ELECTRONIC EQUIPMENT**

**MK-673/MPQ-4A [FSN 6625-064-6013]**

---

**HEADQUARTERS,**

**DEPARTMENT**

**OF**

**THE**

**ARMY**

**APRIL 1973**

TECHNICAL MANUAL  
No. 11-6625-520-15 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, DC, 1 April 1973

**Operator's, Organizational, Direct Support, General Support,  
and Depot Maintenance Manual  
Including Repair Parts and Special Tools Lists**

**MAINTENANCE KIT, ELECTRONIC EQUIPMENT MK-673/MPQ-4A (FSN 6625-064-6013)**

Current as of 20 November 1972

	Paragraph	Page
<b>CHAPTER 1. INTRODUCTION AND DESCRIPTION</b>	1-1—1-4	1-1
Section I. Introduction .....	1-5—1-19	1-2
II. Description and data .....	2-1—2-4	2-1
<b>CHAPTER 2. INSTALLATION.....</b>		
3. OPERATING INSTRUCTIONS		
Section I. Controls, indicators, and connectors .....	3-1—3-8	3-1
II. Operation under usual conditions .....	3-9—3-12	3-9
III. Operation under unusual conditions .....	3-13—3-15	3-11
<b>CHAPTER 4. OPERATOR AND ORGANIZATION MAINTENANCE.....</b>	4-1—4-13	4-1
5. FUNCTIONING OF MK-673/MPQ-4A .....	5-1—5-9	5-1
6. TROUBLESHOOTING		
Section I. General troubleshooting information .....	6-1—6-3	6-1
II. Troubleshooting Dummy Load, Electrical DA-205/MPQ-4A .....	6-4—6-6	6-2
III. Troubleshooting Dummy Load, Electrical DA-206/MPQ-4A .....	6-7—6-9	6-9
IV. Troubleshooting Box, Interconnecting J-982/MPM-49 .....	6-10—6-13	6-9
V. Troubleshooting Mixer Stage, Frequency CV-662/G .....	6-14, 6-15	6-12
<b>CHAPTER 7. REPAIRS AND ADJUSTMENTS.....</b>		
Section I. Repairs .....	7-1, 7-2	7-1
II. Cable repairs .....	7-3—7-13	7-5
III. Adjustment .....	7-14, 7-15	7-11
<b>CHAPTER 8. DEPOT OVERHAUL STANDARDS.....</b>		
Section I. General instruction .....	8-1—8-3	8-1
II. Tests .....	8-4—8-26	8-1
<b>CHAPTER 9. SHIPMENT, LIMITED STORAGE, AND DEMOLITION TO PREVENT ENEMY USE.....</b>		
Section I. Shipment and limited storage .....	9-1—9-3	9-1
II. Demolition of material to prevent enemy use .....	9-4—9-5	9-2
<b>APPENDIX A. REFERENCES .....</b>	.....	A-1
<b>B. MAINTENANCE ALLOCATION .....</b>	.....	B-1
<b>C. ORGANIZATIONAL, DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOL LIST .....</b>	.....	C-1
<b>INDEX .....</b>	.....	I-1

★ This manual supersedes TM 11-6625-520-12P, 17 June 1963; TM 11-6625-520-45P, 18 June 1963; TM 11-6625-361-12P, 5 December 1960; and TM 11-6625-361-35P, 5 December 1960, including all changes; and so much of TM 11-5840-208-30, 2 October 1969, as pertains to direct support maintenance on Radar Set AN/MPQ-4A and as pertains to theory, troubleshooting and repair of Test Facilities Kit MK-387/MPQ-4A.

## LIST OF ILLUSTRATIONS

Figure No.	Title	Page
1-1	Test Facilities Kit MK-387/MPM-49, less cables -----	1-6
1-2	Cables, part of Test Facilities Kit MK-387/MPM-49 -----	1-7
1-3	Maintenance Kit, Electronic Equipment MK-399/MPQ-4A -----	1-8
1-4	Maintenance Kit, Electronic Equipment MK-673/MPQ-4A additional major components -----	1-9
1-5	Toolkit, Radar Repair TK-94/MPQ-4A -----	1-10
2-1	Typical packaging of single unit in wooden box -----	2-2
2-2	Packaging of DA-205/MPQ-4A, DA-206/MPQ-4A, CN-491/G, CN-492/G, and CU-673/U -----	2-3
2-3	Packaging of cable assemblies -----	2-4
2-4	Packaging of PU-335/MPM-25 -----	2-6
3-1	Attenuator, Variable CN-491/G, controls -----	3-1
3-2	Attenuator, Variable CN-492/G, controls -----	3-2
3-3	Dummy Load, Electrical DA-205/MPQ-4A, controls and connectors -----	3-3
3-4	Dummy Load, Electrical DA-206/MPQ-4A, controls and connectors -----	3-4
3-5	Box, Interconnecting J-982/MPM-49, controls, indicators, and connectors, front view -----	3-6
3-6	Box, Interconnecting J-982/MPM-49, controls, indicators, and connectors, right view -----	3-7
3-7	Box, Interconnecting J-982/MPM-49, controls, indicators, and connectors, left view -----	3-8
3-8	Mixer Stage, Frequency CV-662/G, controls and connectors -----	3-9
3-9	Cabinet for Control—Power Supply C-2014/MPQ-4A, controls and indicators -----	3-9
4-1	Typical test setup -----	4-2
5-1	Three-phase power distribution, schematic diagram -----	5-2
5-2	Single-phase power distribution, schematic diagram -----	5-2
5-3	Dc distribution from PP-1588/MPQ-4A, schematic diagram -----	5-3
5-4	Dc power distribution from C-2014/MPQ-4A, schematic diagram -----	5-4
5-5	Dummy Load, Electrical DA-205/MPQ-4A, schematic diagram -----	5-5
5-6	Dummy Load, Electrical DA-206/MPQ-4A, schematic diagram -----	5-7
5-7	Boresighting -----	5-8
5-8	Mixer Stage, Frequency CV-662/G, schematic diagram -----	5-8
5-9	Cabinet for Control—Power Supply C-2014/MPQ-4A, schematic diagram -----	5-10
7-1	Dummy Load, Electrical DA-205/MPQ-4A, location of parts -----	7-2
7-2	Dummy Load, Electrical DA-206/MPQ-4A, location of parts -----	7-3
7-3	Box, Interconnecting J-982/MPM-49, front interior view -----	7-4
7-4	Box, Interconnecting J-982/MPM-49, rear interior view -----	7-4
7-5	MK-399/MPQ-4A cables, schematic diagram -----	7-9
7-6	Tripod, location of parts -----	7-10
7-7	CV-662/G, location of parts -----	7-11
8-1	Microwave components test setup -----	8-27
8-2	Antenna test setup -----	8-28
8-3	Antenna VSWR test setup -----	8-29
FO-1	Color code markings for MIL-STD resistors, inductors and capacitors -----	Fold-out
FO-2	Box, Interconnecting J-982/MPM-49, schematic diagram -----	Fold-out
FO-3	MK-387/MPM-49 cables, schematic diagram -----	Fold-out

## LIST OF TABLES

Table No.		
2-1	Contents of Shipping Containers for Maintenance Kit, Electronic Equipment MK-673/MJQ-4A --	2-1
8-1	Test Procedure for Attenuator, Variable CN-492/G -----	8-3
8-2	Test Procedure for Attenuator, Variable CN-491/G -----	8-6
8-3	Test Procedure for Waveguide Assembly CG-539/U -----	8-8
8-4	Test Procedure for Probe, Waveguide RF-74/U -----	8-10
8-5	Test procedure for Directional Coupler CU-673/U -----	8-12
8-6	Physical Test and Inspections for Maintenance Kit, Electronic Equipment -----	8-14
8-7	Beam Width and Side Lobe Level Measurement Tests, H-Plane -----	8-17
8-8	Beam Width and Side Lobe Level Measurement, E-Plane -----	8-19
8-9	Antenna Beam Symmetry -----	8-21
8-10	Antenna Boresight H-Plane -----	8-23
8-11	Voltage Standing Wave Ratio Check -----	8-25

## CHAPTER 1

### INTRODUCTION AND DESCRIPTION

---

#### Section I. INTRODUCTION

##### **1-1. Scope**

a. This manual describes Maintenance Kit, Electronic Equipment MK-673/MPQ-4A (figs. 1-1 through 1-5) and provides operating and maintenance instructions for components that are not covered in other manuals. Detailed operating procedures for using the MK-673/MPQ-4A during maintenance and bench testing of Radar Set AN/MPQ/4A are given in TM 11-5840-208-30 and TM 11-5840-208-45. Also included are the repair parts and special tools lists.

b. The following components of the MK-673/MPQ-4A are covered in detail in this manual:

- (1) Attenuator, Variable CN/491/G.
- (2) Attenuator, Variable CN-492/G.
- (3) Coupler, Directional CU-673/U
- (4) Dummy Load, Electrical DA-205/MPQ-4A.
- (5) Dummy Load, Electrical DA-206/MPQ-4A.
- (6) Box, Interconnecting J-982/MPM-49.
- (7) Cabinet for Power Supply PP-1588/MPQ-4A.
- (8) Cabinet for Control — Power Supply C — 2014/MPQ-4A.
- (9) Cover, Power Supply CW-475/MPM-49.
- (10) Cover, Power Supply CW-476/MPM-49.
- (11) Maintenance Kit, Electronic Equipment MK-399/MPQ-4A.
- (12) Toolkit, Radar Repair TK-94/MPQ-4A.

c. A brief description of the following components is covered in this manual. For more detailed information refer to the following manuals:

- (1) Simulator, Antenna Position SM-154/MPQ-4A.  
TM 11-6625-541-12  
TM 11-6625-541-20P  
TM 11-6625-541-45  
(2) Motor Generator PU-20C/C.  
TM 11-6125-200-10  
TM 11-6125-200-20  
TM 11-6125-200-20P  
TM 11-6125-200-35  
TM 11-6125-200-35P  
(3) Motor Generator PU-335/MPM-25.  
TM 11-5840-208-45  
■ TM 11-6125-217-14P  
(4) Power Supply PP-1588/MPQ-4A, and Control Power Supply C-2014/MPQ-4A.  
TM 11-5840-208-10  
TM 11-5840-208-20

TM 11-5840-208-20P

TM 11-5840-208-30

TM 11-5840-208-35P

TM 11-5840-208-45

##### **1-2. Indexes of Publications**

a. *DA Pam 310-4*. Refer to the latest issue of DA Pam 310-4 to determine whether there are new additions, changes, or additional publications pertaining to the equipment.

b. *DA Pam 310-7*. Refer to DA Pam 310-7 to determine whether there are modification work orders (MWO's) pertaining to the equipment.

##### **1-3. Forms and Records**

a. *Reports of Maintenance and Unsatisfactory Equipment*. Maintenance forms, records, and reports which are to be used by maintenance personnel at all maintenance levels are listed in and prescribed by TM 38-750.

b. *Report of Packaging and Handling Deficiencies*. Fill out and forward DD Form 6 (Packaging Improvement Report) as prescribed in AR 700-58/NAVSUPINST 4030.29/AFR 71-13/MCO P4030.29A, and DSAR 4145.8.

c. *Discrepancy in Shipment Report (DISREP)* (SF 361). Fill out and forward Discrepancy in Shipment Report (DISREP) (SF 361) as prescribed in AR 55-38/NAVSUPINST 4610.33A/AFR 75-18/MCO P4610.19B and DSAR 4500.15.

d. *Reporting of Errors*.

The reporting of errors, omissions, and recommendations for improving this manual by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forwarded direct to COMMANDER, US Army Electronics Command, ATTN: DRSEL-MA-Q Fort Monmouth, NJ. 07703.

e. *Reporting Equipment Improvement Recommendations (EIR)*. EIR's will be prepared using DA Form 2407, Maintenance Request. Instructions for preparing EIR's are provided in TM 38-750, the Army Maintenance Management System. EIR's should be mailed direct to Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703. A reply will be furnished direct to you.