

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

---

ORGANIZATIONAL MAINTENANCE REPAIR PARTS  
AND SPECIAL TOOLS LISTS  
TEST SET, TRANSISTOR TS-1836/U  
FSN 6625-893-2628

---

Headquarters, Department of the Army, Washington, D. C.  
29 June 1973

---

Current as of December 1972

	Paragraph	Page
Section I. INTRODUCTION		
Scope . . . . .	1-1	2
General . . . . .	1-2	2
Explanation of columns . . . . .	1-3	2
Special information . . . . .	1-4	4
Location of repair parts . . . . .	1-5	4
Abbreviations (Not applicable) . . . . .	1-6	4
Reporting of equipment publication improvements . . . . .	1-7	4
II. PRESCRIBED LOAD ALLOWANCE (Not applicable)		
III. REPAIR PARTS LIST . . . . .		6
IV. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT ( Not applicable)		
V. INDEX -FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER . . . . .		7

---

\*This manual supersedes TM 11-6625-539-20P, 25 January 1963.

# SECTION I INTRODUCTION

## 1-1. Scope

This manual lists repair parts required for the performance of organizational maintenance of the TS-1836/U. The PCCN for the TS-1836/U is GTEACF for all models.

## 1-2. General

This repair parts list is divided into the following sections:

*a. Prescribed Load Allowance (PLA) — Section II.* Not applicable.

*b. Repair Parts List—Section III.* A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.

*c. Special Tools, Test and Support Equipment — Section IV.* Not applicable.

*d. Index—Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number — Section V.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

## 1-3. Explanation of Columns

The following provides an explanation of columns in the tabular lists—

*a. Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are—

Code	Explanation
------	-------------

PA	Item procured and stocked for anticipated or known usage.
----	---

PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
----	--

PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
----	--

PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment.
----	---

Code

Explanation

PE	— Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
----	--

PF	– Support equipment which will not be stocked but which will be centrally procured on demand.
----	---

PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
----	---

KD	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
----	---

KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
----	--

KB	– Item included in both a depot overhaul/repair kit and a maintenance kit.
----	--

MO	— Item to be manufactured or fabricated at organizational level.
----	--

MF	– Item to be manufactured or fabricated at direct support maintenance level.
----	--

MH	—Item to be manufactured or fabricated at general support maintenance level.
----	--

MD	— Item to be manufactured or fabricated at depot maintenance level.
----	---

AO	– Item to be assembled at organizational level.
----	---

AF	– Item to be assembled at direct support maintenance level.
----	---

AH	— Item to be assembled at general support maintenance level.
----	--

AD	— Item to be assembled at depot maintenance level.
----	--

XA	– Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
----	---

XB	— Item is not procured or stocked. If not available through salvage, requisition.
----	---

XC	– Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
----	---

XD	– Support items can be requisitioned with justification.
----	--