

**TECHNICAL MANUAL**  
**GENERAL SUPPORT MAINTENANCE REPAIR**  
**PARTS AND**  
**SPECIAL TOOLS LIST**  
**(INCLUDING DEPOT MAINTENANCE REPAIR**  
**PARTS AND SPECIAL TOOLS)**  
**FOR**  
**TEST SET, RADIO AN/ARM-63**  
**(NSN 6625-00-868-8323)**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**FEBRUARY 1977**

TECHNICAL MANUAL  
No. 11-6625-556-40P



HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, DC, 8 February 1977

**GENERAL SUPPORT MAINTENANCE REPAIR PARTS  
AND SPECIAL TOOLS LISTS  
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS  
AND SPECIAL TOOLS)  
FOR  
T10EST SET, RADIO AN/ARM-63  
(NSN 6625-00-868-8323)**

Current as of 10 October 1976

**REPORTING OF ERRORS**

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

**Table of Contents**

SECTION		Page	Illustration Figure
	I Introduction . . . . .	1	
	II Repair parts list . . . . .	5	
Group	00 Test Set, Radio AN/ARM-63 (ARC Model BTK-35A) . . . . .	5	1
	01 Test Set, Radio TS-1797/ARM-63 . . . . .	7	2,3
	0101 Control Unit, Course C-1827/ARC-55 . . . . .	15	4
	010101 Switch assembly . . . . .	17	5
	0102 Control, receiver . . . . .	19	6
	0103 Indicator, Course ID-453/ARN-30 . . . . .	21	7
	0104 Indicator, Course ID-250A/ARN (No authorized) . . . . .	23	8
	0105 Cable assembly, special purpose . . . . .	25	9
	0106 Cable assembly . . . . .	27	10
	0107 Rear panel assembly . . . . .	29	11
	0108 Cable assembly . . . . .	31	12
	02 Simulator, Antenna Position SM-295/ARM 0201 Box assembly, coupling (No-parts authorized) . . . . .	33	13
	03 Box, Interconnecting J-1107/ARN . . . . .	36	14
	04 Cable Assembly, Power CX43739/ARM-63 . . . . .	37	15
	05 Wiring Harness, Branched CX-8749/ARM-63 . . . . .	39	16
	06 Wiring harness, branched(W2) . . . . .	41	17
	07 Wiring harness, branched (W3) . . . . .	43	18
Group	08 Wiring harness, branched (W4) . . . . .	45	19
	09 Cable assembly (W5) . . . . .		

This manual supersedes so much of TM 11-6625-656-46, 14 September 1986, including Change 1, 27 September 1967, as pertains to repair parts and special tools lists.

**Table of Contents-Continued**

	<i>Page</i>	<i>Illustration Figure</i>
10 Wiring harness, branched (W6).....	47	20
11 Tip plug assembly.....	49	21
12 Wiring harness, branched (W7).....	51	22
13 Wiring harness, branched (W8).....	53	23
14 Cable assembly (W9).....	55	24
15 Cable assembly (WH10).....	57	25
16 Cable assembly (W11).....	59	26
17 Cable assembly (W12).....	61	27
18 Cable assembly (W13).....	63	28
19 Cable assembly, radio frequency (W14).....	65	29
20 Cable assembly (W15).....	67	30
SECTION III. Special tools list( Not applicable)		
IV. National stock number and part number index . . . . .	68	

**SECTION I**  
**INTRODUCTION**

**1. Scope**

This manual lists repair parts and special tools required for performance of general support maintenance of the AN/ARM-63.

**2. General**

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III. Special Tools List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in ascending National item identification number (NIIN, last 9 digits) sequence, of all National stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock number and part numbers are cross-referenced to each illustration figure and item number appearance.

**3. Explanation of Columns**

The following provides an explanation of columns found in the tabular listings:

*a. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item number.* The number used to identify each item called out in the illustration.

*b. Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first, and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
-------------	-------------------

PA — Item procured and stocked for anticipated or known usage.

XD—A support item that is not stocked. When required, item will be procured through normal supply channels.

**NOTE**

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA, XD, and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

O— Support item is removed, replaced, used at the organizational level.

H— Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i. e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

H — The lowest maintenance level capable of complete repair of the support item is the general support level.

Z— Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follow:

<i>Recoverability codes</i>	<i>Definition</i>
-----------------------------	-------------------

Z— Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.

H — Repairable item. When uneconomically repairable, condemn and dispose at the general support level.

*c. National Stock Number.* Indicates the