

**TECHNICAL MANUAL
ORGANIZATIONAL MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LISTS
FOR**

**MAINTENANCE KITS,
ELECTRONIC EQUIPMENT**

MK-731/ARC-51X

(NSN 6625-00-082-4057)

AND

MK-731A/ARC-51X

(NSN 6625-00-803-1300)

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
FOR
MAINTENANCE KITS, ELECTRONIC EQUIPMENT
MK-731/ARC-51X (NSN 6625-00-082-4057)
AND
MK-731A/ARC-51X (NSN 6625-00-803-1300)**

Current as of 4 August 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
I.	Introduction	1	
II.	Repair parts list	5	
Group	00 Maintenance Kits, Electronic Equipment MK-731/ARC-51X, MK-731A/ARC-51X	5	1-4
	01 Simulator, Test Set, Radio SM-348/ARC-51X, SM-348A/ARC-51X.	13	5
	0101 Amplifier assembly, audio frequency (761-7040-001) (No parts authorized)		
	0102 Amplifier assembly, audio frequency (761-7041-001) (No parts authorized)		
	010201 Amplifier subassembly (761-7047-001) (No parts authorized)		
	0103 Transient blanking assembly (No parts authorized)		
	0104 Test generator, UHF (No parts authorized)		
	0105 Readout assembly	15	6
	0106 Power converter assembly (No parts authorized)		
	02 Test Set, Radio TS-1962/ARC-51X.	17	7
	0201 Test unit	19	8
	0202 Detector assembly (No parts authorized)		

*This manual supersedes TM 11-6625-564-20P, 1 February 1971,

Table of Contents (Cont.)

	Page	Illus Figure
0203 Amplifier assembly, audio frequency (No parts authorized)		
0204 Control, test set	23	9
03 Antenna AS-1484/ARC-51X	25	10
04 Adapter, Connector U-335/ARC-51X	27	11
05 Adapter, Connector U-334/ARC-51X	29	12
06 Dummy Load, Electrical DA-397/ARC-51X	31	13
07 Mounting Tray, Module Extender MT-3372/ARC-51X	33	14
0701 Extender, Module MX-4913/ARC-51X	35	15
0702 Extender, Module MX-4912/ARC-51X	37	16
0703 Extender, Module MX-4911/ARC-51X	39	17
0704 Extender, Module MX-4910/ARC-51X	43	18
0705 Extender, Module MX-4909/ARC-51X	45	19
0706 Extender, Module MX-4908/ARC-51X	47	20
0707 Extender, Module MX-4907/ARC-51X	51	21
0708 Extender, Module MX-4906/ARC-51X	53	22
08 Cable Assembly, Radio Frequency CG-3120/ARC-51X	55	23
09 Cable Assembly, Radio Frequency CG-3119/ARC-51X	57	24
10 Cable Assembly, Radio Frequency CG-3118/ARC-51X	59	25
11 Cable Assembly, Special Purpose, Electrical CX-10191/ARC-51X	61	26
12 Cable Assembly, Special Purpose, Electrical CX-10190/ARC-51X	63	27
13 Cable Assembly, Special Purpose, Electrical CX-10189/ARC-51X	65	28
14 Cable Assembly, Special Purpose, Electrical CX-10188/ARC-51X	67	29
15 Cable Assembly, Special Purpose, Electrical CX-10187/ARC-51X	69	30
16 Cable Assembly, Power, Electrical, Branched CX-10186/ARC-51X	71	31
17 Cable Assembly, Special Purpose, Electrical CX-10185/ARC-51X	73	32
18 Cable Assembly, Radio Frequency CG-1889/U	75	33
19 Cable Assembly, Special Purpose, Electrical CX-9053/ARC-51X	77	34
20 Cable Assembly, Special Purpose, Electrical CX-9052/ARC-51X	79	35
SECTION III. Special tools list (Not applicable)		
IV. National stock number and part number index	80	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the MK-731/AR-C-51X, MK-731A/ARC-51X. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item Number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	Item procured and stocked for anticipated or known usage.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O	Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
O	The lowest maintenance level capable of complete repair of the support item is the organizational level.
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
Z	Nonreparable. No repair is authorized.

(3) *Recoverability Code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
O	Reparable item. When uneconomically reparable, condemn and dispose at organizational level.