

**TECHNICAL MANUAL**

**GENERAL SUPPORT MAINTENANCE REPAIR  
PARTS AND SPECIAL TOOLS LISTS  
FOR**

**MAINTENANCE KITS,  
ELECTRONIC EQUIPMENT**

**MK-731/ARC-51X**

**( NSN 6625-00-082-4057)**

**A N D**

**MK-731A/ARC-51X**

**( NSN 6625-00-803-1300)**

TECHNICAL MANUAL }  
 No. 11-6625-564-40P }

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, DC, 15 March 1979

**GENERAL SUPPORT MAINTENANCE REPAIR  
 PARTS AND SPECIAL TOOLS LISTS  
 FOR  
 MAINTENANCE KITS, ELECTRONIC EQUIPMENT  
 MK-731/ARC-51X ( NSN 6625-00-082-4057)  
 AND  
 MK-731A/ARC-51X ( NSN 6625-00-803-1300)**

Current as of 4 August 1978

**REPORTING OF ERRORS**

**You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.**

**If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.**

**In either case a reply will be furnished direct to you.**

**Table of Contents**

	Page	Illus Figure
S ECTION I. Introduction .....	1	
Group II. Repair parts list .....	5	
00 Maintenance Kits, Electronic Equipment MK-731/ARC-51X, MK-731A/ARC-51X .....	5	1-4
01 Simulators, Test Set, Radio SM-348/ARC-51X, SM-348A/ARC-51X .....	17	5
0101 Amplifier assembly, audio frequency (761-7040-001) . . . . .	23	6
0102 Ampifier assembly, audio frequency (761-7041-001) . . . . .	27	7
010201 Amplifier subassembly (761.7047.001) . . . . .	29	8
0103 Transient blanking assembly. . . . .	31	9
0104 Testgenerator, UHF . . . . .	35	10, 11
0105 Readout assembly . . . . .	43	12
0106 Powerconverterassembly . . . . .	47	13
02 TestSet,RadioTS-1926/ARC-51X . . . . .	49	14

☛ This manual supersedes TM 11-6625-564-35P, 3 March 1971.

Table of Contents—Continued

	Page	Illus Figure
0201 Test unit . . . . .	53	15
0202 Detector assembly . . . . .	57	16
0203 Amplifier assembly, audio frequency (761-7065-001) . . . . .	61	17
0204 Control, test set . . . . .	65	18
03 Antenna AS-1484/ARC-51X . . . . .	67	19
04 Adapter, Connector U-335/ARC-51X . . . . .	69	20
05 Adapter, Connector U-334/ARC-51X . . . . .	71	21
06 Dummy Load, Electrical DA-397/ARC-51X . . . . .	73	22
07 Mounting Tray, Module Extender MT-3372/ARC-51X . . . . .	75	23
0701 Extender, Module MX-4913/ARC-51X . . . . .	77	24
0702 Extender, Module MX-4912/ARC-51X . . . . .	79	25
0703 Extender, Module MX-4911/ARC-51X . . . . .	81	26
0704 Extender, Module MX-4910/ARC-51X . . . . .	85	27
0705 Extender, Module MX-4909/ARC-51X . . . . .	87	28
0706 Extender, Module MX-4908/ARC-51X . . . . .	89	29
0707 Extender, Module MX-4907/ARC-51X . . . . .	93	30
0708 Extender, Module MX-4906/ARC-51X . . . . .	95	31
08 Cable Assembly, Radio Frequency CG-3120/ARC-51X . . . . .	97	32
09 Cable Assembly, Radio Frequency CG-3119/ARC-51X . . . . .	99	33
10 Cable Assembly, Radio Frequency CG-3118/ARC-51X . . . . .	101	34
11 Cable Assembly, Special Purpose, Electrical CX-10191/ARC-51X . . . . .	103	35
12 Cable Assembly, Special Purpose, Electrical CX-10190/ARC-51X . . . . .	105	36
13 Cable Assembly, Special Purpose, Electrical CX-10189/ARC-51X . . . . .	107	37
14 Cable Assembly, Special Purpose, Electrical CX-10188/ARC-51X . . . . .	109	38
15 Cable Assembly, Special Purpose, Electrical CX-10187/ARC-51X . . . . .	111	39
16 Cable Assembly, Power, Electrical Branched CX-10186/ARC-51X . . . . .	113	40
17 Cable Assembly, Special Purpose, Electrical CX-10185/ARC-51X . . . . .	115	41
18 Cable Assembly, Radio Frequency CX-1889/U . . . . .	117	42
19 Cable Assembly, Special Purpose, Electrical CX-9053/ARC-51X . . . . .	119	43
20 Cable Assembly, Special Purpose, Electrical CX-9052/ARC-51X . . . . .	121	44
SECTION III. Special tools list (Nonapplicable)		
IV. National stock number and part number index . . . . .	122	

# SECTION I

## INTRODUCTION

---

### 1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of general support maintenance of the MK-731/ARC-51X and MK-731A/ARC-51X. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III. Special Tools List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

### 3. Explanation of Columns

*a. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

*b. Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA-	Item procured and stocked for anticipated or known usage.

XD-A support item that is not stocked. When required, item will be procured through normal supply channels.

### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O-	Support item is removed, replaced, used at the organizational level.
H-	Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
O-	The lowest maintenance level capable of complete repair of the support item is the organizational level.
H-	The lowest maintenance level capable of complete repair of the support item is the general support level.
Z-	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z-	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
O-	Reparable item. When uneconomically reparable, condemn and dispose at organizational level.