



TECHNICAL MANUAL

**GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS)
FOR**

VOLTMETER, ELECTRONIC AN/USM-98B

(NSN 6625-00-753-2115)

**This copy is a reprint which includes current pages
from Change 1.**

HEADQUARTERS, DEPARTMENT OF THE ARMY

4 DECEMBER 1980

**GENERAL SUPPORT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)
FOR
VOLTMETER, ELECTRONIC ANIUSM-98B
(NSN 6625-00-753-2115)**

Current as of 1 May 1980

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) direct to Commander, U.S. Army Missile Command, ATTN: AMSMI-MMC-LS-LP, Redstone Arsenal, AL 35898-5238. A reply will be furnished to you. You may also send in your comments electronically to our e-mail address: ls-lp@redstone.army.mil or by fax 205-842-6546/DSN 788-6546.

Table of Contents

			Page	Illus Figure
Section	I.	Introduction.....	1	
	II.	Repair Parts List.....	5	
Group	00.	Voltmeter, Electronic AN/USM-98B.....	5	1
	01.	Voltmeter, Electronic ME-161B/U.....	7	2
		Voltmeter, Electronic ME-161B/U, Chassis Electrical Equipment.....	9	3
		Voltmeter, Electronic ME-161B/U, Panel and Bracket Assembly.....	11	4
		Voltmeter, Electronic ME-161B/U, Bracket Assembly, (SMC604981).....	13	5
		Voltmeter, Electronic ME-161B/U, Bracket Assembly, (SMB604982).....	15	6
		Voltmeter, Electronic ME-161B/U, Panel Assembly.....	17	7
		Voltmeter, Electronic ME-161B/U, Bracket Assembly, (SMC604980).....	19	8
		Voltmeter, Electronic ME-161B/U, Switch Assemblies.....	23	9
		Voltmeter, Electronic ME-161B/U, Circuit Card Assembly (TB1).....	27	10
		Voltmeter, Electronic ME-161B/U, Circuit Board Assembly (TB2).....	31	11
		Voltmeter, Electronic ME-161B/U, Circuit Card Assembly (TB3).....	33	12
	02.	Test Lead Set CX-1331/U, Test Lead Red.....	35	13
		Test Lead Set CX-1331/U, Test Lead Black.....	37	14
Section	III.	Special Tools List (Not applicable)		
	IV.	National Stock Number and Part Number Index.....	38	

*This manual supersedes TM 11-6625-599-40P-2, 13 December 1977.

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of general support maintenance of the AN/USM-98B. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA--	Item procured and stocked for anticipated or known usage.
XD--	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O--	Support item is removed, replaced, used at the organizational level.
H--	Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
H--	The lowest maintenance level capable of complete repair of the support item is the general support level.
Z--	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z--	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
H--	Rearable item. When uneconomically repairable, condemn and dispose at the general support level.
D--	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.

c. *National Stock Number.* Indicates the National stock number assigned to the item and will be used for requisitioning purposes.