

TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
MAINTENANCE KIT, ELECTRONIC EQUIPMENT MK-733/ARC-54
(NSN 5821-00-901-4327)

HEADQUARTERS, DEPARTMENT OF THE ARMY

OCTOBER 1978

TECHNICAL MANUAL }
No. 11-6625-601-20P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC 17 October 1978

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
FOR
MAINTENANCE KIT, ELECTRONIC EQUIPMENT MK-733/ARC-54
(NSN 5821-00-901-4327)**

Current as of 14 June 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

	Page	Illus Figure
SECTION I. Introduction	1	
II. Repair parts list	5	
GROUP 00 Maintenance Kit, Electronic Equipment MK-733 ARC-54	5	1
01. Extender Module MX-4930/ARC-54 (No parts authorized)		
02. Extender Module MX-4931/ARC-54 (No parts authorized)		
03. Extender Module MX-4932/ARC-54 (No parts authorized)		
04. Extender Module MX-4933/ARC-54 (No parts authorized)		
05. Extender Module MX-4934/ARC-54 (No parts authorized)		
06. Cable Assembly CX-9070/ARC-54 (No parts authorized)		
07. Cable Assembly CX-9071/ARC-54 (No parts authorized)		
08. Cable Assembly CX-9072/ARC-54 (No parts authorized)		

*This manual supersedes TM 11-6625-601-20P, 31 December 1976.

Table of Contents — Continued

	Page	Illus. Figure
Group 09 Cable Assembly CA-11136/ARC-54 (No parts authorized)		
10 Cable Assembly CG-409G/U (1-F) (No parts authorized)		
11 Test Set, Radio TS-1967/ARC-546	2
1101 Front panel assembly SMB-5049589	3
110101 Indicator ID-48/ARN (No parts authorized)		
110102 Audio amplifier (A1) (No parts authorized)		
102 Simulator, Test Set SM-349/ARC-54 (No parts authorized)		
110201 Electronic component assembly (A2) (No parts authorized)		
110202 Audio amplifier (A1) (No parts authorized)		
10203 Front panel assembly AMB-50494311	4
12 Case, Maintenance Kit CW-711/ARC-54 (No parts authorized)		
SECTION III. Special tools list (Not applicable)		
IV. National stock number and part number index12	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the MK-733/ARC-54. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA —	Item procured and stocked for anticipated or known usage.

PD —	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

<i>Code</i>	<i>Definition</i>
XD —	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source codes above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O —	Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
F —	The lowest maintenance level capable of complete repair of the support item is the direct support level.
D —	The lowest maintenance level capable of complete repair of the support item is the depot level.
Z —	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Codes</i>	<i>Definition</i>
Z —	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
F —	Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.