

TM 11-6625-601-34P

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
MAINTENANCE KIT, ELECTRONIC EQUIPMENT
MK-733/ARC-54
(NSN 5821-00-901-4327)**

HEADQUARTERS, DEPARTMENT OF THE ARMY

NOVEMBER 1978

TECHNICAL MANUAL

No. 11-6625-601-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 2 November 1978

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
MAINTENANCE KIT, ELECTRONIC EQUIPMENT MK-733/ARC-54
(NSN 5821-00-901-4327)**

Current as of 14 June 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028-2 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION	I. Introduction	1	
	II. Repair parts list	5	
Group	00 Maintenance Kit, Electronic Equipment MK-733/ARC-54	5	1
	01 Extender Module MX-4930/ARC-54	7	2
	02 Extender Module MX-4931/ARC-54	11	3
	03 Extender Module MX-4932/ARC-54	15	4
	04 Extender Module MX-4933/ARC-54	17	5
	05 Extender Module MX-4934/ARC-54	21	6
	06 Cable Assembly CX-9070/ARC-54	23	7
	07 Cable Assembly CX-9071/ARC-54	25	8
	08 Cable Assembly CX-9072/ARC-54	27	9
	09 Cable Assembly CX-11136/ARC-54	29	10
	10 Cable Assembly CG-409G/U (1-F)	31	11
	11 Test Set, Radio TS-1967/ARC-54	33	12
	1101 Front panel assembly SMB-504958	37	13,14
	110101 Indicator ID-48/ARN (See TM 11-5840-270-24-1 for parts)		
	110102 Audio amplifier (A1)	47	15
	1102 Simulator, Test Set SM-349/ARC-54	51	16,17
	110201 Electronic component assembly (A2)	57	18
	110202 Audio amplifier (A1) (See group 110102 for parts)		
	110203 Front panel assembly SMB-504943	59	19
	12 Case, Maintenance Kit CW-711/ARC-54	63	20
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	64	

*This manual supersedes TM 11-6625-601-34P, 17 January 1977.

SECTION I

INTRODUCTION

1. Scope

This manual lists repair parts and special tools required for performance of direct support and general support maintenance of the MK-733/ARC-54.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in ascending National item identification number (NIIN, last 9 digits) sequence, of all National stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock number and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item number.* The number used to identify each item called out in the illustration.

b. Source, Maintenance, and Recoverability Codes (SMR).

(1) *Source code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows

<i>Code</i>	<i>Definition</i>
-------------	-------------------

PA-Item procured and stocked for anticipated or known usage.

PD- Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

XD-A support item that is not stocked. When required, item will be procured through normal

supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA, XD, and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

O-Support item is removed, replaced, used at the organizational level.

F- Support item is removed, replaced, used at the direct support level.

H-Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

F- The lowest maintenance level capable of complete repair of the support item is the direct support level.

H- The lowest maintenance level capable of complete repair of the support item is the general support level.

D- The lowest maintenance level capable of complete repair of the support item is the depot level.

Z- Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
-----------------------------	-------------------

Z- Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.