

TECHNICAL MANUAL

**GENERAL SUPPORT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS (INCLUDING DEPOT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

R.F. SIGNAL GENERATOR SET AN/URM-25F

FSN 6625-643-1548

HEADQUARTERS, DEPARTMENT OF THE ARMY

AUGUST 1973



**GENERAL SUPPORT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)**

R.F. SIGNAL GENERATOR SET AN/ URM-25F

FSN 6625-643-1548

Current as of January 1973

			Paragraph	Page
SECTION	I.	INTRODUCTION		
		Scope	1-1	2
		General.....	1-2	2
		Explanation of columns	1-3	2
		Special information.....	1-4	4
		Location of repair parts.....	1-5	4
		Abbreviations (Not applicable).....	1-6	4
		Reporting of equipment publication improvements	1-7	4
	II.	REPAIR PARTS LIST		
Group	001.	End item accessory group.....		6
	0002.	Generator Signal SG-103/URM-25F		6
	0003.	Dummy Load Elec DA-109/URM-25F		21
	0004.	Lead Test CX-2919/ U.....		21
SECTION	III.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
	IV.	INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER		24

*This manual supersedes TM 11-6625-603-45P, 11 September 1964, including all changes

SECTION I.

INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of general support and depot maintenance of the AN / URM-25F. The PCCN for the AN / URM-25F is GTEACH for all models.

NOTE

No parts authorized for stockage at direct support.

1-2. General

This repair parts and special tools list is divided into the following sections:

- a. *Repair Parts List-Section II.* A list of repair parts authorized for the performance of maintenance at the general support and depot level. This repair parts list is arranged in alphabetical order.
- b. *Special Tools. Test and Support Equipment-Section III.* Not applicable.
- c. *Index-Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number-Section IV.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns found in the tabular list.

a. *Source. Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are-

<i>Code</i>	<i>Explanation</i>
PA--	Item procured and stocked for anticipated or known usage.
PB--	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC--	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD--	Support item, excluding support equipment, procured for initial issue or outfitting and stocked

Code Explanation

- only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
- PE--Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
- PF--Support equipment which will not be stocked but which will be centrally procured on demand.
- PG--Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
- KD--An item of depot overhaul/ repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
- KF--An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
- KB--Item included in both a depot overhaul/repair kit and a maintenance kit.
- MO--Item to be manufactured or fabricated at organizational- level.
- MF--Item to be manufactured or fabricated at direct support maintenance level.
- MH--Item to be manufactured or fabricated at general support maintenance level.
- MD--Item to be manufactured or fabricated at depot maintenance level.
- AO--Item to be assembled at organizational level.
- AF--Item to be assembled at direct support maintenance level.
- AH--Item to be assembled at general support maintenance level.
- AD--Item to be assembled at depot maintenance level.
- XA--Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
- XB--Item is not procured or stocked. If not available through salvage, requisition.
- XC--Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
- XD--Support items can be requisitioned with justification.