

**TECHNICAL MANUAL**

**GENERAL SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LISTS  
FOR**

**TEST SET, TELETYPEWRITER  
TS-800/UGM-1 AND TS-800A/UGM-1**

**(NSN 6625-00-965-0197)**

**This publication has been printed by the  
UNITED STATES ARMY PUBLICATIONS CENTER,  
ST. LOUIS, MISSOURI, to meet your needs  
on a timely basis.**

TECHNICAL MANUAL }  
 No. 11-6625-620-40P-2 }

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, DC, 28 February 1979

**GENERAL SUPPORT MAINTENANCE  
 REPAIR PARTS AND SPECIAL TOOLS LISTS**

**FOR**

**TEST SET, TELETYPEWRITER  
 TS-800/UGM-1 AND TS-800A/UGM-1  
 (NSN 6625-00-965-0197)**

*Current as of 5 October 1978*

**REPORTING OF ERRORS**

**You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample fold it where shown, and drop it in the mail.**

**If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.**

**In either case a reply will be furnished direct to you.**

**Table of Contents**

	Page	Illus Figure
SECTION I. Introduction . . . . .	1	
II. Repair Parts List . . . . .	5	
Group 01 Teletypewriter Test Set TS-800/UGM-1 and TS-800 A/UGM-1. . . . .	5	1
0101 Test Set, Teletypewriter . . . . .	7	2
Front Panel Assembly . . . . .	9	3
Chassis Assembly . . . . .	11	4
Rear Panel . . . . .	13	5
010101 Power supply . . . . .	17	6
010102 Test Set Subassembly A1 . . . . .	21	7
010103 Test Set Subassembly A2 . . . . .	23	8
010104 Test Set Subassembly A3 . . . . .	25	9
010105 Test Set Subassembly A4 . . . . .	27	10
010106 Test Set Subassembly A5 . . . . .	29	11
010107 Test Set Subassembly A6 . . . . .	31	12
010108 Test Set Subassembly A7 . . . . .	33	13
010109 Test Set Subassembly A8 . . . . .	35	14
010110 Test Set Subassembly A9, A10, A11, A12, A13 . . . . .	37	15
010111 Test Set Subassembly A14 . . . . .	39	16

\*This manual together with TM 11-6425-620-20P, 28 February 1979 supersedes TM 11-6625-620-25P-2, August 1971.

Table of Contents—Continued

	Page	IlluS Figure
010112 Test Set Subassembly A15.....	41	17
010113 Hardness Board Assembly.....	43	18
SECTION III. <b>Special Tools List (Nonapplicable)</b>		
IV. National Stock Number and Part Number Index.....	44	

# SECTION I

## INTRODUCTION

---

### 1. Scope

This manual lists spares and repair parts: special tools; special test, measurement, and diagnostic equipment (TM DE), and other special support equipment required for performance of general support maintenance of the TS-800/UGM-1 and TS-800A/UGM-1. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III. Special Tools List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (N I IN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

### 3. Explanation of Columns

*a. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item tailed out in the illustration.

*b. Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA-	Item procured and stocked for anticipated or known usage.
XA-	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.

<i>Code</i>	<i>Definition</i>
XD-A	support item that is not stocked. When required, item will be procured through normal supply channels.

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O-	Support item is removed, replaced, used at the organizational level.
H-	Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
H-	The lowest maintenance level capable of complete repair of the support item is the general support level.
Z-	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z-	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
D-	Reparable item. When beyond lower level repair