

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL, DS, GS AND DEPOT
MAINTENANCE MANUAL

HEWLETT-PACKARD NOISE
FIGURE METER
MODEL 342A AND NOISE
SOURCE MODEL 349A

HEADQUARTERS, DEPARTMENT OF THE ARMY
SEPTEMBER 2, 1967

This manual contains copyright material reproduced by permission of Hewlett-Packard Company, Palo Alto, California

Technical Manual)

No. 11-6625-1613-15)

HEADQUARTERS,
DEPARTMENT OF THE ARMY
Washington, D.C., 19 September 1967

ORGANIZATIONAL, DS, GS, AND DEPOT MAINTENANCE MANUAL
HEWLETT-PACKARD NOISE FIGURE METER MODEL 382A
AND NOISE SOURCE MODEL 349A

| | Paragraph | Page |
|---|-----------|------|
| Section I. GENERAL INFORMATION | | |
| Scope | 1-A.1 | 1-1 |
| Index of publications | 1-A.2 | 1-1 |
| Forms and records | 1-A.3 | 1-1 |
| General description | 1-1 | 1-3 |
| Noise sources | 1-2 | 1-3 |
| II. OPERATING INSTRUCTIONS | | |
| Introduction..... | 2-1 | 2-1 |
| Controls and terminals | 2-2 | 2-1 |
| Relative noise figure measurements..... | 2-3 | 2-2 |
| Warm-up | 2-4 | 2-2 |
| Meter movement mechanical zero | 2-5 | 2-2 |
| Operating procedures | 2-6 | 2-2 |
| Use of an external meter..... | 2-7 | 2-10 |
| Meter offset | 2-8 | 2-10 |
| Improving low NF measurement accuracy..... | 2-9 | 2-11 |
| Sources of error 10 | 2-10 | 2-12 |
| Image considerations in receiver NF measurements..... | 2-11 | 2-13 |

| | Paragraph | Page |
|--|-----------|------|
| Section III. THEORY OF OPERATION | | |
| Introduction..... | 3-1 | 3-1 |
| Measurement of noise figure..... | 3-2 | 3-1 |
| Over-all operation..... | 3-3 | 3-1 |
| RF amplifier, mixer and local oscillator | 3-4 | 3-2 |
| TF amplifier, detector, video amplifier and dc restorer..... | 3-5 | 3-2 |
| Switching circuits..... | 3-6 | 3-2 |
| Noise source power supply | 3-7 | 3-3 |
| AGC gate and integrator | 3-8 | 3-3 |
| Meter gate and integrator..... | 3-9 | 3-3 |
| Manual operation..... | 3-10 | 3-4 |
| IV. MAINTENANCE | | |
| Cabinet removal | 4-1 | 4-1 |
| Connection for 230 volt operation | 4-2 | 4-1 |
| Over-all performance check | 4-3 | 4-1 |
| Tube replacement | 4-4 | 4-4 |
| Adjustments | 4-5 | 4-4 |
| Checking meter tracking | 4-6 | 4-5 |
| Trouble localization | 4-7 | 4-8 |
| V. NOISE, SOURCE MODEL 349A | | |
| Introduction..... | 5-1 | 5-1 |
| General operating information | 5-2 | 5-1 |
| Operation..... | 5-3 | 5-3 |
| Principles of operation..... | 5-4 | 5-3 |
| Performance checks | 5-5 | 5-3 |

Model 342A

SPECIFICATIONS

Noise Figure Range:

5.2 db noise source 0 to 15 db, indication to infinity

15.2 db noise source 3 to 30 db, indication to infinity

Accuracy: (excluding source accuracy)

Noise Diode Scale: +1/2 db, 0 to 15

Gas Tube Scale: +1/2 db, 10 to 25

+ 1 db, 3 to 10

and 25 to 30

Input Frequency:

30, 60, 70, 105 and 200 mc, selected by switch.

Other frequencies optional.

Bandwidth: 1 mc minimum

Input:

-60 to 10 dbm (noise source on). Corresponds to gain between noise source and 34; of:

5.2 db noise source approx. 50 to 100

15.2 db noise source approx. 40 to 90 db

Input Impedance: 50 ohms nominal

AGC Output:

Nominally 0 to 6v from rear binding posts

Recorder Output:

1 ma maximum into 2000 ohms maximum

Power Input:

115/230v +10%, 50-60cps, 185 to 435 watts depending on noise source and line voltage

Power Output:


Will operate 343A, 345B, 347A or 349A

noise sources

Dimensions:

Cabinet Mount:
high, 14-1/2 in. deep

Rack Mount:

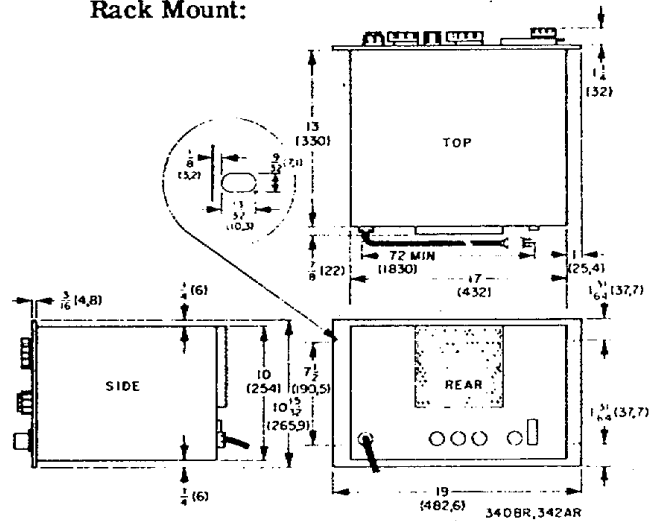

Weight:

Cabinet Mount: Net 40 lbs, shipping 51 lbs

Rack Mount: Net 34 lbs, shipping 49 lbs

Accessories Furnished:

340A-16A, 6 ft cable for connecting r 342A to 1 349A or to any . 347A noise source

Accessories Available:

343A VHF Noise Source, 10 to 600 mc

345B IF Noise Source, 30 to 60 mc

347A Waveguide Noise Source for S, G, J, H, X and P bands

349A UHF Noise Source, 400 to 4000 mc,

Type N connectors

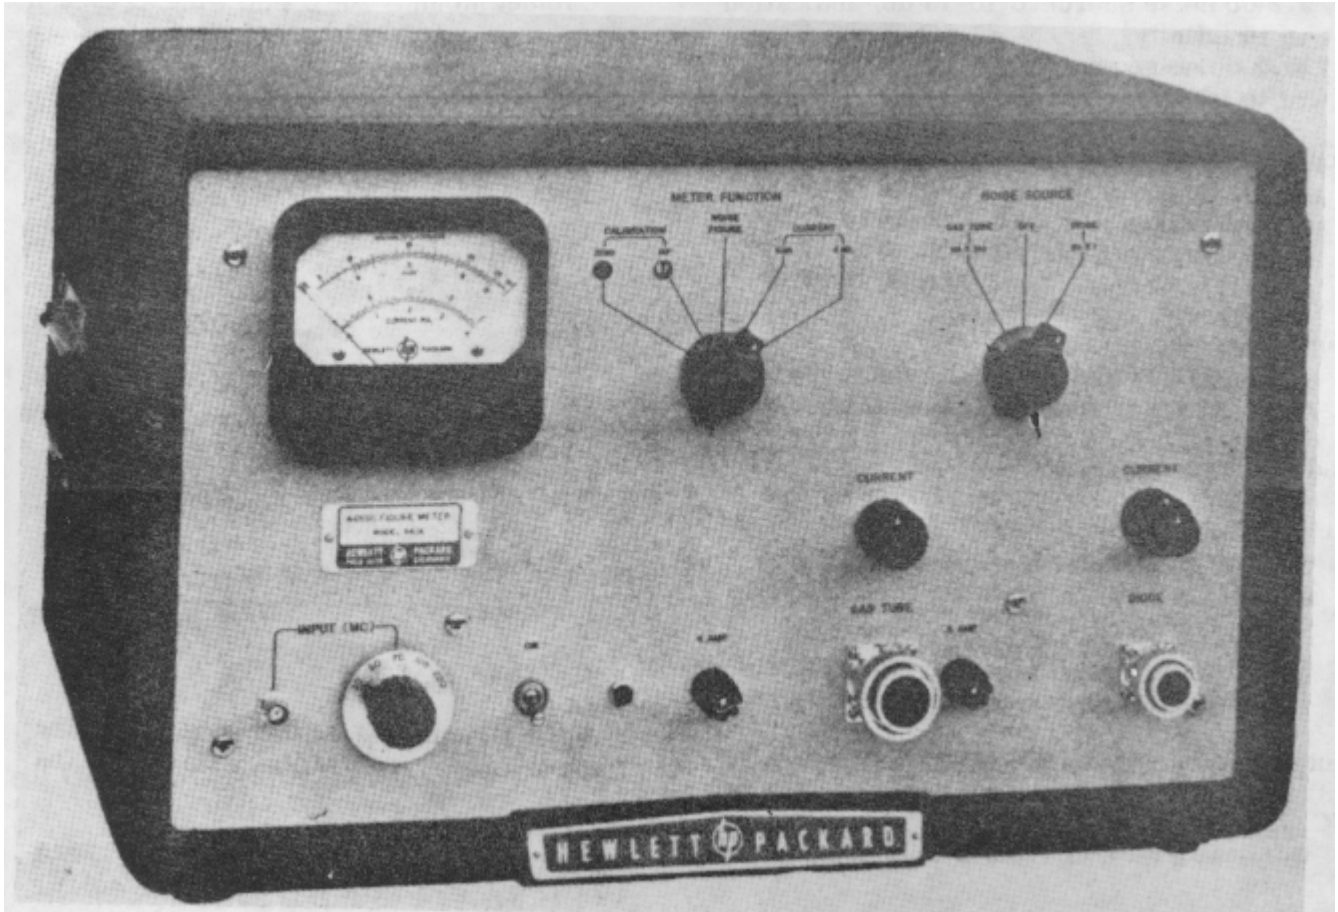


Figure 1-1. Model 342A Noise Figure Meter

SECTION I GENERAL INFORMATION

1-A.1. Scope

a. This manual includes installation and operation instructions and covers operator's, organizational, direct support (DS), general support (GS), and depot maintenance. It describes Hewlett-Packard (Federal supply code 28480) Noise Figure Meter 342A and Noise Source Model 349A.

b. A basic issue items list for this equipment is not included as part of this manual.

1-A.2. Index of Publications.

Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to the equipment.

1-A.3. Forms and Records

a. Reports of Maintenance and Unsatisfactory Equipment. Use equipment forms and records in accordance with instructions given in TM 38-750.

b. Report of Packaging and Handling Deficiencies. Fill out and forward DD Form 6 (Report of Packaging and Handling Deficiencies) as prescribed in AR 700-58 (Army), NAVSUP Publication 378 (Navy), AFR 71-4 (Air Force), and MCO P4610-5 (Marine Corps).

c. Discrepancy in Shipment Report (DISREP) (SF361). Fill out and forward Discrepancy in Shipment Report (DISREP) (SF361) as prescribed in AR 55-38 (Army), NAVSUP Pub 459 (Navy), AFM 75-34 (Air Force), and MCO P4610.19 (Marine Corps).