

**TECHNICAL MANUAL**  
**ORGANIZATIONAL MAINTENANCE REPAIR PARTS**  
**AND**  
**SPECIAL TOOLS LISTS**  
**FOR**  
**TEST SETS, RADIO**  
**AN/PRM-31 (NSN 6625-00-935-1359),**  
**AN/PRM-31A (NSN 6625-00-143-6683),**  
**AND**  
**AN/PRM-31B (NSN 6625-00-183-0212)**

THIS PUBLICATION IS A COURTESY QUICK COPY FROM THE UNITED STATES ARMY PUBLICATIONS DISTRIBUTION CENTER, ST. LOUIS, MISSOURI, TO MEET YOUR NEEDS WHILE WE REPLENISH OUR REGULAR-STOCK.

---

HEADQUARTERS, DEPARTMENT OF THE ARMY

OCTOBER 1978

TECHNICAL MANUAL }  
 No. 11-6625-1621-20P }

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, DC, 12 October 1978

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST  
 FOR  
 TEST SETS, RADIO  
 AN/PRM-31 (NSN 6625-00-935-1359)  
 AN/PRM-31A (NSN 6625-00-143-6683)  
 AND  
 AN/PRM-31B (NSN 6625-00-183-0212)**

*Current as of 16 June 1978*

**REPORTING OF ERRORS**

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSELME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

**TABLE OF CONTENTS**

SECTION		Page	Illus Figure
	I. Introduction -----	1	
	II. Repair parts list -----	5	
GROUP	00 Test Sets, Radio AN/PRM-13, AN/ PRM-31B-----	5	1
	01 Test Set, Radio TS-2587/PRM-31 (No parts authorized)		
	0101 Front panel assembly (A1)-----	7	2
	010101 Signal generator (A1A1) (No parts authorized)		
	01010101 Attenuator (A1A1T1) (No parts authorized)		
	01010102 Resistor assembly (A1A1R1) (No parts au- thorized)		
	01010103 Oscillator, test set (A1A1Y1) (No parts au- thorized)		
	0101010301 Amplifier, signal generator (A1A1Y1AR1) (No parts authorized)		
	0101010302 Oscillator signal generator (A1A1Y1Y1) (No parts authorized)		
	010102 Metering circuit (A1A2) (No parts authorized)		
	010103 Resistor assembly (A1A3) (No parts authorized)		
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index-----	8	

\*This manual supersedes TM 11-6625-1621-20P, 31 December 1976.

**SECTION I  
INTRODUCTION**

---

**1. Scope**

This manual lists repair parts and special tools required for performance of organizational maintenance of the AN/PRM-31 AN/PRM-31A, and AN/PRM-31B.

**2. General**

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III. Special Tools List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in ascending National item identification number (NIIN, last 9 digits) sequence, of all National stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock number and part numbers are cross-referenced to each illustration figure and item number appearance.

**3. Explanation of Columns**

The following provides an explanation of columns found in the tabular listings:

*a. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item number.* The number used to identify each item called out in the illustration.

*b. Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA-Item procured and stocked for anticipated or known usage.	

PD-Support item, excluding support equipment. procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

**NOTE**

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA, XD; and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMIR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the fourth position will indicate the following level of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O-Support Item is removed, replaced, used at the organizational level.	

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
H-The lowest maintenance level capable of complete repair of the support item is the general support level.	

Z--Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability Codes</i>	<i>Definition</i>
Z-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.	
H-Reparable item. When uneconomically reparable. condemn and dispose at the general support level.	

A-Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material). Refer to appropriate manuals/directives for specific instructions.