
TECHNICAL MANUAL

GENERAL SUPPORT MAINTENANCE REPAIR PARTS

AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

FOR

TEST SETS, TELEGRAPH

AN/GGM-15(V)1 (NSN 6625-00-464-1702)

AN/GGM-15(V)2 (NSN 6625-00-442-6131)

GENERATOR, SIGNAL SG-860/GGM-15(V)

(NSN 6625-00-1279-2525)

AND

DOLLY, TEST EQUIPMENT V-434/GGM-15(V)

(NSN 6625-00-435-7775)

HEADQUARTERS, DEPARTMENT OF THE ARMY

SEPTEMBER 1977



**GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

FOR

TEST SETS, TELEGRAPH

AN/GGM-15(V)1 (NSN 6625-00-464-1702)

AN/GGM-15(V)2 (NSN 6625-00-442-6131)

**GENERATOR, SIGNAL SG-860/GGM-15(V)
(NSN 6625-00-179-2525)**

AND

DOLLY, TEST EQUIPMENT V-434/GGM-15(V)

(NSN 6625-00-435-7775)

Current as of 28 April 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION	I.	Introduction.....	Page	Illus Figure
	II.	Repair parts list.....	5	
Group	00	Test Sets, Telegraph AN/GGM-15(V)1, AN/GGM-15(V).....	5	1
	01	Generator, Signal SG-860/GGM-15(V).....	7	2
		0101 Panel assembly, front (1A1).....	9	3
		0102 Chassis assembly (1A2).....	11	4
		010201 Component board assembly (1A2A1).....	15	5
		010202 Component board assembly (1A2A2).....	19	6
		010203 Component board assembly (1A2A3).....	23	7
		010204 Component board assembly (1A2A4).....	27	8
		010205 Component board assembly (1A2A5).....	31	9
		010206 Component board assembly (1A2A7).....	37	10
		010207 Component board assembly (1A2A8).....	41	11
		010208 Component board assembly (1A2A9).....	45	12
		010209 Component board assembly (1A2A10).....	49	13
		010210 Component board assembly (1A2A11).....	53	14
		010211 Adapter card assembly (1A2A12) (No parts authorized)		
		0103 Panel assembly, rear (1A3).....	55	15
		010301 Cable Assembly CX-12105/U (1A3A2) (No parts authorized)		
	02	Analyzer, Signal Distortion TS-2862/GGM-15(V) (See TM 11-6625-1668-40P-2 for parts)		
	0201	Panel assembly, front (2A1) (See TM 11-6625-1668-40P-2 for parts)		
	020101	Component board (2A1A1) (See TM 11-6625-1668-40P-2 for parts)		
	0202	Chassis assembly, electrical equipment (2A2) (See TM 11-6625-1668-40P-2 for parts)		
	020201	Component board (2A2A1) (See TM 11-6625-1668-40P-2 for parts)		
	020202	Component board assembly (2A2A2) (See TM 11-6625-1668-40P-2 for parts)		

*This manual supersedes so much of TM 11-6625-1668-45.1, 3 May 1972, as pertains to repair parts and special tools list.

		Page	Illus Figure
Group	020203	Component board assembly (2A2A3) (See TM 11-6625-1668-40P-2 for parts)	
	020204	Component board assembly (2A2A4) (See TM 11-6625-1668-40P-2 for parts)	
	020205	Component board assembly (2A2A5) (See TM 11-6625-1668-40P-2 for parts)	
	020206	Component board assembly (2A2A6) (See TM 11-6625-1668-40P-2 for parts)	
	020207	Component board assembly (2A2A7) (See TM 11-6625-1668-40P-2 for parts)	
	020208	Adapter card assembly (2A2A8) (No parts authorized)	
	0203	Panel assembly, rear (2A3) (See TM 11-6625-1668-40P-2 for parts)	
	020301	Cable assembly, power, electrical CX-12105/U (2A3A2) (No parts authorized)	
03		Oscilloscope OS-206/GGM-15(V) (See TM 11-6625-1668-40P-3 for parts)	
	0301	Panel assembly, front (3A1) (See TM 11-6625-1668-40P-3 for parts)	
	0302	Chassis assembly, scope (3A2) (See TM 11-6625-1668-40P-3 for parts)	
	0303	Cage assembly (3A3) (See TM 11-6625-1668-40P-3 for parts)	
	030301	Component board (3A3A1) (See TM 11-6625-1668-40P-3 for parts)	
	030302	Component board assembly (3A3A2) (See TM 11-6625-1668-40P-3 for parts)	
	030303	Component board assembly (3A3A3) (See TM 11-6625-1668-40P-3 for parts)	
	030304	Component board assembly (3A3A4) (See TM 11-6625-1668-40P-3 for parts)	
	030305	Component board assembly (3A3A5) (See TM 11-6625-1668-40P-3 for parts)	
	030306	Component board assembly (3A3A6) (See TM 11-6625-1668-40P-3 for parts)	
	030307	Component board assembly (3A3A7) (See TM 11-6625-1668-40P-3 for parts)	
	030308	Component board assembly (3A3A8) (No parts authorized)	
	0304	Panel assembly, rear (3A4) (See TM 11-6625-1668-40P-3 for parts)	
	030401	Component board assembly (3A4A1) (See TM 11-6625-1668-40P-3 for parts)	
	030402	Cable Assembly, Power, Electrical CX-12105/U (3A4A4) (No parts authorized)	
04		Case, Test Set CY-6672/GGM-15(V) (Used on AN/GGM-15(V)2 only)	57 16
06		Dolly, Test Equipment V-434/GGM-15(V)(used on AN/GGM-15(V)2only)	59 17
	0501	Dolly, test equipment carrier (5A1)	59 17
06		Cable Assembly, Special Purpose, Electrical CX-12024/GGM-15(V) (No parts authorized)	
SECTION III.		Special tools list (Not applicable)	
IV.		National stock number and part number index	60

**SECTION I
INTRODUCTION**

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of general support maintenance of the AN/GGM-15(V)1, and AN/GGM-15(V)2. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	--Item procured and stocked for anticipated or known usage.
PD	--Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
XD	--A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O	--Support item is removed, replaced, used at the organizational level.
H	--Support item is removed, replaced, used at the general support level.
D	--Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
H	--The lowest maintenance level capable of complete repair of the support item is the general support level.
D	--The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	--Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z	--Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
H	--Reparable item. When uneconomically repairable, condemn and dispose at the general support level.