

**TECHNICAL MANUAL**

**GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND  
SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS)**

**FOR**

**TEST SETS, TELEGRAPH**

**AN/GGM-15(V)1 (NSN 6625-00-464-1702)**

**AN/GGM-15(V)2 (NSN 6625-00-442-6131)**

**AND**

**OSCILLOSCOPE OS-206/GGM-15(V)**

**(NSN 6625-00-442-6135)**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY  
NOVEMBER 1977**

TECHNICAL MANUAL  
NO. 11-6625-1668-40P-3  
NO. 11-6625-1668-40P-3  
1977



HEADQUARTERS  
DEPARTMENT OF THE ARMY  
Washington, DC, 7 November

**GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS  
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)  
FOR**

**TEST SETS, TELEGRAPH  
AN/ GGM-15(V)1 (NSN 6625-00-464-1702)  
AN/GGM-15(V)2 (NSN 6625-00-442-6131)  
AND  
OSCILLOSCOPE OS-206/GGM-15(V)  
(NSN 6625-00442-6135)**

Current as of 29 April 1977

**REPORTING OF ERRORS**

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

---

\*This manual supersedes so much of TM 11-6625-1668-45-3, 7 June 1972, as pertains to repair parts and special tools list.

TABLE OF CONTENTS

		Page	Illus Figure
SECTION	I.	Introduction.....	1
	II.	Repair parts list .....	5
GROUP	00	Test Sets, Telegraph AN/GGM-15(V)1 AN/GGM-15(V)2.....	5 1
	01	Generator, Signal SG-860/GGM-15(V) (See TM 11-6625-1668-40P-1 for parts)	
		0101 Panel assembly, front (1A1 ) (See TM 11-6625-1668-40P-1 for parts)	
		0102 Chassis assembly (1A2) (See TM 11-6625-1668-40P-1 for parts)	
		010201 Component board assembly (1A2A1) (See TM 11-6625-1668-40P-1 for parts)	
		010202 Component board assembly (1A2A2) (See TM 11-6625-1668-40P-1 for parts)	
		010203 Component board assembly (1A2A3) (See TM 11-6625-1668-40P-1 for parts)	
		010204 Component board assembly (1A2A4) (See TM 11-6625-1668-40P-1 for parts)	
		010205 Component board assembly (1A2A5) (See TM 11-6625-1668-40P-1 for parts)	
		010206 Component board assembly (1A2A7) (See TM 11-6625-1668-40P-1 for parts)	
		010207 Component board assembly (1A2A8) (See TM 11-6625-1668-40P-1 for parts)	
		010208 Component board assembly (1A2A9) (See TM 11-6625-1668-40P-1 for parts)	
GROUP		010209 Component board assembly (1A2A10) (See TM 11-6625-1668-40P-1 for parts)	
		010210 Component board assembly (1A2A11) (See TM 11-6625-1668-40P-1 for parts)	
		010211 Adapter card assembly (1A2A12) (No parts authorized)	
		0103 Panel assembly, rear (1A3) (See TM 11-6625-1668-40P-1 for parts)	
		010301 Cable assembly CX-12105/U (1A3A2) (No Parts Authorized)	
	02	Analyzer, Signal Distortion TS-2862/GGM-15(V) (See TM 11-6625-1668-40P-2 for parts)	
		0201 Panel assembly, front (2A1) (See TM 11-6625-1668-40P-2 for parts)	
		020101 Component board (2A1A1) (See TM 11-6625-1668-40P-2 for parts)	
		0202 Chassis assembly, electrical equipment (2A2) (See TM 11-6625-1668-40P-2 for parts)	
		020201 Component board (2A2A1) (See TM 11-6625-1668-40P-2 for parts)	
		020202 Component board assembly (2A2A2) (See TM I 1-6625-1668-40P-2 for parts)	
		020203 Component board assembly (2A2A3) (See TM 11-6625-1668-40P-2 for parts)	
		020204 Component board assembly (2A2A4) (See TM 11-6625-1668-40P-2 for parts)	

		Page	Illus Figure
GROUP	020205 Component board assembly (2A2A5) (See TM 11-6625-1668-40P-2 for parts)		
	020206 Component board assembly (2A2A6) (See TM 11-6625-1668-40P-2 for parts)		
	020207 Component board assembly (2A2A7) (See TM 11-6625-1668-40P-2 for parts)		
	020208 Adapter card assembly (2A2A8) (No parts authorized)		
	0203 Panel assembly, rear (2A3) (See TM 11-6625-1668-40P-2 for parts)		
	020301 Cable Assembly, Power, Electrical CX-12105/U (2A3A2) (No parts authorized)		
03	Oscilloscope OS-206/GGM-15(V).....	7	2
	0301 Panel assembly, front (3A1).....	9	3
	0302 Chassis assembly, scope (3A2).....	11	4
	0303 Cage assembly (3A3).....	13	5
	030301 Component board (3A3A1).....	15	6
	030302 Component board assembly (3A3A2).....	19	7
	030303 Component board assembly (3A3A3).....	23	8
	030304 Component board assembly (3A3A4).....	27	9
	030305 Component board assembly (3A3A5).....	31	10
	030306 Component board assembly (3A3A6).....	35	11
GROUP	030307 Component board assembly (3A3A7).....	39	12
	030308 Component board assembly (3A3A8) (No parts authorized)		
	0304 Panel assembly, rear (3A4).....	43	13
	030401 Component board assembly (3A4A1).....	46	14
	030402 Cable Assembly, Power, Electrical CX-12105/U (3A4A4) (No parts authorized)		
04	Case, Test Set CY-6672/GGM-15(V) (Used on AN/GGM-15(V)2 only).....	49	15
05	Dolly, Test Equipment V-434/GGM-15(V) (Used on AN/GGM-15(V)2 only).....	51	16
06	0501 Dolly, test equipment carrier (5A ).....	51	16
	Cable Assembly, Special Purpose, Electrical CX-12024/ GGM-15(V) (No parts authorized)		
SECTION III.	Special tools list (Not applicable)		
IV.	National stock number and part number index.....	52	

**SECTION I  
INTRODUCTION**

**1. Scope**

This manual lists spaces and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of general support maintenance of the AN/GGM-15(V)1, AN/GGM-15(V)2 and OS206/GGM-15(V). It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

**2. General**

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III. Special Tools List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

**3. Explanation of Columns**

*a. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

*b. Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA-Item procured and stocked for anticipated or known usage.	
PD-Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.	
XD-A support item that is not stocked. When required, item will be procured through normal supply channels.	

**NOTE**

**Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR700-42.**

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item.

The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application Explanation</i>
O-	Support item is removed, replaced, used at the organizational level.
H-	Support item is removed, replaced, used at the general support level.
D-	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/ Explanation</i>
H-	The lowest maintenance level capable of complete repair of the support item is the general support level.