

TM 11-6625-1683-24P

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL; SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

FOR

TEST FACILITIES KITS

MK-980/PPS-5 (NSN 6625-00-933-9980)

AND

MK-980A/PPS-5 (NSN 6625-00-453-5667)

**HEADQUARTERS DEPARTMENT OF THE ARMY
JANUARY 1980**

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
TEST FACILITIES KITS
MK-980/PPS-5 (NSN-6625-00-933-9980)
AND
MK-980A/PPS-5 (NSN-6625-00-453-5667)**

Current as of July 13, 1979

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION I.	Introduction	1	
SECTION II.	Repair parts list	5	
GROUP 00	Test Facilities Kit MD-980/PPS-5, MK-980A/PPS-5	5	1
01	Electrical Test Panel SB-3004/PPS-5, SB-3004A/PPS-5	19	2-16
	0101 Converter assembly unit 2300	63	17-20
	0102 Converter assembly unit 700	75	21-26
02	Test Facilities Kit Case CY-6208/PPS-5	91	27
03	Kit accessory	93	28-30
	0301 Special Purpose Electrical Cable Assembly CX-10429/PPS-5	99	31
	0302 Special Purpose Electrical Cable Assembly CX-10430/PPS-5	101	32
	0303 Special Purpose Electrical Cable Assembly CX-10431/PPS-5	103	33
	0304 Special Purpose Electrical Cable Assembly CX-10432/PPS-5	105	34
	0305 Special Purpose Electrical Cable Assembly CX-10433/PPS-5	107	35
	0306 Special Purpose Electrical Cable Assembly CX-10434/PPS-5	109	36
	0307 Special Purpose Electrical Cable Assembly CX-10435/PPS-5	111	37
	0308 Special Purpose Electrical Cable Assembly CX-10436/PPS-5	113	38
	0309 Special Purpose Electrical Cable Assembly CX-10437/PPS-5	115	39
	0310 Special Purpose Electrical Cable Assembly CX-10438/PPS-5	117	40
	0311 Special Purpose Electrical Cable Assembly CX-10439/PPS-5	119	41
	0312 Special Purpose Electrical Cable Assembly CX-10440/PPS-5	121	42
	0313 Special Purpose Electrical Cable Assembly CX-10441/PPS-5, CX-10441A/PPS-5	123	43,44
	0314 Special Purpose Electrical Cable Assembly CX-10442/PPS-5	127	45
	0915 Special Purpose Electrical Cable Assembly CX-10443/PPS-5	129	46
	0316 Special Purpose Electrical Cable Assembly CX-10444/PPS-5, CX-10444A/PPS-5	131	47,48
	0317 Special Purpose Electrical Cable Assembly CX-10445/PPS-5	135	49
	0318 Special Purpose Electrical Branched Cable Assembly CX-10485/PPS-5	137	50
	0319 Radio Frequency Cable Assembly CG-3353/U	139	51
	0320 Radio Frequency Cable Assembly CG-3354/U	141	52

* This manual supersedes much of TM 11-4625-1662-15, 19 May 1967, including Change 1, 12 October 1967, as pertains to repair parts and special tools list.

Table of Contents-Continued

		Page	Illus Figure
	0321 Electrical Lead CX-10446/PPS-5.....	143	53
	0322 Electrical Lead CX-10447/PPS-5	145	54
	0323 Electrical Lead CX-10448/PPS-5	147	55
	0324 Radio Frequency Cable Assembly CG-3355/U	149	56
	0325 Electrical Lead CX-10449/PPS-5.....	151	57
	0326 Electrical Lead CX-10450/PPS-5.....	153	58
	0327 Electrical Lead CX-10451/PPS-5.....	155	59
	0328 Electrical Lead CX-10452/PPS-5.....	157	60
SECTION	III. Specials tools list (Not applicable)		
	IV. National stock number and part number index.	158	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the MK-980/PPS-5 and MK-980A/PPS-5. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA-	Item procured and stocked for anticipated or known usage.

XD-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O-	Support item is removed, replaced, used at the organizational level.
H-	Support item is removed, replaced, used at the general support level.
(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:	
O-	The lowest maintenance level capable of complete repair of the support item is the organizational level.
H-	The lowest maintenance level capable of complete repair of the support item is the general support level.
Z-	Nonreparable. No repair is authorized.
(3) <i>Recoverability code.</i> Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:	