

**TECHNICAL MANUAL**

**ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE**

**REPAIR PARTS AND SPECIAL TOOLS LISTS**

**(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND**

**SPECIAL TOOLS)**

**FOR**

**INTERFACE TEST, PROCESSOR, RADAR TS-2973A/APS-94D**

**(NSN 6625-01-071-8579)**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**6 JANUARY 1982**

TECHNICAL MANUAL  
 No. 11-6625-1831-23P

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, DC, 6 January 1982

**ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE**  
**REPAIR PARTS AND SPECIAL TOOLS LISTS**  
**(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND**  
**SPECIAL TOOLS)**  
**FOR**  
**INTERFACE TEST, PROCESSOR, RADAR TS-2973A/APS-94D**  
**(NSN 6625-01-071-8579)**

**Current as of 16 July 1981**

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to Commander, US Army Communications-Electronics Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703. In either case, a reply will be furnished direct to you.

**Table of Contents**

SECTION		Page	Illus Figure
	I. Introduction .....	1	
	II. Repair Parts List .....	5	
Group	00 Interface Test, Processor, Radar TS-2973A/APS-94D .....	5	1
	01 Panel, Test, Electrical (Front Detail).....	7	2
	Panel Test, Electrical Rear Detail) .....	11	4
	Chassis Assembly Electrical . .....	13	5
	0101 Clock and Counter Module 1A3.....	17	6
	0102 Oscillator and Switch Module 1A2.....	19	7
	0103 Power Supply Regulator Module 1A3.....	23	8
	0104 Electronic Component Assembly 1TB1 .....	27	9
	0105 Circuit Card Assembly ECCM 1A6 .....	29	10
	0106 Cable Assembly, Special Purpose Electrical CX-12307U W1 . ....	31	11
	0107 Cable Assembly, Special Purpose Electrical CX-12306/U W2 . ....	31	11
	0108 Cable Assembly, Special Purpose Electrical CX-122401U W3 ....	31	11
	0109 Cable Assembly RF (3 Ft) CG-3618/U W4 .....	31	11
	0110 Cable Assembly RF (3 Ft) CG-3618/U W5 .....	31	11
	0111 Cable Assembly RF (3 Ft) CG-3618/U W6 .....	31	11
	0112 Cable Assembly RF (6 Ft)} CG-3618/U W7 .....	31	11
	0113 Cable Assembly RF (6 Ft) CG-3618/U W8 .....	31	11

**\*This manual supersedes TM 11- 6625 - 1831 - 23P, 13 April 1981.**

		Page	Illus Figure
Group 01	0114 Cable Assembly RF (6 Ft)} CG-3618/U W9 .....	31	11
	0115 Cable Assembly RF 16 Ft) W10 .....	31	11
	0116 Cable Assembly RF {(6 Ft) W11 .....	31	11
	0117 Cable Assembly RF (6 Ft) W12 .....	31	11
	0118 Cable Assembly RF (6 Ft) W13 .....	31	11
	0119 Cable Assembly RF (2 Ft) W14 .....	31	11
02	Control-Monitor, Interface Test C-10857/APS-94F .....	33	12
03	Case, Test Set .....	35	13
04	Extender Card MX-8630/APS-94D .....	37	14
05	Extender Card MX-8740/APS-94D .....	37	14
SECTION	III. Special Tools List (Not applicable)		
	IV. National Stock Number and Part Number Index .....	38	

SECTION I

INTRODUCTION

**1. Scope**

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational and direct support maintenance of the TS-2973A/APS-94D. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

**2. General**

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III. Special Tools List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

**3. Explanation of Columns**

*a. Illustration.* This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration on which the item is shown.

(2) Item number. The number used to identify item called out in the illustration.

*b. Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows

<i>Code</i>	<i>Definition</i>
PA-Item procured and stocked for anticipated or known usage.	

<i>Code</i>	<i>Definition</i>
AF-Item to be assembled at direct support maintenance level.	
XA-Item is not procured or stocked because the replacement of the next higher assembly.	
XD-A support item that is not stocked. When required, item will be procured through normal supply channels.	

**NOTE**

**Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.**

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O-Support item is removed, replaced, used at the organizational level.	
F-Support item is removed, replaced, used at the direct support level.	
D-Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.	

*b.* The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
F-The lowest maintenance level capable of complete repair of the support item is the direct support level.	