

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS
FOR
COUNTER, DIGITAL AN/USM-257A
(NSN 6625-00-935-1457)**

TECHNICAL MANUAL }
 No. 11-6625-2377-24P }

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, DC, 24 June 1980

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
 REPAIR PARTS AND SPECIAL TOOLS LISTS
 (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
 FOR
 COUNTER, DIGITAL AN/USM-257A
 (NSN 6625-00-935-1457)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION	I. Introduction	1	
	II. Repair parts list.....	5	
GROUP	00 Counter, Digital AN/USM-257A.....	5	1
	01 Electronic Digital Readout TD-875A(P)/U	7	2
	Electronic Digital Readout TD-875A(P)/U Chassis Assembly	9	3
	Electronic Digital Readout TD-875A(P)/U Cable RF	11	4
	Electronic Digital Readout TD-875A(P)/U Chassis Equipment	13	5
	Electronic Digital Readout TD-875A(P)/U Cable Assembly	15	6
	Electronic Digital Readout TD-875A(P)/U Plate Assembly	17	7
	Electronic Digital Readout TD-875A(P)/U Panel Assembly, Rear	19	8
	Electronic Digital Readout TD-875A(P)/U Wiring Assembly	21	9
	Electronic Digital Readout TD-875A(P)/U Motor, Fan	23	10
	Electronic Digital Readout TD-875A(P)/U Power Supply Chassis	25	11
	Electronic Digital Readout TD-875A(P)/U Wiring Harness	27	12
	Electronic Digital Readout TD-875A(P)/U Circuit Board	29	13
	Electronic Digital Readout TD-875A(P)/U Printed Circuit Board	31	14
	Electronic Digital Readout TD-875A(P)/U 1 Megohm Amplifier	35	15
	Electronic Digital Readout TD-875A(P)/U 50 Megahertz Amplifier and Decade	39	16
	Electronic Digital Readout TD-875A(P)/U 250 DC Decade Board	45	17
	Electronic Digital Readout TD-875A(P)/U 2.5 Megahertz Decade	49	18
	Electronic Digital Readout TD-875A(P)/U 50 Megahertz Readout Assembly (Partial View)	55	19
	Electronic Digital Readout TD-875A(P)/U 10 Megahertz Decade (Partial View)	59	20
	Electronic Digital Readout TD-875A(P)/U Time Base Assembly (Partial View)	65	21

*This manual supersedes so much of TM 11-6625-2377-12, 27 May 1977 and TM 11-6625-2377-40, 17 October 1978 as pertains to repair parts and special tools list.

		Page	Illus Figure
		71	22
		79	23
		83	24
		87	25
		89	26
		91	27
		93	28
		95	29
		97	30
		101	31
		103	32
		105	33
		107	34
		109	35
GROUP	02	111	36
		113	37
		115	38
		117	39
	03	119	40
	04	121	41
		123	42
		125	43
		129	44
		133	45
		137	46
		141	47
		143	48
		147	49
	05	151	50
SECTION	III.		
SECTION	IV.	152	

**SECTION I
INTRODUCTION**

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/USM-257A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA-	Item procured and stocked for anticipated or known usage.
XD-	A support item that is not stocked. When required, item will be procured through normal supply channels.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Definition</i>
O-	Support item is removed, replaced, used at the organizational level.
H-	Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e.,

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*