

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

FOR

**MAINTENANCE KIT,
OPTICAL ALIGNMENT MK-1144/TAQ-1B
(NSN 5895-00-402-5311)**

AND

**MAINTENANCE KIT,
ELECTRONIC EQUIPMENT MK-1145/TAQ-1B
(NSN 5895-00-402-5302)**

HEADQUARTERS, DEPARTMENT OF THE ARMY

JULY 1977

TECHNICAL MANUAL }
 No. 11-6625-2392-24P

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, D C , 1 July 1977

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
 REPAIR PARTS AND SPECIAL TOOLS LISTS
 (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
 FOR
 MAINTENANCE KIT, OPTICAL ALIGNMENT MK-1144/TAQ-1B
 (NSN 5895-00-402-5311)
 AND
 MAINTENANCE KIT, ELECTRONIC EQUIPMENT MK-1145/TAQ-1B
 (NSN 5895-00-402-5302)**

Current as of 9 March 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: P&SEL-MA-Q, Fort Monmouth, New Jersey 07703

In either case a reply will be furnished direct to you.

Table of Contents

| | | | |
|--------------|--|------|------|
| | | Page | Page |
| SECTION I. | Introduction | 1 | |
| II. | Repair parts lists | 1 | |
| Group 00 | Maintenance Kit Optical Alignment MK-1144/TAQ-1B | 1 | |
| 01 | RT connector optical alignment target | 1 | |
| 02 | Data base fixture | 1 | |
| 03 | Maintenance fixture assembly | 1 | |
| 04 | Maintenance mounting assembly | 1 | |
| 05 | Transfer base alignment fixture | 1 | |
| 06 | Mirror adjustment assembly | 1 | |
| 07 | Maintenance Kit Electronic MK-1145/TAQ-1B | 1 | |
| 08 | RT connector optical equipment target A1 base layout kit for parts | 1 | |
| 09 | Maintenance fixture assembly A2 base layout kit for parts | 1 | |
| 10 | Maintenance mounting assembly A3 base layout kit for parts | 1 | |
| SECTION III. | Approved tools lists and applications | | |
| IV. | Approved special equipment and parts requisition cards | | |

*This technical publication is a result of DD Form 13, 13 July 1971, revised (Change 1) 7 September 1973, in accordance with DA Form 2028-2 (Test) and DA Form 2028 (Recommended Changes to Publications and Blank Forms).

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts, special tools, special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the MK-1144/TAQ-1B and MK-1145/TAQ-1B. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a Section II Repair Parts List A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b Section III Special Tools List Not applicable.

c Section IV National Stock Number and Part Number Index A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphabetic sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a Illustration This column is divided as follows:

- (1) *Figure number* Indicates the figure number of the illustration on which the item is shown.
- (2) *Item number* The number used to identify item called out in the illustration.

b Source, Maintenance, and Recoverability (SMR) Codes

(1) *Source code* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

| <i>Code</i> | <i>Definition</i> |
|-------------|--|
| PA | Item procured and stocked for anticipated or known usage. |
| XD | A support item that is not stocked. When required, item will be procured through normal supply channels. |

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

| <i>Code</i> | <i>Application/Explanation</i> |
|-------------|---|
| O | Support item is removed, replaced, used at the organizational level. |
| H | Support item is removed, replaced, used at the general support level. |

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

| <i>Code</i> | <i>Application/Explanation</i> |
|-------------|---|
| O | The lowest maintenance level capable of complete repair of the support item is the organizational level. |
| H | The lowest maintenance level capable of complete repair of the support item is the general support level. |
| Z | Nonreparable. No repair is authorized. |

(3) *Recoverability code* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows: