

TECHNICAL MANUAL

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT, GENERAL SUPPORT,
AND DEPOT MAINTENANCE MANUAL**

**TEST FACILITIES SET AN/TPM-24(V)2
(NSN 6625-00-423-2133)**

**This copy is a reprint which includes current pages
from Changes 1 and 2. The title was changed to read
as shown above by Change 2.**

HEADQUARTERS, DEPARTMENT OF THE ARMY

NOVEMBER 1972

TECHNICAL MANUAL }
 No. 11-6625-2398-15-2

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, DC, 15 November 1972

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT
 GENERAL SUPPORT AND DEPOT MAINTENANCE MANUAL
 TEST FACILITIES SET AN/TPM-24(V)2
 (NSN 6625-00-423-2133)**

REPORTING OF ERRORS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 directly to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703. A reply will be furnished to you.

		<i>Paragraph</i>	<i>Page</i>
CHAPTER	1. INTRODUCTION		
Section	I. General.....	1-1	1-1
	II. Description and data.....	1-4	1-1
CHAPTER	2. INSTALLATION.....	2-1	2-1
CHAPTER	3. OPERATING INSTRUCTIONS		
Section	I. Operator's controls, indicators, and connectors.....	3-1	3-1
	II. Operation.....	3-3	3-4
CHAPTER	4. OPERATOR'S AND ORGANIZATIONAL MAINTENANCE		
Section	I. General.....	4-1	4-1
	II. Lubrication.....	4-3	4-1
	III. Preventive maintenance.....	4-4	4-1
CHAPTER	5. FUNCTIONING.....	5-1	5-1
CHAPTER	6. GENERAL SUPPORT MAINTENANCE		
Section	I. General troubleshooting information.....	6-1	6-1
	II. Component troubleshooting.....	6-4	6-6
	III. Component testing.....	6-8	6-11
CHAPTER	7. REPAIR.....	7-1	7-1
CHAPTER	8. GENERAL SUPPORT TESTING PROCEDURES.....	8-1	8-1
CHAPTER	9. DEPOT OVERHAUL STANDARDS.....	9-1	9-1
CHAPTER	10. SHIPMENT, LIMITED STORAGE, AND DEMOLITION TO PREVENT ENEMY USE		
Section	I. Shipment and limited storage.....	10-1	10-1
	II. Demolition of material to prevent enemy use.....	10-3	10-1
APPENDIX	A. WIRE RUN LIST.....		A-1
APPENDIX	B. REFERENCES.....		B-1
APPENDIX	C. MAINTENANCE ALLOCATION		
Section	I. Introduction.....		C-1
	II. Maintenance Allocation Chart for Test Facilities Set AN/TPX-24(V)2.....		C-3
	III. Tool and test equipment requirements for Test Facilities Set AN/TPM-24(V) 2.....		C-6
	IV. Remarks.....		C-7
INDEX.....			Index 1

LIST OF ILLUSTRATIONS

Figure No.	Title	Page
1-1	Test facilities set AN / TPM-24 (V) 2	1-1
1-2	Transit case 1A1	1-7
1-3	Transit case 2MP1	1-8
1-4	Accessory case 2A2	1-9
1-5	Canvas bags 1A2 through 1A5	1-10
1-6	Interface adapter unit A1A1A1	1-11
1-7	Hybrid attenuator 2A1	1-12
1-8	Antenna pedestal mount 1A7	1-13
1-9	Inertial antenna load 1A6	1-14
1-10	Cable assemblies	1-15
1-11	Minor components	1-20
1-11	Minor components	1-21
2-1	Packaging of test facilities set AN / TPM-24 (V) 2	2-2
2-2	Typical test connections for test bed configuration	2-5
3-1	Interface adapter unit 1A1A1, operating controls, indicators, and connectors	3-1
3-2	Hybrid attenuator 2A1, operating controls and indicators	3-3
6-1	Interface adapter unit 1A1A1, schematic diagram	6-3
6-2	Hybrid attenuator 2A1, schematic diagram	6-5
6-3	Cable 1A2W1, schematic diagram	6-14
6-4	Cable, 1A2W2, schematic diagram	6-14
6-5	Cable 1A2W3, schematic diagram	6-14
6-6	Cable 1A2W4 through 1A2W7, and 2W7/ 2W8, schematic diagram	6-15
6-7	Cable 1A2W8, schematic diagram	6-15
6-8	Cables 1A2W9 and 1A2W10, schematic diagram	6-16
6-9	Cable 1A2W11, schematic diagram	6-17
6-10	Cable 1A2W12, schematic diagram	6-17
6-11	Cable 1A3W1, schematic diagram	6-18
6-12	Cable 1A2W2, schematic diagram	6-18
6-13	Cable 1A2W3, schematic diagram	6-19
6-14	Cable 1A2W4, schematic diagram	6-21
6-15	Cable 1A3E5, schematic diagram	6-22
6-16	Cable 1A4W1, schematic diagram	6-23
6-17	Cable 1A4W2, schematic diagram	6-23
6-18	Cable 1A4W3, schematic diagram	6-24
6-19	Cable 1A4W4, schematic diagram	6-25
6-20	Cable 1A4W5, schematic diagram	6-26
6-21	Cable 1A4W6, through 1A4W13 and 1A4W16 schematic diagram	6-27
6-22	Cable 1A4W14, schematic diagram	6-27
6-23	Cable 1A5W15, schematic diagram	6-28
6-24	Cable 1A5W1, schematic diagram	6-29
6-25	Cable 1A5W2, schematic diagram	6-30
6-26	Cable 2W1, schematic diagram	6-30
6-27	Cable 2W2 through 2W6 schematic diagram	6-30
6-28	Cable 2A2W1, 2A2W2, and 2A2W3, schematic diagram	6-31
6-29	Cable 2A2W4, schematic diagram	6-32
6-30	Extender card 1A1A3, 1A1A4, schematic diagram	6-33
6-31	Extender card 2A4, schematic diagram	6-34
7-1	Hybrid attenuator assembly 2A1, internal view	7-1
7-2	Interface adapter unit 1A1A1, internal view	7-2
7-3	Stripping detail, cable 1A2W1/W2	7-21
7-4	Typical cable, connector arrangement	7-21
7-5	Plug arrangement for 1A2P2	7-22
7-6	Typical cable stripping detail	7-22
7-7	Typical connector / backshell assembly	7-22
7-8	Typical cable, stripping detail	7-23
7-9	Typical connector assembly for 1A2W4 through 1A2W7, 2W7 and 2W8	7-23
7-10	Typical cable stripping detail	7-23
7-11	Typical ferrule and ground wire configuration	7-24
7-12	Cable stripping detail for 1A2W12-P2	7-24
7-13	Connector exploded view for cable 1A2W12	7-24
7-14	Connector assembly for cable 1A2W12	7-24
7-15	Stripping detail cable 1A3W1	7-24

LIST OF ILLUSTRATIONS

Figure No.	Title	Page
7-16	Typical connector assembly, exploded view	7-25
7-17	Typical connector exploded view.....	7-26
7-18	Solder sleeve connection for cable 1A3W3	7-26
7-19	Stripping detail for cable 1A3W5	7-27
7-20	Typical solder sleeve connections for cable 1A3W5	7-27
7-21	Stripping detail for cable 1A4W2	7-27
7-22	Typical connector assembly sleeving	7-27
7-23	Alternate length conductor stripping detail	7-28
7-24	Connector assembly for cable 1A5W1	7-28
7-25	Stripping detail for cable 2W1-P1	7-29
7-26	Component connection for cable 2W1	7-29
7-27	Crimp splice connections for cable 2W1	7-29
7-28	Stripping detail cable 2W1	7-30
7-29	Typical connector assembly, exploded view	7-30
7-30	Connector assembly for cable 2W1	7-31
7-31	Typical connector assembly	7-31
7-32	Backshell taping for cable 2A2W1/2A2W2/2A2W3	7-32
7-33	Connector assembly for cable 2A2W1/ 2A2W2/2A2W3	7-32
8-1	Interface adapter unit 1A1A1, test setup diagram	8-3
8-2	Interface adapter unit 1A1A1, test points and enables, test setup diagram	8-12

CHAPTER 1

INTRODUCTION

Section I. GENERAL

1-1. Scope

(fig. 1-1)

This manual describes Test Facilities Set AN/ T PM-24 (V) 2 and provides instructions for its installation, use, and maintenance. The manual includes instructions for cleaning, inspection, troubleshooting, testing, repair,

and removal and replacement of components within the set. It also lists tools, materials, and test equipment required for maintenance. A functional description of the equipment is also provided. Repair parts and special tools lists are contained in appendix C.

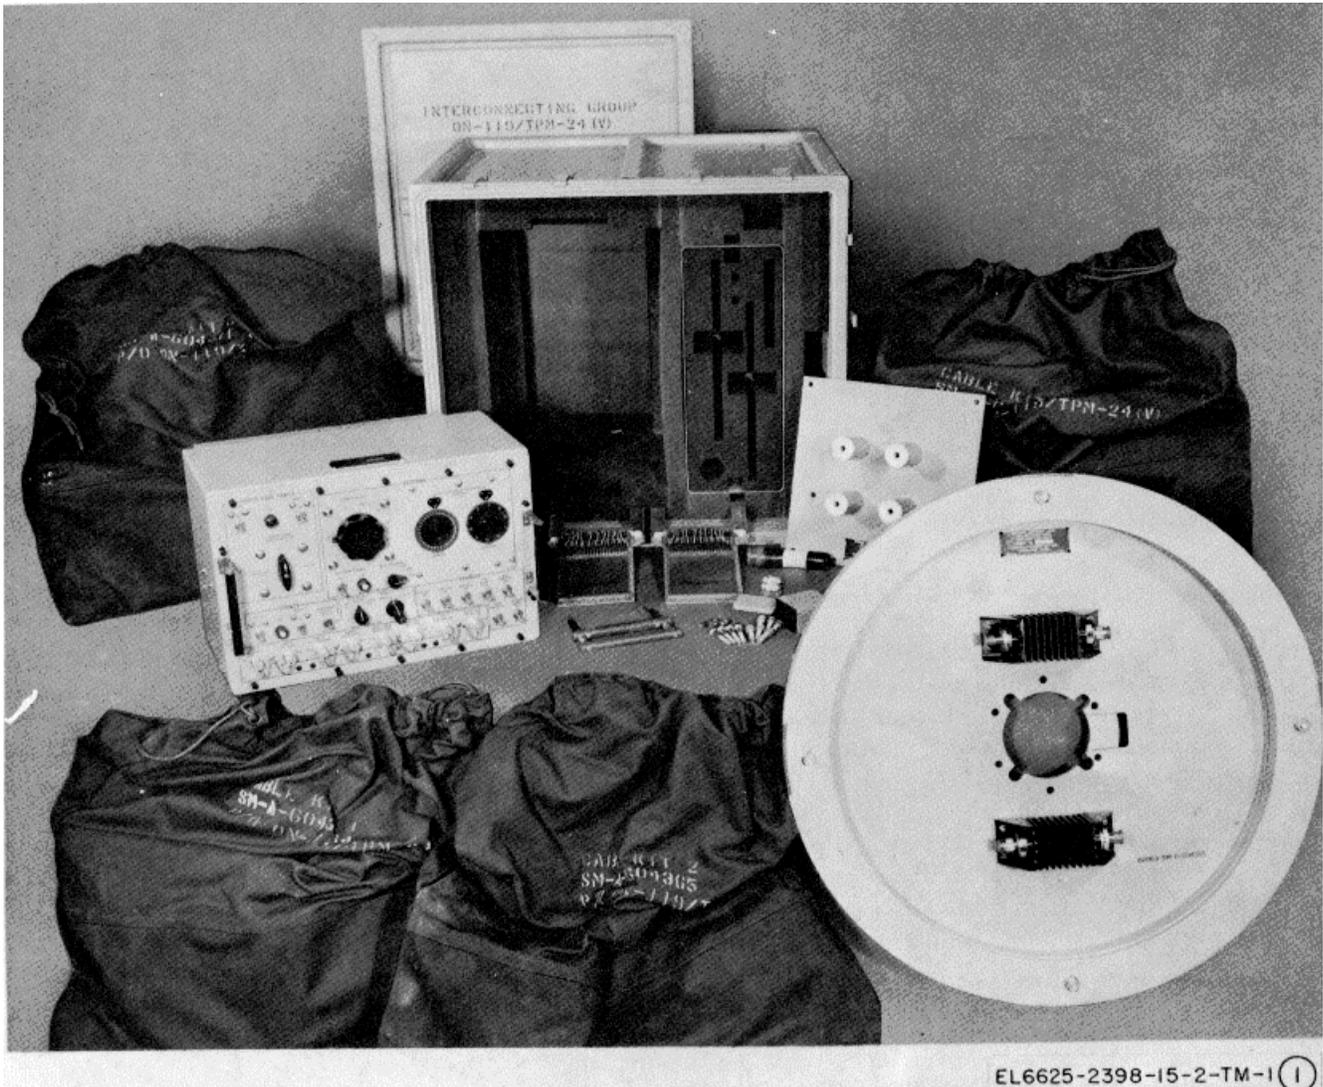


Figure 1-1 (1). Test facilities set AN/ TPM-24 (V) 2 (sheet 1 of 2).