

TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT,

AND GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND

SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS)

FOR

TEST FACILITIES SET

AN/TMP-24(V)2

(NSN 6625-00-423-2133)

HEADQUARTERS, DEPARTMENT OF THE ARMY

JULY 1978

**ORGANIZATIONAL, DIRECT SUPPORT,
AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND
SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)
FOR
TEST FACILITIES- SET AN/TPM-24(V)2
(NSN 6625-00-423-2133)**

Current as of 18 January 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 20282 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 20282 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

			Page	Illus Figure
SECTION	I.	Introduction	1	
	II.	Repair parts list.....	5	
GROUP	00	Test Facilities Set AN/TPM-24(V)2.....	5	1
	01	Interconnection Group ON-119/TPM-24(V)(1)	7	2
		0101 Cable kit No. 1 IIA2)	9	3
		010101 Cable Assembly. Power, ElectricalCX-12897/TPM-241V)(1A2W1)	11	4

*This manual supersedes so much of TM 11-6625-239 15-2, 16 November 1972, as pertains to repair parts and special tools list.

Table of Contents-Continued

		Page	Illus Figure
GROUP	010102	Cable Assembly, Power, Electrical CX-12898/TPM-24(V) (1A2W2).....	11 4
	010103	Cable Assembly, Power, Electrical CX-12899/TPM-24(V) (1A2W3).....	11 4
	010104	Cable Assembly, Special Purpose, Electrical CX-12905/TPM-24(V) (1A 2W8)	13 5
	010105	Cable Assemblies, Special Purpose, Electrical CX-12906/TPM-24(V) (1A2W9, IA2W10)	13 5
	010106	Cable Assembly, Special Purpose, Electrical CX-12907/TPM-24(V) (1A2W11)	15 6
	010107	Cable Assemblies, Radio Frequency CG-3750/TPM-24(V) 2 FT (1A2W4, 1A2W5)	15 6
	010108	Cable Assemblies Radio Frequency CG-3750/TPM-24(V) 15 FT (1A2W6, 1A2W7)	17 7
	010109	Cable Assembly, Radio Frequency, Branched CG-3751/TPM-24(V) IIA2W12).....	19 8
	0102	Cable kit No 2 (1A3)	21 9
	010201	Cable Assembly, Special Purpose, Electrical CX-12901/TPM-24(V) (1A3W1)	23 10
	010202	Cable Assembly, Special Purpose, Electrical CX- 12908/TPM-24(V) (1A3W2)	25 11
	010203	Cable Assembly, Special Purpose, Electrical CX-12909/TPM-24(V) IA3W3)	25 11
	010204	Cable Assembly, Special Purpose, Electrical CX-12910/TPM-24(V)(1A3W4)	27 12
	010205	Cable Assembly, Special Purpose, Electrical CX-12911/TPM-24(V) (IA3W5).....	27 12
	0103	Cable kit No 3(1A4)	31 13
	010301	Cable Assembly, Special Purpose, Electrical CX-12902/TPM-24(V)(1A4W1)	33 14
	010302	Cable Assembly, Special Purpose, Electrical CX-12903/TPM-24(V) (1A4W3)	33 14
	010303	Cable Assembly, Special Purpose, Electrical CX-12912/TPM-24(V) (1A4W4)	35 15
	010304	Cable Assembly, Special Purpose, Electrical CX-12913/TPM-24(V) (1A4W5)	35 15
	010305	Cable Assembly, Special Purpose, Electrical CX-12914/TPM-24(V) (IA4W14).....	39 16
	010306	Cable Assembly, Special Purpose, Electrical CX- 10773/U (1A4W15).....	39 16
	010307	Cable Assembly, Radio Frequency CG-3749/TPM-24(V) (1A4W2).....	39 16
	010308	Cable Assemblies, Radio Frequency CG-3752/TPM-24(V) (IA4W6, 1A4W7, 1A4W8, IA4W9, 1A4W10, 1A4W11, 1A4W12, 1A4W13)	41 17
	010309	Cable Assembly, Radio Frequency CG-3753/TPM-24(V) (IA4W16).....	41 17
	0104	Cable kit No 4 (1A5)	43 18
	010401	Cable Assembly, Special Purpose, Electrical CX-12900/TPM-24(V) (1A5W1).....	45 19
	010402	Cable Assembly, Special Purpose, Electrical CX-12904/TPM-24(V) (IA5W2).....	45 19
	0105	Case, Accessories CY-7308/TPM-24(V) (IAI).....	47 20
	010501	Box, Interconnecting J-3113/TPM-24(V)(1A1A1).....	49 21-25
	01050101	Gear train assembly (1A1A1A13).....	61 26
	010502	Extender Cards, Electrical Test MX-9356/TPM-24(V) (1AIA3, 1A1A4).....	63 27
	0106	Inertial Antenna Load MX-9357/TPM-24(V)IIA6)	65 28
02		Interconnecting Group ON-120/TPM-24(V) (2)	67 29
	0201	Cable Assembly, Special Purpose, Electrical Branched CX-12915/TPM-24(V) (2W1)	69 30
	020101	Switch box assembly (2W1A1).....	71 31
	0202	Cable Assemblies, Radio Frequency CG-3754/TPM-24(V) (2W2, 2W3, 2W4, 2W5, 2W6)	73 32
	0203	Cable Assemblies, Radio Frequency CG-3750/TPM-24(V) (2W7, 2W8)	73 32
	0204	Case, Accessories CY-7307/TPM-24(V) (2A2)	75 33
	029401	Cable Assemblies, Special Purpose, Electrical CX-12916/TPM-24(V) (2A2W1, 2A2W2, 2A2W3)	77 34
	020402	Cable Assembly, Special Purpose, Electrical CX- 12917/TPM-24(V) (2A2W4)	77 34
	0205	Extender Card, Electronic Test MX-9354/TPM-24(V) (2A4).....	81 35
	0206	Hybrid Attenuator Assembly CN-1322A/TPM-24(V) (2A1).....	83 36
	020601	Cable assemblies, radio frequency(2A1W5, 2A1W6)	87 37
	020602	Cable assembly, radio frequency (2A1W1)	89 38
	020603	Cable assembly, radio frequency (2A1W2)	91 39
	020604	Cable assembly, radio frequency (2A1W4).....	93 40
	020605	Cable assembly, radio frequency (2A1W3)	95 41
SECTION	III.	Special tools list (Not applicable)	
	IV.	National stock number and part number index.....	96

SECTION I.

INTRODUCTION

1. Scope

This manual lists spares and repair parts, special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/TPM-24(V)2. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III Special Tools List Not applicable

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration on which the item is shown.

(2) Item number. The number used to identify item called out in the illustration

b Source, Maintenance, and Recoverability (SMR) Codes.

(1) Source code Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) Maintenance code Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	Support item is removed, replaced, used at the organizational level.
H	Support item is removed, replaced, used at the general support level.
D	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
H	The lowest maintenance level capable of complete repair of the support item is the general support level.