

**TECHNICAL MANUAL**

**ORGANIZATIONAL, DIRECT SUPPORT, AND  
GENERAL SUPPORT MAINTENANCE REPAIR  
PARTS AND SPECIAL TOOLS LIST**

**FOR**

**TEST FACILITIES KIT**

**MK-1191/AR**

**(NSN 6625-00-179-2528)**

This copy is a reprint which includes current  
pages from Change 1.

TECHNICAL MANUAL }  
 NO.11-6625-2414-24P }

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, DC, 23 November 1981

**ORGANIZATIONAL, DIRECT SUPPORT, AND  
 GENERAL SUPPORT MAINTENANCE REPAIR PARTS  
 AND SPECIAL TOOLS LIST  
 FOR  
 TEST FACILITIES KIT MK-1191/AR  
 (NSN 6625-00-179-2528)**

*Current as of 15 May 1981*

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

**You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to Commander, US Army Communications-Electronics Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, New Jersey 07703.**

**In either case, a reply will be furnished direct to you.**

**Table of Contents**

		Page	Illus Figure
S ECTION	I. Introduction . . . . .	1	
	II. Repair Parts List . . . . .	5	
GROUP	00 Test Facilities Kit MK-1191/AR		
	Case Top with Tools . . . . .	5	1
	Case Bottom with Tools . . . . .	7	2
	Cable Assemblies . . . . .	9	3
	01 Adapter Breakout Box for AN/ARC-114 . . . . .	13	4
	02 Adapter Breakout Box for AN/ARC-115 . . . . .	17	5
	03 Adapter Breakout Box for AN/ARC-116 . . . . .	21	6
	04 Adapter Breakout Box for AN/ARN-89 . . . . .	25	7
	Miscellaneous Module Extenders		
	Adapter, Test MX-8503/AR . . . . .	27	8
	Adapter, Test MX-8527/AR . . . . .	29	9
	Adapter, Test MX-8504/AR, MX-8505/AR, MX-8507/AR, MX-8508/AR and MX-8511/AR . . . . .	31	10
	Adapter, Test MX-8510/AR . . . . .	33	11
	Adapter, Test MX-8509/AR . . . . .	35	12
	Cable Assemblies and Connectors		
	05 Cable Assembly, Radio Frequency CG-3475/U (6 Ft) . . . . .	37	13
	06 Cable Assembly, Special Purpose CX-10894/AR . . . . .	39	14
GROUP	07 Cable Assembly, Special Purpose CX-12182/U, CX-12183/U, CX-12183/U, CX-12185/U and		
	thru 10 CX-12187KJ . . . . .	41	15
	11 Cable Assembly, Special Purpose CX-12184/U (1 Ft) . . . . .	43	16
	12 Cable Assembly, Special Purpose CX-12191/U . . . . .	45	17

\* This manual supersedes TM 11-6625-2414-24P, 18 April 1974.

		Page	Illus Figure	
GROUP	13	Cable Assembly, Special Purpose CX-12188/U, CX-12189/U, CX-12190/U and CX-12192/U . . .	47	18
	thru 16			
	17	Cable Assembly, Special Purpose CX-12186/U (1 Ft) . . . . .	49	19
	18	RFI Connector Assembly . . . . .	51	20
	19	Miscellaneous Special Hand Tools . . . . .	53	21
		Service Aids . . . . .	55	22
		Puller Assembly, Mechanical Gear. . . . .	57	23
		Tool Assembly, Contact, Extraction/Insertion . . . . .	59	24
		Wrench Assembly, Torque. . . . .	61	25
		20	Fixture Assemblies	
		Fixture Assembly, Holding, Alignment for AN/ARC-114, AN-ARC-115, and AN/ARC-116 . . .	63	26
		Fixture Assembly, Holding, Function Switch and Sprocket . . . . .	65	27
		Fixture Assembly, Number Alignment for AN/ARC-114 . . . . .	67	28
		Fixture Assembly, Number Alignment for AN/ARC-115 . . . . .	69	29
		Fixture Assembly, Number Alignment for AN/ARC-116 . . . . .	71	30
		Fixture Assembly, Holding, Actuator Positioning . . . . .	73	31
		Fixture Assembly, Backlash Divider . . . . .	75	32
		Fixture Assembly, Holding, Support and Drill for AN/ARC-114 . . . . .	77	33
		Fixture Assembly, Holding, Support and Drill for AN/ARC-115 . . . . .	79	34
		Fixture Assembly, Holding, Support and Drill for AN/ARC-116 . . . . .	81	35
	21	Termination Assemblies		
			Headset and Microphone Termination Assembly . . . . .	83
		Power Supply Termination Assembly for AN/ARC-114 . . . . .	85	37
		Power Supply Termination Assembly for AN/ARC-115 . . . . .	87	38
22		Power Supply Termination Assembly for AN/ARC-116 . . . . .	89	39
		Case, Electrical Maintenance Kit Case, Electrical Equipment Maintenance Kit . . . . .	91	40
		Plate Assembly, Upper, P/O Case Top View . . . . .	95	41
		Plate Assembly, Lower, P/O Case Top View . . . . .	99	42
SECTION	III.	Special Tools List (Not applicable)		
	IV.	National Stock Number and Part Number Index . . . . .	100	

# SECTION 1

## INTRODUCTION

---

### 1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the MK-1191/AR. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III. Special Tool List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

### 3. Explanation of Columns

*a. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

*b. Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

*Code*

*Definition*

PA-Item procured and stocked for anticipated or known usage.

XA-Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.

XD-A support item that is not stocked. When required, item will be procured through normal supply channels.

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

*Code*

*Applicator/Explanation*

O-Support item is removed, replaced, used at the organizational level.

H-Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

*Code*

*Application/Explanation*

H-The lowest maintenance level capable of complete repair of the support item is the general support level.