

**TECHNICAL MANUAL**

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT, GENERAL SUPPORT,**

**AND DEPOT MAINTENANCE MANUAL**

**NORTHEAST ELECTRONICS CORPORATION NOISE-LEVEL-VU**

**MEASURING SET MODEL TTS-37B**

**THIS PUBLICATION IS A COURTESY QUICK COPY  
FROM THE UNITED STATES ARMY PUBLICATIONS  
DISTRIBUTION CENTER, ST. LOUIS, MISSOURI, TO  
MEET YOUR NEEDS WHILE WE REPLENISH OUR  
REGULAR STOCK.**

Information in this publication has been furnished under United States Government Contract No. DA-28-043-AMC-01693(E) and shall not be either released outside the government, or used, duplicated, or disclosed in whole or in part for manufacture or procurement without the written permission of the Northeast Electronics corporation.

TECHNICAL MANUAL ) HEADQUARTERS  
 ) DEPARTMENT OF THE ARMY  
 NO. 11-6625-2426-15 ) WASHINGTON, D. C., 1 March 1972

SECTION	Paragraph	Page
1. INTRODUCTION		
SCOPE.....	1.A1	1-1, 1-2
Indexes of publications.....	1.A2	1-1
Forms and records.....	1.A3	1-1
Items comprising an operable equipment.....	1.A4	1-1
General.....	1.0	1-1
2. PERFORMANCE AND SPECIFICATIONS	2.0	2-1
3. CONTROLS AND TERMINALS		
Controls.....	3.01	3-0
Terminals.....	3.02	3-0
4. CIRCUIT DESCRIPTION		3-0
Input circuit.....	4.03	4-1
10 db step attenuator.....	4.06	4-1
Amplifier 1.....	4.07	4-2
Filter switching network.....	4.09	4-2
1 db step attenuator.....	4.10	4-2

This technical manual is an authentication of the manufacturer's commercial literature and does not conform with the format and content specified in AR 310-3, Military Publications. This technical manual does, however contain available information that is essential to the operation and maintenance of the equipment.

SECTION	Paragraph	Page
4. (Cont.)		
Amplifier 2 .....	4.11	4-2
Amplifier3 .....	4.12	4-3
Metering circuit .....	4.15	4-4
Monitoring circuits .....	4.17	4-4
Power section.....	4.20	4-5
5. TROUBLESHOOTING		4-5
Batteries .....	5.02	5-0
Input circuit.....	5.09	5-0
Amplifier 1 .....	5.10	5-0
Amplifier 1 dc.....	5.11	5-0
Filter .....	5.12	5-1
Amplifier 2 .....	5.13	5-1
Amplifier 3 .....	5.14	5-1
Calibration .....	5.15	5-1
6. OPERATION		5-1
Level measurements .....	6.01	5-1
Noise measurements .....	6.02	6-0
Vu measurements .....	6.04	6-1
To talk.....	6.04	6-1
To dial.....	6.05	6-1
To hold and release.....	6.06	6-1
To operate on 48 volts.....	6.07	6-2
To dc monitor or record .....	6.08	6-2
Storage.....	6.09	6-2

SECTION	Paragraph	Page
7. OPERATOR'S MAINTENANCE INSTRUCTIONS		
Scope of operator's maintenance.....	7.01	7-1
Items required for maintenance .....	7.02	7-1
Preventive maintenance.....	7.03	7-1
Preventive maintenance checks and services periods .....	7.04	7-2
Operator's daily preventive maintenance checks and services chart.....	7.05	7-3
Cleaning .....	7.06	7-4
8. ORGANIZATIONAL DS, AND GS MAINTENANCE INSTRUCTIONS		
Scope of organizational, DS, and GS maintenance .....	8.01	8-1
Tools, materials, and test .....		
equipment required .....	8.02	8-1
Quarterly preventive maintenance .....	8.03	8-2
Organizational quarterly preventive maintenance checks and services chart .....	8.04	8-3
Touchup painting.....	8.05	8-4
General parts replacement techniques .....	8.06	8-5
APPENDIX A. REFERENCES.		
B. MAINTENANCE ALLOCATION.		

## SECTION 1

### INTRODUCTION

---

#### 1.A1. Scope

This manual describes the Northeast Electronics Corporation Noise-Level-Vu Measuring Set Model TTS-37B and covers its operation, and organizational, direct and general support, and depot maintenance. It includes inspection, testing, and calibration procedures, and replacement of parts available to organizational, DS, GS, and depot maintenance personnel.

#### 1.A2. Indexes of Publications

a. Refer to the latest issue of DC Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to this equipment.

b. Refer to the latest issue of -A Pam 310-7 to determine if there are current, applicable modification work orders (1m,O's) pertaining to this equipment.

#### 1.A3. Forms and Records

a. Report of Maintenance and Unsatisfactory Equipment. Use equipment forms and records in accordance with instructions in TM 38-750.

b. Report of Packaging and Handling Deficiencies. Fill out and forward DD Form 6 (Report of Packaging and Handling Deficiencies) as prescribed in AR 700-58 (Army), NAVSUP Publication 378 (Navy), AFR 71-4 (Air Force) and MCO P4610-5 (Marine Corps).