

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND  
SPECIAL TOOLS LIST FOR  
TEST SET NAVIGATIONAL COMPUTER-CONTROL INDICATOR AN/ASM-386

Headquarters, Department of the Army, Washington, D.C.

**24 September 1971**

TABLE OF CONTENTS

	Paragraph	Page
SECTION I. INTRODUCTION		
Scope . . . . .	1-1	1-1
General . . . . .	1-2	1-1
Explanation of Columns. . . . .	1-3	1-1
Special Information . . . . .	1-4	1-3
How to Locate Repair Parts . . . . .	1-5	1-3
Abbreviations (Not Applicable) : . . * ' ' . . . . . <sup>e</sup> ' . . . . .	<b>1-6</b>	1-4
Federal Supply Codes for Manufacturers . . . . .	<b>1-7</b>	1-4
Recommendations for Maintenance Publication Improvements . . . . .	<b>1-8</b>	1-4
SECTION II. PRESCRIBED LOAD ALLOWANCE . . . . .		2-1
SECTION III. REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE. . . . .		3-1
SECTION IV. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR ORGANIZATIONAL MAINTENANCE (Not Applicable) . . . . .		4-1
SECTION V. INDICES		
Federal Stock Number Cross Reference to Index Number . . . . .		5-1
Reference Number Cross-Reference to Figure and Item Number . . . . .		5-3
Reference Designation Cross Reference to Index Number . . . . .		5-5
Federal Stock Number Cross-Reference to Figure and Item Number. . . . .		5-7
Figure and Item Number Cross Reference to Index Number . . . . .		5-9

LIST OF ILLUSTRATIONS

Number	Title	Page
1.	Test Set, Navigational Computer-Control Indicator AN/ASM-386 . . . . .	<b>3-12</b>
2.	<b>Accessory</b> Case CY-6757/ASM-386. . . . .	3-13
3.	Logic Control Unit TS-2912/ASM-386 . . . ' ~ : . . . : - : * : * : . . . * * ' . * . a . . s * : . . . . .	3-14
4.	Signal Conditioning Unit TS-2913/ASM-386. . * . . . . .	3-15

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1-1. Scope.

This manual lists repair parts and special tools required for the performance of organizational maintenance of the Test Set, Navigational Computer-Control Indicator AN/ASM-386.

1-2. General.

This Repair Parts and Special Tools List is divided into the following sections:

a. Prescribed Load Allowance (PLA) - Section II. A composite listing of the repair parts, special tools, test and support equipment having quantitative allowances for initial stockage at the organizational level.

b. Repair Parts - Section III. A list of repair parts authorized *for* the performance of maintenance at the organizational level in index number sequence.

c. Special Tools, Test and Support Equipment - Section IV. Not applicable.

d. Indices -Section V. Conversion of numbers and indices is explained as follows:

(1) Index - Federal Stock Number Cross Reference to Index Number. A list of Federal stock numbers, in ascending numerical sequence, cross-referenced to the Repair Parts list index number.

(2) **Index** - Reference Number Cross-Reference to Figure and Item Number. A list of reference numbers (part numbers and manufacturers codes). in ascending alphanumeric sequence, cross-referenced to figure and item number.

(3) Index - Reference Designation Cross Reference to Index Number. A list of Reference Designations (RD), in ascending alphanumeric sequence, cross-referenced to the Repair Parts list index number.

(4) Index - Federal Stock Number Cross-Reference to Figure and Item Number. A list of Federal stock numbers, in ascending numerical sequence. cross-referenced to the illustration figure number and item number.

(5) Index - Figure and Item Number Cross Reference to Index Number. A list of figure and item numbers, each in ascending numerical sequence, cross-referenced to the Repair Parts list index numbers.

1-3. Explanation of Columns.

The following provides an explanation of columns in the tabular lists in Sections III and IV.

a. Source Code, Maintenance, and Recoverability (SMR) Codes, Column 1.

(1) Source code, indicates the selection status and source for the listed item Source codes are:

Code	Explanation
A	Applies to assemblies which are not procured or stocked as such but are made up of two or more units, each of which carry individual stock numbers and descriptions and are procured and stocked and can be assembled by units at indicated maintenance categories
AH	Applies to repair parts requiring assembly at a category higher than that authorized to replace the part
G	Applies to major assemblies that are procured with Procurement of Electronic and Missile, Army (PEMA) funds for initial issue only to be used as exchange assemblies at Direct Support Unit (DSU) and General Support Unit (GSU) level. These assemblies will not be stocked above DSU and GSU level of returned to depot level