TECHNICAL MANUAL

GENERAL SUPPORT MAINTENANI E REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

FOR

TEST SET, SIGNAL DATA CONVERTER

AN/AYM-8

(NSN 6625-00-137-2289)

HEADQUARTERS DEPARTMENT OF THE ARMY WASHINGTON, DC, 29 August 1978

No. 11-6625-2479-40P

GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

FOR

TEST SET, SIGNAL DATA CONVERTER AN/AYM-8 (NSN 6625-00-137-2239)

Current as of 10 March 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown and drop it in the mail.

If there are no blank DA Forms #2028-2 in the back of your manual, use standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-M-Q, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

^{*}This manual supersedes TM 11-6625-2479-40P, 19 February 1976.

| | | | Page | Illus. Figure |
|---------|-----------|--|------------|------------------|
| SECTION | I. | Introduction | 1 | |
| GROUP | II. 00 | Repair parts list Test Set, Signal Data Converter | 5 | |
| | 01 | AN/AYM-8 Test Set, Signal Data Converter | 5 | 1 |
| | | TS-3089/AYM-8 | 7 | 2 |
| | | 0101 Case assembly | 9 | 3 |
| | | 0102 Cover Test Set CW-1148/AYM-8 | 11 | 4 |
| | | 0103 Panel assembly (1A3) | 17 | 5 |
| | | 010301 Basket assembly (1A3A6) | 23 | 6 |
| | | 010302 Monitor assembly (1A3A5) | 25 | 7 |
| | | 01030201 Monitor box assembly | | |
| | | (1A3A5A3)(1A3A6AA) | 27 | 8 |
| | | 01030202 Tube housing assembly (1A3ASA4)01030203 Component board assembly | 29 | 9 |
| | | (1A3A5AI) 01030204 Component board assembly | 31 | 10 |
| | | (1A3A5A2) | 33 | 11 |
| | | 010304 Power supply (IA3AI) | 35 | 12 |
| | | 010304 Bezel assembly (1A3A7) | 39 | 13 |
| | | 010305 Component board (1A3A4)010306 Board assembly, simulator | 41 | 14 |
| | | (1A3A3) 010307 Display and data demand board | 43 | 15 |
| | | assembly (1A3A2) | 45 | 16 |
| | 02 | Case Test Set CY-7114/AYM-8 | 47 | 17 |
| GROUP | | 0201 Extender Circuit Card MX-8966/AYM0202 Cable Assembly, Power Electrical | 49 | 18 |
| | | CX-12714/AYM-8 (2W1) | 51 | 19 |
| | | Electrical CX-12715/AYM-8 (2W2) | 51 | 19 |
| | | Electrical, Branched CX-12716/AYM-8 | F.4 | 40 |
| | | (2W3) | 51 | 19 |
| | | Electrical, Branched CX-12717/AYM-8 (2W4) | 51 | 19 |
| | | 0206 Cable Assembly, Special Purpose, | | |
| | | Electrical CX-12718/AYM-8 (2W5) | 51 | 19 |
| | | 0207 Cable Assembly, Special Purpose, Electrical, Branched CX-12719/AYM-8 | | |
| | | (2W6) | 51 | 19 |
| | | 3679/AYM-8 (2W7, 2WII, 2W12) | 51 | 19 |
| | | Branched CX-12724/AYM-8 (2W8) | 52 | 19 |
| | | Electrical CX-12721/AYM-8 (2W9) | 52 | 19 |
| | | Electrical CX-12722/AYM-8 (2W10) | 52 | 19 |
| | | 0212 Case base assembly | 52 55 | 20 |
| | | 0213 Case cover assembly | | 20 21 |
| SECTION | III. | | 57 | ۷۱ |
| SECTION | | Special tools list (Not applicable | E 0 | |
| | IV. | National stock number and part number list | 58 | |

SECTION I

1. Scope

This manual lists spares and repair parts; special tools; special test, equipment, and diagnostic equipment (TMDE), and other special support equipment required for performance of general support maintenance of the AN/AYM-8. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

- a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.
 - b. Section III. Special Tools List. Not applicable.
- c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

- a. Illustration. This column is divided as follows:
- (1) Figure number. Indicates the figure number of the illustration on which the item is shown.
- (2) Item number. The number used to identify item called out in the illustration.
- b. Source, Maintenance, and Recoverability (SMR) Codes.
- (1) Source code. .Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are

entered in the first and second positions of the Uniform SMR Code format as follows:

Code Definition

PA- - Item procured and stocked for anticipated or known usage.

XD - A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft coded above except those coded XA and aircraft support items as restricted by AR 70042.

- (2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items.. The maintenance codes are entered in the third and four positions of the Uniform SMR Code format as follows:
- (a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code Application/Explanation

- O Support item is removed, replaced, used at the organization level.
- H Support item is removed, replaced, used at the general support level.
- D Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.