

TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE MANUAL

MAINTENANCE KIT,
ELECTRONIC EQUIPMENT
MK-1004A/ARC

This copy is a reprint which includes current
pages from Change 1.

HEADQUARTERS, DEPARTMENT OF THE ARMY

MAY 1973

TECHNICAL MANUAL }
 No. 11-6625-2609-34)

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, D. C., 11 May 1973

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE MANUAL
 MAINTENANCE KIT, ELECTRONIC EQUIPMENT MK-1004A/ARC**

	Paragraph	Page
CHAPTER 1. INTRODUCTION		
Section I. General		
Scope	1-1	1-1
Indexes of Publications	1-2	1-1
Destruction of army materiel to prevent enemy use	1-3	1-1
Administrative storage	1-4	1-1
Reporting of errors	1-5	1-1
II. Description and data		
Description	1-6	1-1
Tabulated data	1-7	1-1
CHAPTER 2. FUNCTIONING OF EQUIPMENT		
Use of equipment	2-1	2-1
Basic two-out-of-five frequency-selection system	2-2	2-1
3. DIRECT SUPPORT MAINTENANCE INSTRUCTIONS		
Section I. General	---	3-1
Scope of direct support maintenance	3-1	3-1
II. Tools and equipment	---	3-1
Test equipment required	3-2	3-1
III. Troubleshooting	---	3-2
General instructions	3-3	3-2
Organization of troubleshooting procedure	3-4	3-2
IV. Maintenance of MK-1004A/ARC	---	3-8
General parts replacement techniques	3-5	3-8
V. Direct support testing procedures	---	3-8
General	3-6	3-8
Modification work orders	3-7	3-9
Physical tests and inspections	3-8	3-9
Receiver circuit test No. 1	3-9	3-10
Receiver circuit test No. 2	3-10	3-11
Transmitter output and control circuit test	3-11	3-13
Sidetone circuit check	3-12	3-15
Modulation check, MIKE INPUT circuit	3-13	3-16
Modulation check, Ø DBM INPUT circuit	3-14	3-16
Modulation check, DATA LINK INPUT circuit	3-15	3-17
Detector circuit check	3-16	3-18
CHAPTER 4. GENERAL SUPPORT MAINTENANCE INSTRUCTIONS		
Section I. General	---	4-1
Scope of maintenance	4-1	4-1
II. General support testing procedures	---	4-1
Testing procedures	4-2	4-1
CHAPTER 5. MATERIEL USED IN CONJUNCTION WITH MAJOR ITEM	---	5-1
APPENDIX A. REFERENCES	---	A-1

CHAPTER 1 INTRODUCTION

Section 1. GENERAL

1-1. Scope

This manual describes Maintenance Kit, Electronic Equipment MK-1004A/ARC and provides instructions for direct support (DS) and general support (GS) maintenance. It includes instructions appropriate to DS and GS for trouble shooting, replacement of parts, testing, aligning, and repairing the maintenance kit.

NOTE

For applicable forms and records, refer to TM 38-750.

1-2. Indexes of Publications

a. Refer to the latest issue of DA Pam 310-4 to determine whether there are new additions, changes, or additional publications pertaining to the equipment.

b. Refer to DA Pam 310-7 to determine whether there are modification work orders (MWO's) pertaining to the equipment.

1-3. Destruction of Army Materiel to Prevent Enemy Use

Refer to TM 750-2442.

1-4. Administrative Storage

Refer to TM 740-90-1.

CAUTION

If the maintenance kit is being prepared for storage, close the pressure equalizer valve on the side of the equipment case to prevent moisture and dust accumulation inside the equipment case. If the maintenance kit is being prepared for air shipment, open the pressure equalizer valve to prevent possible rupture of the equipment case at high altitudes.

1-5. Reporting of Errors

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028, Recommended Changes to Publications and Blank Forms, and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-Q Fort Monmouth, N.J. 07703

Section II. DESCRIPTION AND DATA

1-6. Description

Refer to TM 11-6625-2609-12.

1-7. Tabulated Data

Refer to TM 11-6625-2609-12.