

**TM 11-6625-2610-24P**

---

**TECHNICAL MANUAL**

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT  
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS  
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)  
FOR  
RADAR TEST SET AN/TPM-25A  
(NSN 6625-01-045-9988)**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**JUNE 1979**

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT  
 MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS  
 (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS  
 FOR  
 RADAR TEST SET AN/TPM-25A  
 (NSN 6625-01-045-9988)**

*Current as of 26 February 1979*

**REPORTING OF ERRORS**

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army, Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

**Table of Contents**

| SECTION |   | Page | Illus<br>Figure |
|---------|---|------|-----------------|
|         | I. Introduction . . . . .   | 1    |                 |
|         | II. Repair Parts List . . . . .   | 5    |                 |
| Group   | 00 Radar Test Set AN/TPM-25A . . . . .  | 5    | 1               |
|         | 01 Test Set, Radar TS-3394A/TPM-25 . . . . .                                      | 11   | 2               |
|         | 0101 Circuit Card Assembly, PRT and System Timing (A1) . . . . .                  | 17   | 3               |
|         | 0102 Circuit Card Assembly, System Clock and Trigger Generator (A2) . . . . .     | 21   | 4               |
|         | 0103 Circuit Card Assembly, Mode 4 Interface and Trigger Generator (A3) . . . . . | 25   | 5               |
|         | 0104 Circuit Card Assembly, Variable Gate and Range Delay (A4) . . . . .          | 29   | 6               |
|         | 0105 Circuit Card Assembly, interrogator Decoder (A) . . . . .                    | 31   | 7               |
|         | 0106 Circuit Card Assembly, Mode 4 Jamming (A6) . . . . .                         | 33   | 8               |
|         | 0107 Circuit Card Assembly, Reply Clock and Sub Pulse Generator (A7) . . . . .    | 35   | 9               |
|         | 0108 Circuit Card Assembly, SIF Coder (A8) . . . . .                              | 39   | 10              |
|         | 0109 Circuit Card Assembly, Modulator and PRF Meter Control (A9) . . . . .        | 41   | 11              |
|         | 0110 Circuit Card Assembly, Peak Power Video and PRF(A10) . . . . .               | 45   | 12              |
|         | 0111 Extender Board Assembly . . . . .  | 49   | 13              |
|         | 0112 RF Generator Assembly (All) . . . . .  | 51   | 14              |
|         | 011201 Marker/Ramp Generator Assembly(A11A1) . . . . .                            | 55   | 15              |
|         | 011202 RF Source Assembly (AllA2) . . . . .                                       | 59   | 16              |
|         | 01120201 Primary Frequency Loop Assembly (AllA2A1) . . . . .                      | 61   | 17              |
|         | 01120202 Power Oscillator Assembly (AllA2A2) . . . . .                            | 65   | 18              |
|         | 0113 RF Bit/Mixer Assembly (A15) . . . . .  | 69   | 19              |
|         | 0114 Modulator, Dual Signal Generator (A16) . . . . .                             | 73   | 20              |
|         | 011401 Printed Wiring Board, Dual Modulator (A16A1) . . . . .                     | 75   | 21              |
|         | 0115 Detector Amplifier Assembly (AR2) . . . . .                                  | 79   | 22              |
|         | 0116 Power Supply Assembly (Pal) . . . . .  | 83   | 23              |
|         | 011601 Circuit Card Assembly, Power Supply (PS1A1) . . . . .                      | 87   | 24              |
|         | 011602 Circuit Card Assembly, Power Supply (PS1A2) . . . . .                      | 91   | 25              |
|         | 0117 Control Panel and Chassis Assembly . . . . .                                 | 97   | 26              |
|         | 0118 Cable Assemblies, RF (152177—and 151178—) . . . . .                          | 105  | 27              |
|         | 0119 Instrument Case . . . . .  | 109  | 28              |
| Group   | 02 Cover, Test Set MX-9929/TPM-25A . . . . .                                      | 111  | 29              |

**TM 11-6625-2610-24P**

|                |             |   | Page | Illus<br>Figure |
|----------------|-------------|---|------|-----------------|
| Group          | 03          | RF Cable (2) . . . . .                                | 113  | 30              |
|                | 04          | Video Cable (4) . . . . .                             | 115  | 31              |
|                | 05          | Primary Power Cable . . . . .                         | 117  | 32              |
|                | 06          | RF Cable, 12 Inch . . . . .                           | 119  | 33              |
| <b>SECTION</b> | <b>III.</b> | Special Tools List (Not applicable)                   |      |                 |
|                | <b>IV.</b>  | National Stock Number and Part Number Index . . . . . | 120  |                 |

## SECTION I INTRODUCTION

---

### 1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/TPM-25A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III. Special Tools List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

### 3. Explanation of Columns

*a. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

*b. Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

| <i>Code</i> | <i>Definition</i>   |
|-------------|---|
| PA          | Item procured and stocked for anticipated or known usage.   |
| PB          | Item procured and stocked for insurance purpose because essentiality dictates that a minimum quantity be available in the supply system.  |
| PD          | Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment. |

| <i>Code</i> | <i>Definition</i>   |
|-------------|---|
| XA          | Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly. |
| XD          | A support item that is not stocked. When required, item will be procured through normal supply channels.                          |

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

| <i>Code</i> | <i>Application/Explanation</i>   |
|-------------|--|
| O           | Support item is removed, replaced, used at the organizational level.                                     |
| H           | Support item is removed, replaced, used at the general support level.                                    |
| D           | Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only. |

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

| <i>Code</i> | <i>Application/Explanation</i>  |
|-------------|---|
| O           | The lowest maintenance level capable of complete repair of the support item is the organizational level.  |
| H           | The lowest maintenance level capable of complete repair of the support item is the general support level. |
| D           | The lowest maintenance level capable of complete repair of the support item is the depot level.           |
| Z           | Nonreparable. No repair is authorized.  |

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows: