

TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL
SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE
REPAIR
PARTS AND SPECIAL TOOLS)
FOR

TEST HARNESS, RADIO SET
AN/URM-157

(NSN 6625-00-766-4685)

AND

AN/URM-157A (NSN 6625-00-236-
1557)

TECHNICAL MANUAL }
No. 11-6625-622-34P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 9 December 1976

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)
FOR

TEST HARNESS, RADIO SET AN/URM-157
(NSN 6625-00-766-4685)

AND

AN/URM-157A (NSN 6625-00-236-1557)

Current as of 7 September 1976

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATT: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction	1	
	II. Repair parts list	5	
Group	00 Test Harness, Radio Set AN/URM-157 and AN/URM-157A	5	1
	01 Cable Assembly, Power, Electrical CX-8998/URM-157	7	2
	02 Cable Assembly, Special Purpose, Electrical CX-9000/URM-157	9	3
	03 Cable Assembly, Special Purpose, Electrical CX-8997/URM-157	11	4
	04 Cable Assembly, Special Purpose, Electrical CX-8999/URM-157	13	5
	05 Cable Assembly, Special Purpose, Electrical CX-9001/URM-157	15	6
	06 Cable Assembly, Special Purpose, Electrical CX-9003/URM-157	17	7
	07 Cable Assembly, Special Purpose, Electrical CX-9004/URM-157	19	8
	08 Cable Assembly, Special Purpose, Electrical CX-9002/URM-157	21	9

*This manual supersedes TM 11-6625-622-34P, 31 August 1971.

Table of Contents-(Continued)

	Page	Illus Figure
09 Cable Assembly, Special Purpose, Electrical CX-9005/URM-157.	2 3	1 0
10 Cable Assembly, Special Purpose, Electrical CX-9006/URM-157.	2 5	1 1
11 Cable Assembly, Radio Frequency CG-2727/U.	2 7	1 2
12 Cable Assembly, Special Purpose, Electrical CX-11046/URM-157.	2 9	1 3
13 Cable Assembly, Special Purpose, Electrical CX-10594/URM-157.	3 1	1 4
14 Cable Assembly, Speical Purpose, Electrical CX-11045/URM-157.	3 3	1 5
15 Cable Assembly, Speical Purpose, Electrical CX-11044/URM-157.	3 5	1 6
16 Test Harness Subassembly TS-1949/URM-157 or TS-1949A/URM-157.	3 7	17-25
Control, Radio Set C-3940/ARC-94 (See TM11-5821-248-34P for parts).		
Cable Assembly, Special Purpose, Electrical CX-12612/URM-157A.	5 5	2 6

SECTION III. Special Tools List (Not Applicable)

IV. National stock number and part number index	56
---	----

**SECTION I
INTRODUCTION**

1. Scope

This manual lists repair parts and special tools required for performance of direct support and general maintenance of the AN/URM-157 and AN/URM-157A.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of repair parts authorized for use in the performance of maintenance. The list also included parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in ascending National item identification number (NIIN, last 9 digits) sequence, of all National stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock number and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item number.* The number used to identify each item called out in the illustration.

b. Source, Maintenance, and Recoverability Codes (SMR).

(1) *Source code.* Source code are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	Item procured and stocked for anticipated or known usage.

<i>Code</i>	<i>Definition</i>
-------------	-------------------

XD - A support item that is not stocked. When required, item will be procured through normal supply channels.

Note

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA, XD, and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

O - Support item is removed, replaced, used at the organizational level.

H - Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i. e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

H - The lowest maintenance level capable of complete repair of the support item is the general support level.

Z - Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability Codes</i>	<i>Definition</i>
-----------------------------	-------------------

Z - Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.