

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LISTS**

FOR

**DIGITAL READOUT ELECTRONIC
COUNTERS**

AN/USM-207

(NSN 6625-00-911-6368)

AN/USM-207A

(NSN 6625-00-044-3228)

TECHNICAL MANUAL

No. 11-6625-700-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 28 March 1979

**ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LISTS**

FOR

**DIGITAL READOUT ELECTRONIC COUNTERS
AN/USM-207 (NSN 6625-00-91 1-6368)
AN/USM-207A (NSN 6625-00-044-3228)**

Current as of 1 September 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Material Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction	1	
	II. Repair parts list	5	
Group	00 Electronic Counters AN/USM-207, AN/USM-207A.	5	1
	01 Digital Readouts CP-814/USM -207, CP-814A/USM-207.	9	2,3
	0101 Voltage regulator (A1A1)	21	4
	0102 Frequency dividers (A1A2 thru A1A4)	25	5
	0103 Frequency divider (A1A5)	29	6
	0104 Frequency multiplier (A1A6)	35	7
	0105 Display control (A1A7)	41	8
	0106 AF-RF amplifier (A1A8)	45	9
	0107 Frequency divider (A1A9)	53	10
	0108 Electronic gate(A1A10)	57	11
	0109 AF-RF amplifier (A1A11)	63	12
	0110 Frequency dividers (A1A12 thru A1A16)	67	13,14
	0111 Frequency dividers (A1A17, A1A18)	75	15
	0112 Frequency divider (A1A19)	79	16
	0113 AF-RF amplifier (A1A20)	83	17

*This manual supersedes TM 11-6625-700-25P, 12 November 1968 and so much of TM 11-6625-700-14-1, 31 December 1973, as pertains to repair parts and special tools list.

		Page	IIUS Figure
	0114 Channel "A" variable attenuator (A1A21)	87	18
	0115 Channel "B" variable attenuator (A1A22)	89	19
	0116 Channel "C" variable attenuator (A1A23)	93	20
Group	02 Frequency Converters CV-1921/USM-207, CV-1921A/USM-207	97	21,22
	0201 Frequency multiplier (Anal)...	105	23
	0202 Video amplifier (A2A2)	107	24
	0203 Harmonic generator (A2A3).	109	25
	03 Oscillators, Radio Frequency 0-1267/USM-207, 0-1267A/USM-207	111	26,27
	04 Cable assembly, electricalpower (W1)	115	28
	05 Cable assembly, radio frequency (W2)	117	29
	06 Cable assembly, radio frequency (W3)	119	30
	07 Cable assembly, radio frequency (W4, W5)	121	31
SECTION	IIIL Special tools list (Not applicable)		
	IV. National stock number and part number index	122	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/USM-207, AN/USM-207A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (N I I N) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	Item procured and stocked for anticipated or known usage.

<i>Code</i>	<i>Definition</i>
XD-A	support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O	Support item is removed, replaced, used at the organizational level.

H	Support item is removed, replaced, used at the general support level,
---	---

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
H	The lowest maintenance level capable of complete repair of the support item is the general support level.

Z	Nonreparable. No repair is authorized.
---	--

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.