

TM 11-6625-842-24P

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

FOR

**TEST SET, TRANSPONDER SET
AN/APM-239A
(NSN 6625-00-802-7425)**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
MAY 1977**

TECHNICAL MANUAL }
 NO. 11-6625-842-24P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
 WASHINGTON, DC, 5 May 1977

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
 REPAIR PARTS AND SPECIAL TOOLS LISTS
 (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
 FOR
 TEST SET, TRANSPONDER SET AN/APM-239A
 (NSN 6625-00-802-7425)

Current as of 15 December 1976

REPORTING OF ERRORS

You can improve" this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSELMA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

	<u>Page</u>	<u>Illus.</u> <u>Figure</u>
SECTION I Introduction	1	
H Repair parts list	5	
Group 00 Test Set, Transponder Set AN/APM-239A	9	1.2
01 Test Set, Transponder Set TS-2681/APM-239A 119066-1	13	3
0101 Panel assembly, test set 119067-1	17	4
010101 Circuit card assembly 119064-1	18	5
0102 Case, Test Set CY-6477/APM-239A	18	6
0103 Control, Transponder Set C-6280(P)/APX or C-6280A(P)/APX (See TM 11-5841-268-25P for parts)	19	
02 Cable Assembly, Special Purpose, Electrical CX -10905/APM-239A	20	6
03 Cable Assembly, Power, Electrical CX - 10926/APM-239A	21	9
04 Cable Assembly, Special Purpose, Electrical CX -10908/APM-239A	22	10
05 Cable Assembly, Special Purpose, Electrical CX -10909/APM-239A.	23	11
06 Cable Assembly, Special Purpose, Electrical CX- 10907/APM-239A	24	12
07 Cable Assembly, Special Purpose, Electrical CX -10910/APM-239A	25	13
08 Cable Assembly, Radio Frequency CG-3470/APM-239A	26	14
09 Cable Assembly, Special Purpose, Electrical CX -11734/APM-239A	27	15
10 Cable Assembly, Special Purpose, Electrical CX -11735/APM-239A.	27	
SECTION III. Special tools list (Not applicable)		
Iv. National stock number and part number index.	28	

*This manual supersedes TM 11-6625-843-25P. 2 April 1969.

SECTION I INTRODUCTION

1. Scope.

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/APM-239A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes,

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List, Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NUN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration on which the item is shown.

(2) Item number. The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	<i>Definition</i>
------	-------------------

PA- Item procured and stocked for anticipated or known usage.

PD-Support item, excluding support equipment pro-

Code

Definition

cured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

XD-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code

Application/Explanation

O-Support item is removed, replaced, used at the organizational level.

H-Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code

Application/Explanation

H-The lowest maintenance level capable of complete repair of the support item is the general support level.

Z-Nonreparable. No repair is authorized

(3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows.