

**TECHNICAL MANUAL**

**ORGANIZATIONAL, DIRECT SUPPORT,**

**AND GENERAL SUPPORT MAINTENANCE**

**REPAIR PARTS AND SPECIAL TOOLS LISTS**

**(INCLUDING DEPOT MAINTENANCE**

**REPAIR PARTS AND SPECIAL TOOLS)**

**FOR**

**RADAR TEST SETS**

**AN/UPM-29A (NSN 6625-00-606-9179),**

**AN/UPM-29B (NSN 6625-00-771-6359),**

**AND**

**AN/UPM-29C (NSN 6625-00-832-5784)**

---

TECHNICAL MANUAL }  
 No. 11-6625-917-24P }

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, DC, 30 December 1976

**ORGANIZATIONAL, DIRECT SUPPORT, AND  
 GENERAL SUPPORT MAINTENANCE REPAIR  
 PARTS AND SPECIAL TOOLS LISTS  
 (INCLUDING DEPOT MAINTENANCE  
 REPAIR PARTS AND SPECIAL TOOLS)  
 FOR  
 RADAR TEST SETS  
 AN/UPM-29A (NSN 6625-00-606-9179),  
 AN/UPM-29B (NSN 6625-00-771-6359),  
 AND  
 AN/UPM-29C (NSN 6625-00-832-5784)**

**Current as of 20 September 1976**

**REPORTING OF ERRORS**

**You can improve this manual by recommending improvements using the DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.**

**If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.**

**In either case a reply will be furnished direct to you.**

**Table of Contents**

Section		Page	Illus Figure
	I. Introduction . . . . .	1	
	II. Repair parts list . . . . .	5	
GROUP	00 Radar Test Sets AN/UPM-29A, AN/UPM-29B, AN/UPM-29C . . . . .	5	1
	01 Cable Assembly CG-409E/U . . . . .	7	2
	02 Cable assembly . . . . .	9	3
	03 Test Sets, Radar TS-1335A/UPM-29B and TS-729B/UPM-29A . . . . .	11	4
	0301 Microwave assembly . . . . .	15	5
	030101 Thermistor mount . . . . .	19	6
	030102 Level set attenuator assembly . . . . .	21	7
	030103 Detector assembly . . . . .	23	8

★ This manual supersedes so much of TM 11-6625-917-15, 7 July 1967, as pertains to repair parts and special tools list.

Table of Contents-Continued

	Page	Figure	
GROUP			
030104	Calibrated attenuator assembly . . . . .	25	9
030105	Step attenuator assembly . . . . .	27	10
030106	Tee assembly, frequency meter . . . . .	29	11,12
0302	Chassis assembly . . . . .	33	13
030201	Resistor board assembly (Z201) . . . . .	37	14
030202	Resistor board assembly (Z306) . . . . .	39	15
030203	Resistor board assembly (Z305) . . . . .	41	16
030204	Resistor board assembly (Z304) . . . . .	43	17
030205	Resistor board assembly (Z303) . . . . .	45	18
030206	Resistor board assembly (Z302) . . . . .	47	19
030207	Resistor board assembly (Z301) . . . . .	49	20
04	Case assembly, transit . . . . .	51	21
SECTION			
	III. Special tools list (Not applicable)	52	
	IV. National stock number and part number index . . . . .		

# SECTION I

## INTRODUCTION

---

### 1. Scope

This manual lists repair parts and special tools required for performance of organizational, direct support, and general support maintenance of the AN/UPM-29A, AN/UPM-29B and AN/UPM-29C.

### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III. Special Tools List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in ascending National item identification number (NIIN, last 9 digits) sequence, of all National stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock number and part numbers are cross-referenced to each illustration figure and item number appearance.

### 3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

*a. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item number.* The number used to identify each item called out in the illustration.

*b. Source, Maintenance and Recoverability Codes (SMR).*

(1) *Source code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	Item procured and stocked for anticipated or known usage.
XD-A	support item that is not stocked. When required, item will be procured through normal supply channels.

**NOTE**

Cannibalization or salvage may be

used as a source of supply for any items source coded above except those coded XA, XD, and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O	Support item is removed, replaced, used at the organizational level.
H	Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
Z	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability Codes</i>	<i>Definition</i>
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
H	Reparable item. When uneconomically reparable, condemn and dispose at the general support level.

*c. National Stock Number.* Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

*d. Part Number.* Indicates the primary number