# TM 11-6625-928-12

#### DEPARTMENT OF THE ARMY TECHNICAL MANUAL

# OPERATOR'S AND ORGANIZATIONAL MAINTENANCE MANUAL

# TEST FACILITIES KIT MK-994/AR

(NSN 6625-00-802-7191)

This copy is a reprint which includes current pages from Changes 1 through 5. The title was changed by Change 3.

HEADQUARTERS, DEPARTMENT OF THE ARMY


APRIL 1968

HEADQUARTERS DEPARTMENT OF THE ARMY WASHINGTON, D. C., 25 April 1968

# Operator and Organizational Maintenance Manual TEST FACILITIES KIT MK-994/AR (NSN 6625-00-802-7191) AND MK-994A/AR (NSN 6625-01-189-7882)

|            |  | Paragraph        | Page       |
|------------|--|------------------|------------|
| CHAPTER 1. | INTRODUCTION   |                  |            |
| Section I. | General  |                  |            |
|            | Scope  | _ 1-1            | 1-1        |
|            | Indexes of equipment publications  | _ 1-2            | 1-1        |
|            | Forms and records  | _ 1-3            | 1-1        |
| II.        | Description and Data   |                  |            |
|            | Purpose and use  | _ 1-4            | 1-2        |
|            | Technical characteristics  | _ 1-6            | 1-2.1      |
|            | List of components   | _ 1-6            | 1-2.1      |
|            | Description of equipment   | _ 1-7            | 1-4        |
|            | Description of major assemblies  | _ 1-8            | 1-4        |
|            | Description of minor assemblies  | _ 1-9            | 1-4        |
|            | Additional equipment required  | 1-10             | 1-5        |
| CHAPTER 2. | INSTALLATION AND OPERATING INSTRUCTIONS -  |                  |            |
| Section I. | Service Upon Receipt of Equipment  |                  |            |
|            | Unpacking  | - 2-1            | 2-1        |
|            | Checking unpacked equipment Damage from improper settings  | _ 2-2            | 2-1        |
|            | Damage from improper settings  | - 2-3            | 2-1        |
|            | Controls, indicators and connecters  | _ 2-4            | 2-4        |
|            | Interconnecting box J-4247/AR controls and   |                  |            |
|            | connectors   | - 2-4.1          | 2-11       |
|            |  |                  |            |
| II.        | Operating Procedures   |                  |            |
|            | Types of operation   | _ 2-6            | 2-13       |
|            | Preliminary starting procedure   | _ 2-6            | 2-13       |
| CHAPTER 3. | MAINTENANCE  |                  |            |
| Section I. | General  |                  | 2.1        |
|            | Scope of maintenance   | _ 3-1            | 3-1        |
|            | Preventive maintenance   | _ 3-2            | 3-1        |
|            | Preventive maintenance checks and services periods   | 3-3              | 3-1        |
|            | Daily preventive maintenance checks and services chart   |                  | 3-2        |
|            | Monthly preventive maintenance checks and services chart   | _ 3-5            | 3-2        |
|            | Quarterly preventive maintenance checks and services chart   |                  | 3-2        |
|            | Cleaning   | _ 3-7            | 3-2        |
| **         | Touchup painting instructions  | _ 3-8            | 3-3        |
| II.        | Troubleshooting Procedures   | 3-9              | 3-3        |
|            | Troubleshooting  |                  | 3-3        |
|            | Troubleshooting chart  | - 3-10<br>- 3-11 | 3-3        |
|            | 1  | - 3-11           | 3-3        |
|            | Replacement of COMM CONT NO. 1 C-6533/ARC, HOMING/ADF/<br>GYRO ID-1351/A and INTERCONNECTING BOX J-4247/AR | 3-12             | 3-4        |
| CHAPTER 4. | SHIPMENT, LIMITED STORAGE, AND DEMOLITION OF   |                  | 3 4        |
| CHAPTER 4. | MATERIEL TO PREVENT ENEMY USE  |                  |            |
| Castion I  | Shipment and Limited Storage   |                  |            |
| Section I. | Disassembly of equipment   | 4.1              | 4-1        |
|            | Disassembly of equipment   | _ 4-1            | 4-1<br>4-1 |
|            | Packaging for shipment   | 4-2<br>4-3       | 4-1<br>4-1 |
|            | Demolition of Materiel to Prevent Enemy Use  | - , ,            | 4-1        |
| II.        | Authority for demolition   | 4 4              | 4 1        |
|            | Methods of destruction   |                  | 4-1        |
|            | inclines of destruction  | _ 4-6            | 4-1        |

|             |                                 | Paragraph | page              |
|-------------|---------------------------------|-----------|-------------------|
|             | Degree of damage                | 4-6       | 4-2<br>4-2<br>4-2 |
|             | Priorities for destruction      | 4-7       | 4-2               |
|             | Equipment installed in vehicles | 4-8       | 4-2               |
|             | Spare parks                     | 4-9       | 4-2               |
|             | Authorization                   | 4-10      | 4-2<br>4-2        |
|             | Reportiing                      | 4-11      | 4-2               |
|             | Priorities                      | 4-12      | 4-2               |
| APPENDIX A. | REFERENCES                      |           | A-1               |
| В           | MAINTENANCE ALLOCATION          |           | B-1               |

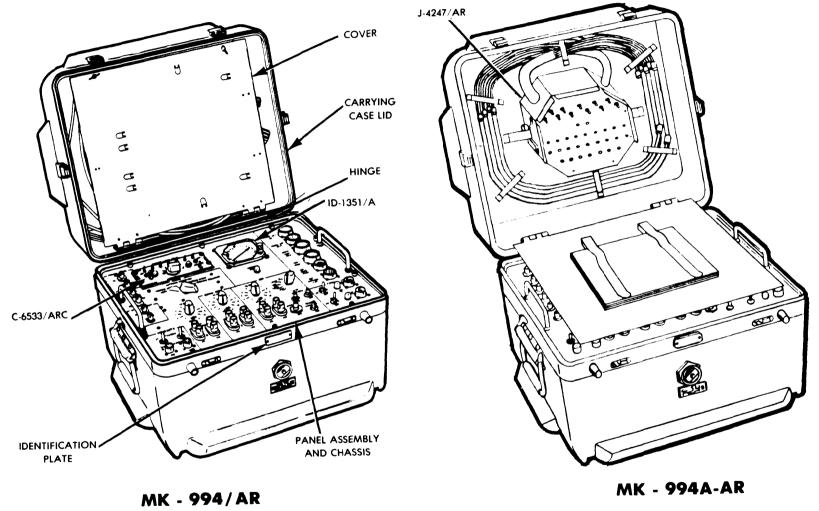

MK - 994/AR + J-4247/AR = MK - 994A/AR

CEOFV201

Figure 1-1. Test Facilities Kit

## CHAPTER 1 INTRODUCTION

#### Section I. GENERAL

#### 1-1. Scope

a. This manual describes Test Facilities Kit hlK.994/AR and MK.994A/AR (fig. 1.1) and pro. vides instructions for installation, operation, and operator and organizational maintenance. It includes instructions for operation under usual conditions, cleaning and inspection of the equip. ment, and replacement of parts available to the operator and organizational repairman.

b. The maintenance allocation chart (M.4(')) appears in appendix B.

# 1-2. Consolidated index of Army publi. cations and Blank Forms

Refer to the latest issue of DA Pam 310.1 to determine whether there are new editions, changes or additional publications pertaining to the equipment.

## 1-3. Maintenance Forms, Records, and Reports

a. Reports of Maintence and Unsatisfactory Equipment. Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 738.750 in accordance with Maintenance Management update.

b. Report of Packaging and Handling Deficientics. Fill out and forward SF 364 (Report of Discrepancy (ROD)) prescribed in AR 735.11. 2/DLAR 4140.55 /NAVMATINST 4355.73 A/AFR 400.54/MCO 4430.3F.

c. Di.screpanc> in Shipment Report (DISREP) (SF 361). Fill out and forward Discrepancy in Ship. ment Report (DISREP) (SF 361) as prescribed in AR 55.38 /NAVSUPINST 4610.33 C/AFR 75.18/MCO P4610.19D/DLAR 4500.15.

# 1-3.1 Reporting Errors and Recommending Improvements

You can help improve this manual. If you find any mistakes or if you know of a way to improve

the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) direct to Commander, US Army Communciations – Elec. tronics Command and Fort Monmouth, ATTN: AMSEL.ME.MP, Fort Monmouth, NJ 07703.5007. A reply will be furnished direct to you.

## 1-3.2. Destruction of Army Electronics Mate.

Destruction of Army electronics materiel to prevent enemy use shall be in accordance with TM 750.244.2.

#### 1-3.3. Administrative Storage

Administrative storage of equipment issued to and used by Army activities will have preventive maintenance performed in accordance with the PMCS charts before storing. When removing the equipment from administrative storage, the PMCS should be performed to assure operational readiness. Disassembly and repacking of equip. ment for shipment or limited storage are covered in paragraphs 4-1 and 4-3.

# 1-3.4. Reporting Equipment Improvement Recommendations (EIR)

If your Test Facilities Kit MK.994/AR or MK.994A/AR needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design. Put it on an SF 368 (Quality Deficiency Report). Mail it to Commander, US Army Communications. Electronics Command and Fort Monmouth, ATTN: AMSEL. ME.MP, Fort Monmouth, New Jersey 07703.5007. We'll send you a reply.