

TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND

SPECIAL TOOLS)

FOR

VOLTMETER, ELECTRONIC ME-202C/U

(NSN 6625-00-972-4046)

HEADQUARTERS, DEPARTMENT OF THE ARMY

JULY 1977

TECHNICAL MANUAL }
 No. 11-6625-2724-20P }

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, DC, 6 July 1977

**ORGANIZATIONAL MAINTENANCE
 REPAIR PARTS AND SPECIAL TOOLS LISTS
 (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
 FOR
 VOLTMETER, ELECTRONIC ME-202C/U
 (NSN 6625-00-972-4046)
 Current as of 31 January 1977**

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case, a reply will be furnished direct to you.

Table of Contents

	Page	Figure
SECTION I. Introduction -----	1	
II. Repair parts list -----	4	
GROUP 01 Voltmeter, Electronic ME-202 C/U		
Chassis assembly -----	4	1
Kelvin varley assembly -----	6	2
Range switch assembly -----	7	3
Front panel assembly -----	9	4
Rear panel assembly -----	11	5
Dc supply board A2 -----	13	6
Ac converter board A3 -----	16, 17	7①, ②
Recorder board A4 -----	20	8
Null detector board A5 -----	21	9
Ac range switch A6 -----	24	10
1st decade switch assembly A7 -----	25	11
2nd decade switch assembly A8 -----	26	12
3rd decade switch assembly A9 -----	27	13
Null switch assembly A11 -----	28	14
Ac range calibration board A12 -----	29	15
Ac capacitor board A13 -----	31	16
Cover and case assembly -----	32	17
SECTION III. Special tools list -----	33	
IV. National stock number and part number index -----		

National Stock Numbers (NSN's) that are missing from P Source Coded items have been applied for and will be added to this TM by future Change/Revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published, submit exception requisitions to: US Army Electronics Command, ATTN: DRSEL-MM, Fort Monmouth, New Jersey 07703 for the part required to support your equipment.

SECTION I

INTRODUCTION

1. Scope

This manual lists repair parts required for performance of organizational and depot maintenance of the ME-202C/U.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in ascending numerical sequence, of all National stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability Codes (SMR).

(1) *Source code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code

Definition

PA—Item procured and stocked for anticipated or known usage.

XD—A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source-coded above, except those coded XA, XD, and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance codes entered in the third position will indicate one of the following levels of maintenance:

Code

Application/Explanation

D—Support item is removed, replaced, used at the depot level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code

Application/Explanation

D—The lowest maintenance level capable of complete repair of the support item is the depot level.

Z—Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows.