

**ARMY TM 11-6625-2733-24P**  
**NAVY NAVELEX 0969-LP-170-1060**  
**AIR FORCE TO 33D7-49-84-4**

---

**ORGANIZATIONAL DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LIST  
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

**FOR**

**DUAL TIME BASE PLUG-IN UNIT TD-1159/U  
(NSN 6625-00-261-5139)**

THIS PUBLICATION IS A COURTESY QUICK COPY  
FROM THE UNITED STATES ARMY PUBLICATIONS  
DISTRIBUTION CENTER, ST. LOUIS, MO TO  
MEET YOUR NEEDS WHILE WE REPLENISH OUR  
REGULAR STOCK.

---

**DEPARTMENTS OF THE ARMY, THE NAVY, AND THE AIR FORCE**

**9 OCTOBER 1982**

TECHNICAL MANUAL  
 No. 11-6625-2733-24P  
 TECHNICAL MANUAL  
 NAVEXLEX 0969-LP-710-1060  
 TECHNICAL ORDER  
 TO 33D7-49-84-4

DEPARTMENTS OF THE ARMY,  
  
 THE NAVY, AND THE AIR FORCE  
  
 WASHINGTON, DC, 9 October 1982

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE  
 REPAIR PARTS AND SPECIAL TOOLS LIST  
 (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)  
 FOR  
 DUAL TIME BASE PLUG-IN UNIT TD-1159/U  
 (NSN 6625-00-261-5139)  
 Current as of 25 February 1982

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know, Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DRESL-ME-MQ, Fort Monmouth, NJ 07703.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward direct to prime ALC/MST.

For Navy, mail comments to the Commander, Naval Electronics Systems Command, ATTN: ELEX 45053 (O.H.), Washington, DC 20360.

In either case, a reply will be furnished direct to you.

Table of Contents

	Page	Illus
Section I. Introduction . . . . .	1	
II. Repair Parts List . . . . .	5	
<b>GROUP 00</b> Dual Time Base TD-1159/U . . . . .	5	1
01 Circuit Card Assembly A5 . . . . .	9	2
02 Circuit Card Assembly A3 . . . . .	11	3
03 Circuit Card Assembly A2 . . . . .	13	4
04 Circuit Card Assembly A7 . . . . .	15	5
05 Circuit Card Assembly A6 . . . . .	21	6
06 Circuit Card Assembly A4 . . . . .	27	7
07 Circuit Card Assembly A9 (No parts authorized)		
08 Circuit Card Assembly . . . . .	31	8
0801 Circuit Card Assembly A8 . . . . .	33	9
0802 Cam Switch Assembly (No parts authorized)		
0803 Circuit Card Assembly A1 . . . . .	37	10
<b>Section III.</b> Special Tools List (Not applicable)		
IV. National Stock Number and Part Number Index . . . . .	39	

\*This manual supersedes TM 11-6625-2733-24P/N NAVEXLEX 0967-LP-170-1060/TO 33D7-49-84-4, 12 July 1977.

## SECTION I

### INTRODUCTION

---

#### 1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the TD-1159/U. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

#### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III. Special Tools List.* Not applicable.

*c. Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

#### 3. Explanation of Columns

*a. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown,

(2) *Item number.* The number used to identify item called out in the illustration.

*b. Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	Item procured and stocked for anticipated or known usage.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
H	Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
Z	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
H	Reparable item. When uneconomically repairable, condemn and dispose at the general support level.

*c. National Stock Number.* Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

*d. Federal Supply Code for Manufacturer (FSCM).* The FSCM is a 5-digit numeric code listed in SB 708-41/42 which is used to identify the manufacturer, distributor, or Government agency, etc.