

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)**

FOR

IF PLUG-IN PL-1388/U

(HEWLETT-PACKARD

MODEL 8552B)

(NSN 6625-00-431-9339)

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL
SUPPORT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)
FOR
IF PLUG-IN PL-1388/U
(HEWLETT-PACKARD MODEL 85526)
(NSN 6625-00-431-9339)**

Current as of 27 January 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction	1	
	II. Repair Parts List	5	
GROUP	00 IF Plug-In PL-1388/U (Hewlett-Packard Model 8552B)	5	1
	01 Circuit Card Assembly, LC Filter, A1	9	2
	02 3-M Hz Amplifier Board Assembly, A2	13	3
	0201 Circuit Card Assembly, 300 KHz, A2A1	17	4
	03 50 -M Hz Converter, A3	19	5
	0301 Filter Assembly, 50 MHz, A3A1 (No Parts Authorized)		
	0302 Oscillator Assembly, 47 MHz, A3A2 (No Parts Authorized)		
	04 Circuit Card Assembly, Crystal Filter, A4	23	6
	05 Circuit Card Assembly, Power Supply, A	27	7
	06 Circuit Card Assembly, Scan Generator, A6	31	8
	07 Circuit Card Assembly, Deflection Amplifier, A7	35	9
	08 Circuit Card Assembly, Log Amplifier, A8	39	10
	09 Switch Assembly, Scan Time, A9,	43	11
	10 Switch Assembly, Reference Level, A10.	45	12
	11 Switch Assembly, Video Filter, A11	47	13
	12 Circuit Card Assembly, 47-MHz APC, A12	49	14
	13 Circuit Card Assembly, 2-MHz Oscillator, A13.	51	15

		Page	Illus Figure
SECTION	III. Special Tools List	53	
GROUP	14 Special Tools	53	16
SECTION	IV. National Stock Number and Part Number Index	54	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational and general support maintenance of the PL-1388/U (Hewlett-Packard Model 8552B). It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code

Definition

- PA- Item procured and stocked for anticipated or known usage.
 PE- Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
 XD- A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code

Application/Explanation

- O- Support item is removed, replaced, used at the organizational level.
 H- Support item is removed, replaced, used at the general support level.
 D- Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes

Code

Application/Explanation

- H- The lowest maintenance level capable of complete repair of the support item is the general support level.
 D- The lowest maintenance level capable of complete repair of the support item is the depot level.
 Z- Nonreparable. No repair is authorized.