

TECHNICAL MANUAL

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE MANUAL
INCLUDING REPAIR PARTS AND SPECIAL TOOLS LISTS**

FOR

**IMPEDANCE METER: VECTOR ZM-74/U
(HEWLETT-PACKARD MODEL 4800A WITH MODEL 4801
PLUG-IN) (NSN 6625-00-167-9861)**

HEADQUARTERS, DEPARTMENT OF THE ARMY

2 SEPTEMBER 1981

This manual contains copyright material reproduced by permission of the HEWLETT-PACKARD Company.

TECHNICAL MANUAL

No. 11-6625-2851-14&P



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC 2 September 1981

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE MANUAL
INCLUDING REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
IMPEDANCE METER: VECTOR ZM-74/U
(HEWLETT-PACKARD MODEL HP-4800A WITH MODEL 4801 PLUG-IN)
(NSN 6625-00-167-9861)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA 2028-2 located in back of this manual direct to: Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL- ME-MQ, Fort Monmouth, NJ 07703.

In either case, a reply will be furnished direct to you.

Table of Contents

SECTION		Paragraph	Page
0	INTRODUCTION		
	Scope	0-1	0-1
	Indexes of Publications	0-2	0-1
	Maintenance Forms, Records, and Reports.....	0-3	0-1
	Reporting Equipment Improvement Recommendations (EIR).....	0-4	0-1
	Administrative Storage.....	0-5	0-1
	Destruction of Army Electronics Materiel.....	0-6	0-1
	Warranty Information	0-7	0-1

This manual is an authentication of the manufacturer's commercial literature which, through usage, has been found to cover the data required to operate and maintain the equipment. Since the manual was not prepared in accordance with MIL-SPECS and AR 310-3, the format has not been structured to consider levels of maintenance, nor is it structured to the normal style of military publications.

Section

	Page
I. GENERAL INFORMATION	
1-1 Description	1-1
1-6 Accessories Furnished.....	1-1
1-8 Instrument Identification.....	1-1
II. INSTALLATION	
2-1 Initial Inspection.....	2-1
2-5 Preparation For Use.....	2-1
2-6 Power Requirements	2-1
2-8 115/230 Volt Operation.....	2-1
2-11 Power Cable	2-1
2-14 Cooling	2-1
2-16 Bench Operation.....	2-1
2-18 Rack Mounting.....	2-1
2-20 Repackaging For Reshipment.....	2-2
III. OPERATION	
3-1 Introduction.....	3-1
3-5 Operating Controls.....	3-1
3-7 Sliderule Calculator	3-1
3-9 Measurement Procedures	3-1
3-10 Measuring L and C.....	3-1
3-12 Measurements Involving DC Bias	3-4
3-14 Transformer Measurements	3-4
3-16 Measurements With AC or Noise Signals Present.....	3-4
3-18 Analog Output Measurements.....	3-4
IV. PRINCIPLES OF OPERATION	
4-1 Introduction.....	4-1
4-4 Overall Description	4-1
V. MAINTENANCE	
5-1 Introduction.....	5-1
5-3 Assembly and Component Identification	5-1
5-6 Test Equipment Required	5-1
5-8 Performance Checks	5-1
5-11 Adjustment Procedures.....	5-9
5-26 Troubleshooting Procedures	5-11
VI. REPLACEABLE PARTS	
6-1 Introduction.....	6-1
6-4 Ordering Information.....	6-1
6-6 Manual Backdating Information.....	6-1
VII. CIRCUIT DIAGRAMS	
7-1 Introduction.....	7-1
7-3 Assembly and Component Identification	7-1
7-5 Waveforms and Voltage Measurements	7-1
7-7 Talking Schematics	7-1
VIII. PART NUMBER-NATIONAL STOCK NUMBER CROSS REFERENCE INDEX.....	8-1
APPENDIX A.	
REFERENCES	A-1
B. MAINTENANCE ALLOCATION	
I. Introduction	B-1
II. Maintenance Allocation Chart.....	B-3
III. Tool and Test Equipment Requirements.....	B-5

LIST OF TABLES

Table		Page
1-1	Specifications.....	1-0
3-1	Scale Factor for Direct LC Measurements.....	3-4
5-1	Schematics and Circuit Board Illustrations.....	5-1
5-2	Recommended Test Equipment and Accessories.....	5-2
5-3	Performance Checks.....	5-3
5-4	Out-of-Circuit Transistor Resistance Measurements.....	5-12
5-5	Typical Ohmeter Ranges and Currents.....	5-13
6-1	Reference Designation Index	6-2
6-2	Reference Designation Index 4801A Plug-in	6-14
6-3	Replaceable Parts Index	6-16
7-1	Schematic Notes and Symbols.....	7-0

LIST OF ILLUSTRATIONS

Figure		Page
1-1	Model 4800A Vector Impedance Meter.....	1-1
1-2	00610A Terminal Shield.....	1-2
1-3	13525A Calibration Resistor	1-2
2-1	Rack Mounting Installation Diagram	2-2
3-1	4800A Front Panel Operating Controls	3-2
3-2	4800A Rear Panel Operating Controls.....	3-3
4-1	4800A Block Diagram	4-0
5-1	4800A Top View.....	5-0
5-2	Performance Check Test Card	5-7/5-8
5-3	Power Supply Test Points	5-9
5-4	Dial Cord Replacement	5-14/5-15
5-5	Troubleshooting Tree Number 1	5-16
5-6	Troubleshooting Tree Number 2	5-18
5-7	Troubleshooting Tree Number 3	5-20
5-8	Troubleshooting Tree Number 4	5-22
6-1	4800A Vector Impedance Meter	6-19
6-2	A14 Schematic and Component Locator for Serials Prefixed 805 and Below	6-21
6-3	A17 Schematic and Component Locator for Serials Prefixed 805 and Below	6-22
7-1	Functional Block Diagram	7-3
7-2	Oscillator AGC Amplifier	7-5
7-3	Z Range Switching and 4801A Direct Measurement Plug-in	7-7
7-4	Voltage Channel Amplifiers	7-9
7-5	Current Channel Amplifiers	7-11
7-6	Detector and DC Amplifier	7-13
7-7	Phase Measurement Circuits.....	7-15
7-8	Power Supplies	7-17
7-9	Analog Outputs	7-19

Section 0. INTRODUCTION

0-1. Scope

This manual contains the general description, installation, operation, principles of operation, and maintenance of the test instrument, which is known as the Impedance Meter: Vector ZM-74/U.

0-2. Indexes of Publications

Refer to the latest issue of DA PAM 3104 to determine whether there are new editions, changes, additional publications or modification work orders pertaining to the equipment.

0-3. Maintenance Forms, Records and Reports

a. *Reports of Maintenance and Unsatisfactory Equipment.* Department of the Army forms and procedures used for equipment maintenance will be those prescribed by TM 38-750, The Army Maintenance Management System.

b. *Report of Item and Packaging Discrepancies.*

Fill out and forward SF 364 (Report of Discrepancy (ROD) as prescribed in AR 735-11-2/DLAR 4140.55/NAV-MATINST 4355.73/AFR 400.54/MC0 4430.E.

c. *Discrepancy in Shipment Report (DISREP) (SF 361).* Fill out and forward Discrepancy in Shipment Report (DISREP) (SF 361) as prescribed in AR 55-38/NAVSUPINST 4610.33B/AFR 75-18/MCO P4610.19C and DLAR 4500.15.

0-4. Reporting Equipment Improvement Recommendations (EIR)

If your impedance Meter: Vector ZM-74t needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design. Tell us why a procedure is hard to perform. Put it on an SF 368 (Quality Deficiency Report). Mail it to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703. We'll send you a reply.

0-6. Destruction of Army Electronics Materiel

Destruction of Army electronics materiel to prevent enemy use shall be in accordance with TM 750-244-2.

0-5. Administrative Storage

For administrative storage of your Impedance Meter: Vector ZM-74/U Wrap set in heavy kraft paper and tape securely with packaging tape.

0-7. Warranty Information

The Impedance Meter: Vector ZM-74/U (HEWLETT-PACKARD MODEL, 4800A) by HEWLETT-PACKARD for one year from the date of shipment. Warranty period starts on the date found in block 23 of DA Form 2408-9 in the logbook. Report all defects in material or workmanship to your supervisor, who will take appropriate action through your organizational maintenance shop.