

TECHNICAL MANUAL
OPERATOR'S, ORGANIZATIONAL,
DIRECT SUPPORT AND GENERAL
SUPPORT MAINTENANCE MANUAL
FOR
PULSE GENERATOR AN/USM-359A

(NSN 6625-01-077-4620)

(TEKTRONIX MODEL PG 508 WITH TM 503)

HEADQUARTERS, DEPARTMENT OF THE ARMY

27 MARCH 1981

This manual contains copyright material reproduced by permission of Tektronix, Inc.

TECHNICAL MANUAL

No. 11-6625-2980-14

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 27 March 1981

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE MANUAL
FOR
GENERATOR, PULSE AN/USM-359A
(TEKTRONIX MODEL PG 508 WITH TM 503)
(NSN 6625-01-077-4620)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, New Jersey 07703.

This manual is an authentication of the manufacturer's commercial literature which, through usage, has been found to cover the data required to operate and maintain this equipment. Since the manual was not prepared in accordance with military specifications, the format has not been structured to consider levels of maintenance.

TABLE OF CONTENTS

	Page		Page
Section 0	0-1	INTRODUCTION	
SECTION 1		OPERATING INSTRUCTIONS	
	1-1	Instrument Description	
	1-1	Installation and Removal	
	1-2	BASIC OPERATION	
	1-2	Period and Duration Selection	
	1-2	Duty Factors	
	1-2	Delayed and Paired Pulse Selection	
	1-3	Transition Time Selection	
	1-3	Transition Time Selection	
	1-3	External Triggering and Gating	
	1-4	Trigger Output	
	1-4	Manual Trigger	
	1-4	Control Error Light	
	1-4	Control Error Light	
	1-4	OPERATING CONSIDERATIONS	
	1-4	Output Termination's and Connections	
	1-4	Connections	
	1-5	Rise Time Measurements in Linear Systems	
	1-5	Counted Burst Using the DD 501	
	1-5	External Voltage Control	
	1-5	Digital Delay Unit	
	1-8	Definitions of Pulse Characteristics	
	1-9	SPECIFICATIONS	
	1-11	Environmental Requirements	
	1-12	Using the Rear Interface Connectors	
SECTION 2		THEORY OF OPERATION	
	2-1	Introduction	
	2-1	Input Circuitry	
	2-1	~ TRIG'D/GATED Light Circuitry	
	2-1	Triggered Mode	
	2-2	Period Generator	
	2-2	Delay Generator	
	2-2	Duration Generator	
	2-3	Duration and Delay Control Error Light Circuitry	
	2-3	Variable Transition Time Circuitry	
	2-3	Transition Time Control Error Light Circuitry	
	2-3	Light Circuitry	
	2-5	Level Control Multiplier	
	2-6	Output Amplifier	
	2-6	Power Supply	
SECTION 3		SERVICE INFORMATION	
	3-1	Symbols and Reference Designators	
	3-2	General Maintenance and Adjustments	
	3-2	Maintenance	
	3-2	Circuit Board Removal	
	3-2	Circuit Board Removal	
	3-2	Test Equipment	
	3-2	General	
SECTION 4		CONTROLS AND CONNECTORS AND SCHEMATIC DIAGRAMS	
	4-1		
SECTION 5		REPLACEABLE MECHANICAL PARTS LIST	
	5-1		
		APPENDIX A TM 503 MAINFRAME	
		Section I. INSTALLATION PROCEDURE	A-1
		Section II. TM 503 OPERATING INSTRUCTIONS	A-3
		Introduction	A-3
		Powering Up	A-3
		Building a System	A-5
		Specifications	A-6
		Section III. TM 503 SYSTEM MAINTENANCE	A-7
		General	A-7
		Troubleshooting Aids	A-8
		Troubleshooting Techniques	A-8
		Parts Replacement	A-10
		Diagrams and Circuit Board Illustrations	A-14
		Power Module Interface Pin Assignments	A-15
		Detailed Block Diagram	A-16
		Parts Location Grid	A-17
		Parts Location Grid	A-17
		Replaceable Mechanical Parts	A-19
		APPENDIX B REFERENCES	
		APPENDIX C COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LIST	
		Section I. INTRODUCTION	C-1
		Scope	C-1
		General	C-1
		Explanation of Columns	C-1
		Section II. COMPONENTS OF END ITEM	C-2
		Section III. BASIC ISSUE ITEMS	C-3
		APPENDIX D ADDITIONAL AUTHORIZATION LIST (Not Applicable)	
		APPENDIX E MAINTENANCE ALLOCATION	
		Section I. INTRODUCTION	E-1
		General	E-1
		Maintenance Function	E-1
		Column Entries	E-2
		Tool and Test Equipment Requirement	E-2
		Remarks	E-2
		Section II. MAINTENANCE ALLOCATION CHART OR PULSE GENERATOR AN/USM-359A	E-3
		Section III. TOOL AND TEST EQUIPMENT REQUIREMENTS FOR PULSE GENERATOR AN/USM-359A	E-5
		APPENDIX F EXPENDABLE SUPPLIES AND MATERIALS LIST	
		Section I. INTRODUCTION	F-1
		Scope	F-1
		Explanation of Columns	F-1
		Section II. EXPENDABLE SUPPLIES AND MATERIALS	F-2

LIST OF ILLUSTRATIONS

Fig. No.	Page No.	Page No.
1-0	Pulse Generator AN/USM-359A.	vi
1-1	PG 508 installation and removal.	1-1
1-2	Locations of period, delay and duration custom timing capacitors and TRIG/GATE input impedance switch.	1-2
1-3	Location for transition custom timing capacitor.	1-3
1-4	Equivalent circuit of external input for output voltage control.	1-5
1-5	Location of trigger jumpers in DD 501 for selecting trigger or delay interval output	1-6
1-6	PG 508-DD 502 interconnections for counted burst operation.	1-6
1-7	Typical propagation delays using PG 508 with DD 501 in counted burst mode at 50 MHz repetition rate.	1-7
1-8	Pulse characteristics.	1-8
1-9	Locations for user installed rear interface connections.	1-12
2-1	Simplified schematic for control error indicator logic with control settings causing illumination.	2-4
FO-1	Controls and connectors.	4-1
FO-2	Block diagram.	4-3
FO-3	Input circuit schematic diagram.	4-5
FO-4	Period generator schematic diagram.	4-7
FO-5	Delay generator schematic diagram.	4-9
FO-6	Duration generator and control error circuit schematic diagram.	4-11
FO-7	Transition time generator schematic diagram.	4-13
FO-8	Level control multiplier schematic diagram.	4-15
FO-9	Output amplifier schematic diagram.	4-17
FO-10	Tracking voltage supply schematic diagram.	4-19
FO-11	PG 508 power supply schematic diagram.	4-21
FO-12	TM 503 power supply schematic diagram.	4-23
5-1	A1 board component locations.	5-2
FO-13	A2 board component locations.	5-3
FO-14	A3 board component locations.	5-5
FO-15	A4 board component locations.	5-7
FO-16	PG 508 exploded view.	5-9

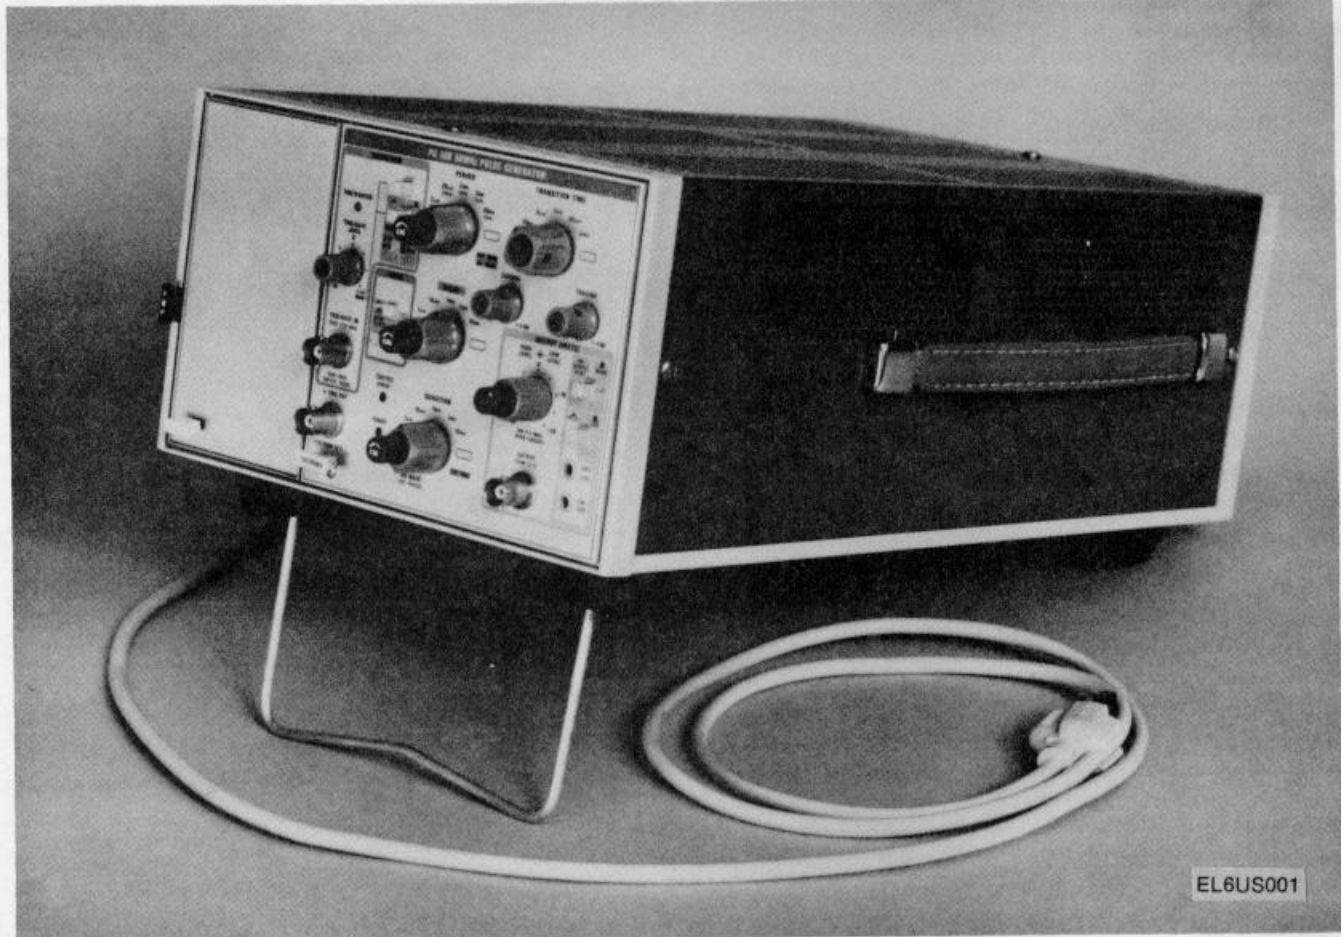


Figure 1-0 . Pulse generator AN/USM-359A

SECTION O

INTRODUCTION

Scope

This manual describes Pulse Generator AN/USM-359A and provides instructions for operation and maintenance. Throughout this manual, the SG-1178/USM-359A is referred to as Tektronix Model PG 508 and PP-7578/USM 359A is referred to as TM 503.

Indexes of Publications

a. *DA Pam 310-4.* Refer to the latest issue of DA Pam 310-4 to determine whether there are New editions, changes, or additional publications pertaining to the equipment.

b. *DA Pam 310-7.* Refer to DA Pam 310-7 to determine whether there are modification work orders (MWO's) pertaining to the equipment.

Maintenance Forms, Records, and Reports

Reports of Maintenance and Unsatisfactory Equipment. Department of the Army forms and procedures used for equipment maintenance will be those prescribed by TM 38-750, The Army Maintenance Management system (Army).

b. *Report of Item and Packaging Discrepancies.* Fill out and forward SF 364 [Report of Discrepancy (ROD)] as prescribed in AR 735-11-2/DLAR 4140.55/NAVMATINS4355.73/AFR 400-54/MCO 4430.3E.

c. *Discrepancy in Shipment Report (DISREP) (SF 361).* Fill out and forward Discrepancy in Shipment Report (DISREP) (SF 361) as prescribed in AR 55-38/NA.VSUPI NST 4610.33B/AFR 75-18/MCO P4610.19C and DLAR 4500.15.

Reporting Equipment Improvement Recommendations (EIR)

If your AN/USM-359A needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design. Tell us why a procedure is hard to perform. Put it on an SF 368 (Quality Deficiency Report). Mail it to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MO, Fort Monmouth, New Jersey 07703. We'll send you a reply.

Administrative Storage

To prepare the equipment for administrative storage, ascertain its operability and reliability. In addition, use the proper packing materials.

Destruction of Army Electronics Materiel

Destruction of Army electronics materiel to prevent enemy use shall be in accordance with TM 750-244-2.