

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR**

CALIBRATOR, DIRECT CURRENT 0-1805/USM

(NSN 6625-01-134-6629)

HEADQUARTERS, DEPARTMENT OF THE ARMY

23 NOVEMBER 1983

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT
 MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
 (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
 FOR**

CALIBRATOR, DIRECT CURRENT 0-1805/USM

(NSN 6225-01-134-6629)

Current as of 2 August 1983

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DRSEL-ME-MP, Fort Monmouth, NJ 07703.

In either case, a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction	1	
	II. Repair Parts List.....	5	
GROUP	00 Calibrator, Direct Current 0-1805/USM.....	5	1
	01 Front Mother Board Assembly	9	2
	0101 Decade Switch Assembly A3A1	13	3
	0102 Switch Board Assembly A3A2.....	15	4
	0103 I/V Limit Vermier Assembly A3A3.....	17	5
	02 Main Mother Board A4	19	6
	0201 +10V Ref Supply A4A1.....	21	7
	0202 Chopper Amplifier A4A2.....	23	8
	0203 Differential Assembly A4A3.....	27	9
	0204 Series Passive Drive Assembly A4A4.....	31	10
	0205 Series Passive Element A4A56	35	11
	0206 High Voltage Power Supply A4A6.....	39	12
	0207 Current Limiter Assembly A4A7.....	41	13
	0208 +25, -15 power Supply A4A8	45	14
	0209 Relay Driver Assembly A4A9.....	49	15
	0210 Ladder Driver 1 A4A10	51	16
	0211 Ladder Driver 2 A4A11	53	17
	0212 Ladder Driver 3 A4A12	55	18
	0213 Ladder Driver 4 A4A13	57	19
	0214 Ladder Driver 5 A4A14	59	20

Table of Contents-cont.

SECTION GROUP		Page	Illus Figure
	II.		
	02 0215 Ladder Driver 6 A4A15	59	20
	0216 Ladder Driver 7 A4A16	59	20
	0217 Range Shunt Assembly A4A17	61	21
	03 Rear Mother Board A5	63	22
	0301 -25, +15 Volt Power Supply A5A1	65	23
	0302 Preregulator Assembly A5A2	69	24
	04 Relay Board Assembly A6	73	25
SECTION	III. Special Tools List (Not applicable)		
	IV. National Stock Number and Part Number Index	74	

**SECTION I
INTRODUCTION**

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the 0-1805/USM. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	Item procured and stocked for anticipated or known usage.
XB	Item is not procured or stocked. If not available through salvage, requisition.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 750-1.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
H	Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
Z	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
H	Reparable item. When uneconomically reparable, condemn and dispose at the general support level.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB